

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Spilay](#) /
- › [Spilay Gibon Sushi DIY Dollhouse Miniature Kit M2011 Instruction Manual](#)

Spilay M2011

Spilay Gibon Sushi DIY Dollhouse Miniature Kit

MODEL: M2011

Brand: Spilay

1. Introduction

This manual provides detailed instructions for assembling and operating your Spilay Gibon Sushi DIY Dollhouse Miniature Kit. This 1:24 scale model is designed for individuals aged 14 years and up. The finished size is approximately 22 cm x 17.5 cm x 19.5 cm and weighs about 1.6 kg.

The kit includes various eco-friendly materials such as wood, cloth, and paper, all free from burrs and of high quality. Careful assembly is required to construct this detailed miniature Japanese-style sushi restaurant.



Image: The fully assembled Gibon Sushi miniature dollhouse.

2. Safety Information

WARNING: CHOKING HAZARD - Small Parts.

This product contains small parts and is not suitable for children under 3 years of age. Adult supervision is recommended during assembly, especially for users under 14 years old. Keep all components out of reach of small children and pets.

3. Package Contents

The Spilay Gibon Sushi DIY Dollhouse Miniature Kit includes the following items:

- All furniture and accessories as depicted in the product images.
- English instruction manual.
- Music box mechanism.
- Dust cover for protection.

Note: Silicone liquid glue and 2 AAA batteries are **not included** and must be prepared separately, as they are prohibited for air transportation.

Product Information

Brand: Spilay

Name: Gibbon Sushi

Finish time: 3-4 DAY

Material: wood . paper. plastic

Finish size: 22*17.5*19.5 cm Weight: 1.6 KG / 3.53 LB

Included: All furniture . Dust cover . Music box .

Difficulty : ★★★★★



Dust cover + Music box

Suitable for 14+ years old

Festival & Birthday Gift

Collection

Crafts

Home Decoration

19.5 CM / 7.67"



17.5 CM / 6.89"

22 CM / 8.66"

NOTE:

- * The dollhouse need to assembled by yourself
- * Not included glue and batteries
- * Small parts, Not for children under 3 yrs



Image: Overview of product dimensions and included components.

4. Setup and Assembly Instructions

The dollhouse kit requires self-assembly. All components are provided in parts. Follow the English manual step-by-step for detailed guidance. Patience and attention to detail are crucial for successful assembly.

4.1 Preparation

- Ensure you have a clean, well-lit workspace.
- Gather necessary tools: silicone liquid glue, 2 AAA batteries, tweezers, and a sharp utility knife (not included).
- Unpack all components carefully and verify against the parts list in the manual.

4.2 Assembly Process

1. Follow the numbered steps in the English manual. Each step will guide you through assembling specific sections or items.
2. Use glue sparingly and allow sufficient drying time as instructed.
3. Pay close attention to diagrams and images provided in the manual for accurate placement of small parts.

4. Wiring for lighting is typically straightforward; refer to the manual for specific connections.

The assembly process can take several hours or days, depending on your pace. Dedicate consistent time to the project for best results.



Image: Detailed views of miniature elements requiring assembly.

5. Operating Instructions

5.1 Lighting System

- After completing the electrical wiring as per the manual, insert 2 AAA batteries into the designated battery box.
- Activate the lighting system using the switch on the battery box.

5.2 Music Box

- The music box is integrated into the dollhouse design.
- To play music, gently wind the mechanism as indicated in the manual.

Your browser does not support the video tag.

Video: Demonstration of the Spilay Gibon Sushi dollhouse with its integrated music box and illuminated features.

LATE-NIGHT DINER

NIGHT DISPLAY



Sushi



Liquor



Sakura



Tatami

Image: The Gibon Sushi dollhouse with its lights activated, displaying its appearance at night.

6. Maintenance

- Use the provided dust cover to protect the finished dollhouse from dust and environmental elements.
- Clean the dollhouse gently with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- If the lighting dims, replace the AAA batteries.



Image: The dollhouse with its protective dust cover installed.

7. Troubleshooting

7.1 Missing Parts

The dollhouse miniature kits are carefully checked before delivery to ensure all accessories are complete. If you find any missing parts during assembly, please contact customer support immediately for assistance.

7.2 Assembly Difficulties

If you encounter difficulties following the instructions or assembling specific components, review the manual's diagrams and text carefully. For persistent issues, contact customer support.

7.3 Lighting Not Working

- Check if the AAA batteries are correctly inserted and have sufficient charge.
- Verify all electrical connections are secure as per the wiring diagram in the manual.
- Ensure the power switch is in the 'ON' position.

8. Specifications

Product Dimensions (L x W x H)	22 cm x 17.5 cm x 19.5 cm (8.66 x 6.89 x 7.67 inches)
Item Weight	1.6 kg (3.53 pounds)
Model Number	M2011
Recommended Age	14 years and up
Materials	Wood, Cloth, Paper, etc.
Batteries Required	2 AAA batteries (not included)

9. Warranty Information

Specific warranty details for the Spilay Gibon Sushi DIY Dollhouse Miniature Kit are not provided in the product information. Please refer to the retailer's return policy or contact Spilay customer support for warranty inquiries.

10. Support

For any questions regarding assembly, missing parts, or general product inquiries, please contact Spilay customer support. We are committed to resolving any issues promptly.

Contact information can typically be found on the product packaging or through the retailer where the item was purchased.