

Lukasa USqqcd003

Lukasa USqqcd003 Portable Bluetooth CD Player Instruction Manual

Model: USqqcd003 | Brand: Lukasa

1. INTRODUCTION

Thank you for purchasing the Lukasa USqqcd003 Portable Bluetooth CD Player. This device is designed to provide versatile audio playback options, including CD, Bluetooth, USB, and AUX input, with a built-in speaker and anti-shock protection. Please read this manual carefully before use to ensure proper operation and to maximize your listening experience.

2. WHAT'S IN THE BOX

- Lukasa Portable Bluetooth CD Player
- Headphones
- USB Cable (for charging)
- User Manual

3. PRODUCT FEATURES

- **Bluetooth Connectivity:** Easily pair with external Bluetooth speakers or headphones for wireless audio.
- **Rechargeable Battery:** Built-in 2000mAh rechargeable battery for portable use.
- **Wide Compatibility:** Supports CD, CD-R, CD-RW, MP3, and WMA formats.
- **Anti-Shock Protection:** Ensures smooth playback even during movement.
- **Built-in Speaker:** Integrated stereo speaker for direct audio output.
- **USB Playback:** Play audio files directly from a USB disk.
- **AUX Input/Output:** Connect to external audio devices or car AUX systems.

4. CONTROLS AND PORTS OVERVIEW

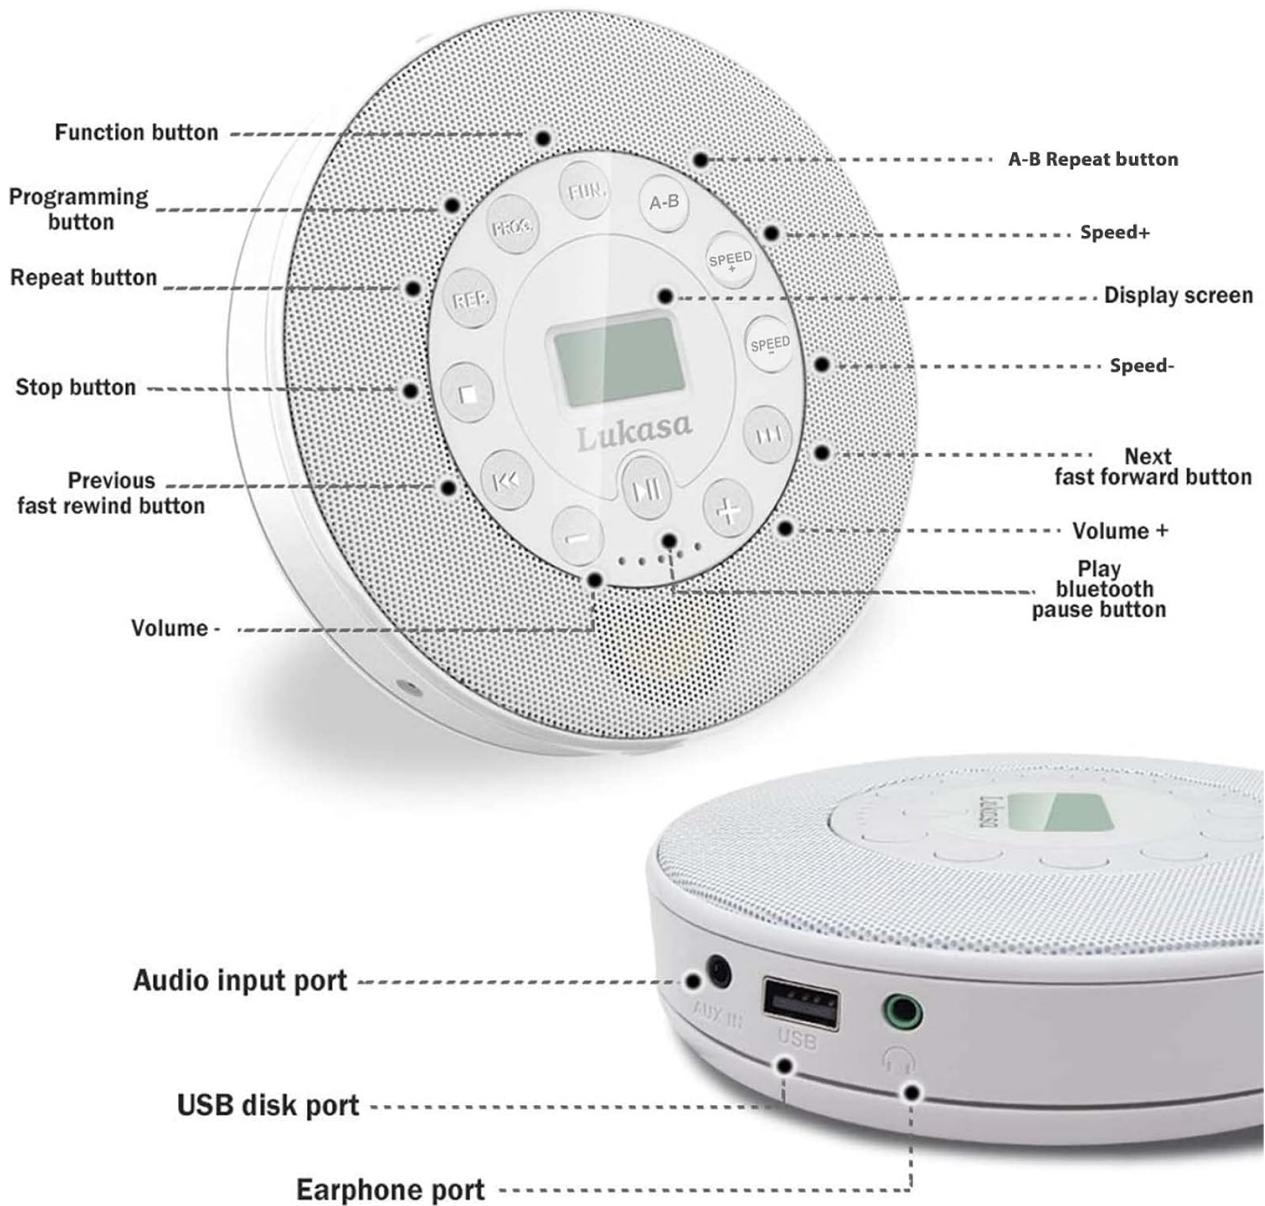


Image: Detailed diagram showing the location and function of all buttons and ports on the Lukasa Portable Bluetooth CD Player.

Top Panel Controls:

- **Play/Pause Button:** Starts or pauses playback.
- **Stop Button:** Stops playback.
- **Previous/Rewind Button:** Skips to the previous track or rewinds the current track.
- **Next/Fast Forward Button:** Skips to the next track or fast forwards the current track.
- **Volume +/- Buttons:** Adjusts the audio volume.
- **REP (Repeat) Button:** Cycles through repeat modes (e.g., repeat one, repeat all).
- **PROG (Program) Button:** Programs the playback order of tracks.
- **FUN (Function) Button:** Switches between different playback modes (CD, Bluetooth, USB, AUX).
- **ASP (Anti-Shock Protection) Button:** Activates/deactivates anti-shock feature.
- **A-B Repeat Button:** Repeats a specific section of a track.
- **Speed +/- Buttons:** Adjusts playback speed.
- **Display Screen:** Shows track number, time, and mode.

Side Ports:

- **Audio Input Port (AUX IN):** Connects external audio sources.
- **USB Disk Port:** For USB flash drive playback.
- **Earphone Port (3.5mm Jack):** Connects headphones.
- **Charging Port (USB-C):** For charging the device.

5. SETUP

5.1 Initial Charging

Before first use, fully charge the CD player. Connect the provided USB cable to the charging port on the device and the other end to a USB power adapter (not included) or a computer USB port. The charging indicator will show the charging status.



Image: The Lukasa CD Player being charged via a USB cable. An adaptor is not included.

5.2 Powering On/Off

To power on the device, slide the power switch to the 'ON' position. To power off, slide the switch to 'OFF'.

6. OPERATING INSTRUCTIONS

6.1 CD Playback

1. Open the CD compartment by gently pressing the 'OPEN' button or sliding the latch.
2. Place a CD (CD, CD-R, CD-RW, MP3, WMA format) onto the spindle, ensuring it is seated correctly.
3. Close the CD compartment firmly until it clicks.
4. Press the **Play/Pause** button to start playback.
5. Use the **Previous/Rewind** and **Next/Fast Forward** buttons to navigate tracks.
6. Adjust volume with the **Volume +/-** buttons.
7. Press the **REP** button to cycle through repeat modes (e.g., repeat one track, repeat all tracks).
8. Press the **PROG** button to program a custom playback order.
9. Press the **Stop** button to end playback.

Wide Compatibility

CD | CD-R | CD-RW | MP3 | WMA



Play in order



Repeat a track



A-B repeat



Random play



Speed up/down play



Image: The Lukasa CD Player with its lid open, revealing a CD. Icons around the player indicate various playback functions like play in order, repeat, A-B repeat, random play, and speed adjustment.

6.2 Bluetooth Playback

1. Ensure the CD player is powered on.
2. Press the **FUN** button until the Bluetooth mode is selected (indicated on the display).

3. The device will enter pairing mode, and the Bluetooth indicator will flash.
4. On your external Bluetooth speaker or headphones, enable Bluetooth and search for available devices.
5. Select "Lukasa CD Player" from the list of devices to pair.
6. Once paired, the Bluetooth indicator will stop flashing. You can now play audio from the CD player to your connected Bluetooth device.

Bluetooth Connection

Easily pair with speakers/headphones



Image: The Lukasa CD Player demonstrating its Bluetooth connection capability, showing it wirelessly paired with both a larger Bluetooth speaker and a pair of earbuds.

6.3 USB Playback

1. Insert a USB flash drive containing MP3 or WMA audio files into the USB disk port.
2. Press the **FUN** button until the USB mode is selected.
3. The device will automatically detect and begin playing audio files from the USB drive.
4. Use the playback controls (**Play/Pause**, **Previous/Rewind**, **Next/Fast Forward**, **Volume +/-**) as you would for CD playback.

6.4 AUX Input/Output

1. **AUX Input:** Connect an external audio source (e.g., smartphone, tablet) to the Audio Input Port using a 3.5mm audio cable. Press the **FUN** button until AUX mode is selected. Audio from the external device will

play through the CD player's speaker.

2. **AUX Output (to car):** Connect the Earphone Port (3.5mm output) of the CD player to your car's AUX input using a 3.5mm audio cable. This allows the CD player's audio to be played through your car's sound system.



Image: The Lukasa CD Player connected to a car's AUX input using a 3.5mm audio cable, enabling audio playback through the car's speakers.

7. CHARGING THE DEVICE

When the battery is low, the battery indicator on the display will show a low battery icon. Connect the provided USB cable to the charging port and a USB power source (5V/1A recommended). The charging indicator lights will illuminate during charging and turn off when fully charged. A full charge typically takes 3-4 hours.

8. MAINTENANCE

- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the CD compartment clean and free of dust. Use a CD lens cleaner if necessary.
- Avoid exposing the device to extreme temperatures, direct sunlight, or high humidity.

- Do not disassemble the device. This will void the warranty.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Battery is depleted. Power switch is off.	Charge the device. Ensure power switch is in 'ON' position.
CD does not play or skips.	CD is dirty or scratched. CD is inserted incorrectly. Anti-shock protection is off.	Clean the CD. Reinsert the CD correctly. Ensure ASP is enabled.
No sound from speaker/headphones.	Volume is too low. Headphones not connected properly. Incorrect mode selected.	Increase volume. Reconnect headphones. Press FUN button to select correct mode.
Bluetooth device cannot pair.	CD player not in Bluetooth mode. Device too far.	Ensure CD player is in Bluetooth mode. Move devices closer. Try re-pairing.
USB playback not working.	USB drive not inserted correctly. Unsupported file format.	Reinsert USB drive. Ensure files are MP3/WMA.

10. SPECIFICATIONS

- **Brand:** Lukasa
- **Model Number:** USqqcd003
- **Connectivity Technology:** Auxiliary, Bluetooth
- **Special Feature:** Portable, Built-in Speaker, Anti-Shock Protection
- **Number Of Discs:** 1
- **Supported Audio Format:** MP3, WMA (from CD-R/RW)
- **Connector Type:** 3.5mm Jack, USB
- **Number of Channels:** 2 (Stereo)
- **Media Format Type:** CD-R, CD-RW
- **Compatible Devices:** Speakers, Headphones, Car AUX systems
- **Headphones Jack:** 3.5mm Jack
- **MP3 Player Functionality:** Yes
- **Battery:** 2000mAh Rechargeable

11. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Lukasa website. Keep your purchase receipt as proof of purchase for any warranty claims.

