

[Manuals.plus](#) /

› [Wahl](#) /

› WAHL 3615-1027 Travel Shaver User Manual

Wahl 3615-1027

WAHL 3615-1027 Travel Shaver User Manual

Model: 3615-1027 | Brand: Wahl

INTRODUCTION

Thank you for choosing the WAHL 3615-1027 Travel Shaver. This wet and dry cordless and rechargeable shaver is designed for convenient and effective shaving. This manual provides important information on the safe operation, maintenance, and care of your new shaver.

SAFETY INFORMATION

WARNING: Please read all safety instructions carefully before use.

- Users should handle the blades with care to avoid cuts.
- Clean the device regularly to prevent bacterial growth.
- Avoid using the shaver near water or while charging.
- Keep out of reach of children.
- Do not disassemble the unit beyond what is instructed in this manual.

PACKAGE CONTENTS

Your WAHL 3615-1027 Travel Shaver package includes the following items:

- Travel Shaver unit
- Protective cap
- Replacement cutting blade
- Replacement shaving foil
- Travel pouch
- Charging cord
- Storage box
- Cleaning brush



Image: All components included in the WAHL Travel Shaver package, including the shaver, protective cap, replacement blade and foil, travel pouch, charging cord, storage box, and cleaning brush.

SETUP

Initial Charging

Before first use, fully charge your WAHL Travel Shaver. The shaver features an LED-Charging Indicator System to show charging status.

1. Connect the charging cord to the shaver and plug it into a suitable power outlet.
2. Allow the shaver to charge until the LED indicator shows a full charge.
3. A full charge provides up to 45 minutes of run time.



Image: The WAHL Travel Shaver connected to its charging cord, ready for initial charging.

OPERATING INSTRUCTIONS

Follow these steps for optimal shaving performance:

1. Ensure the device is charged.
2. Clean the device before each use, especially the shaving foil and blades.
3. Turn on the device using the power switch.
4. If performing a wet shave, apply shaving cream or gel to the desired area.
5. Move the shaver over the skin in a gentle, circular motion, or against the direction of hair growth for a closer shave.

TRAVEL SHAVER

CORDLESS &
RECHARGEABLE



45 MINUTES
RUN TIME +



8

PIECES

WAHL[®]
HOME PRODUCTS

The Brand Used By Professionals[®] Since 1919

Image: A man demonstrating the use of the WAHL Travel Shaver on his face, showing the proper technique for shaving.

MAINTENANCE

Cleaning

Regular cleaning ensures optimal performance and hygiene:

- After each use, turn off the shaver and remove the shaving foil.
- Use the provided cleaning brush to remove hair clippings from the foil and the cutting blade.
- For a deeper clean, the shaver head can be rinsed under running water as it is designed for wet & dry use. Ensure the shaver is disconnected from power before rinsing.
- Allow all parts to air dry completely before reassembling or storing.

Blade and Foil Replacement

For continued optimal performance, replace the cutting blade and shaving foil periodically, or when you notice a decrease in shaving efficiency. Replacement parts are included in your package.



Image: The WAHL Travel Shaver alongside its storage box, illustrating the compact design for easy storage and maintenance.

TROUBLESHOOTING

If you encounter issues with your WAHL Travel Shaver, consider the following common solutions:

- **Shaver not turning on:** Ensure the shaver is fully charged. Check the charging cord and power outlet.
- **Poor shaving performance:** Clean the shaving foil and cutting blade thoroughly. The foil or blade may need replacement if they are dull or damaged.
- **Excessive noise:** Ensure the shaving foil is properly seated and not damaged. Clean any debris that might be obstructing the moving parts.

If problems persist, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Name	3615-1027
Brand	Wahl
Operating Function	Wet & Dry, Cordless and Rechargeable
Run Time	Up to 45 minutes
Charging Indicator	LED-Charging Indicator System
Power Source	Corded Electric (for charging)
Product Dimensions	8 x 5 x 9 cm
Weight	800 g (0.8 Kilograms)
Recommended Use	Face

WARRANTY AND SUPPORT

Wahl products are manufactured to the highest standards. For warranty information or technical support, please refer to the warranty card included with your product or visit the official Wahl website. Keep your purchase receipt as proof of purchase.

For further assistance, you may contact Wahl customer service through their official channels.

© 2024 Wahl. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Can I recharge the Wahl 3615-1027 Travel Shaver using 115 volts AC?

The documentation for the Wahl 3615-1027 Travel Shaver does not explicitly state the specific voltage range (e.g., 110V-240V) in the provided specifications. However, it is a standard rechargeable travel shaver designed to be plugged...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B089GN9JCW>

More documents and user manuals: <https://manuals.plus/>