

NKF BN59-00678A

NKF BN59-00678A Remote Control User Manual

For Samsung Smart TV Models PN42A400C2D, LN40A330, and others

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your NKF BN59-00678A replacement remote control. This remote is designed to function as a direct replacement for the original Samsung BN59-00678A remote, offering full functionality without the need for complex programming.

PRODUCT OVERVIEW

The NKF BN59-00678A remote control is a standard infrared remote designed for ease of use. It features a comprehensive set of buttons for controlling various functions of compatible Samsung televisions.



Image: Front view of the NKF BN59-00678A remote control, displaying all buttons including power, number keys, volume, channel, navigation, and special function buttons.

Compatible Models

This remote control is compatible with the following Samsung TV models, among others:

- PN42A400C2D, PN50A400C2D
- LN40A330, LN32A330, LN26A330, LN19A330
- HL-67A510, HL61A510
- 2333HD, LN19A450, LN22A450
- LN19A650, LN22A650

SETUP

Setting up your NKF BN59-00678A remote control is a straightforward process that requires no programming or pairing.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.



Image: Back view of the remote control, highlighting the battery compartment area. Batteries are not included with the remote.

Initial Use

Once batteries are installed, the remote control is ready for immediate use. Point the remote directly at your Samsung TV and press the desired function button.

OPERATING INSTRUCTIONS

The remote control features standard buttons for navigating and controlling your television. Familiarize yourself with the layout for optimal use.



Image: Close-up view of the central navigation and function buttons on the remote control, including directional pads, OK, Menu, Exit, and other common controls.

- **POWER:** Turns the TV on or off.
- **TV / SOURCE:** Selects the input source (e.g., HDMI, AV, Component).
- **Number Buttons (0-9):** Directly select channels.
- **VOL (+/-):** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the TV sound.

- **CH (Up/Down):** Changes channels sequentially.
- **PRE-CH:** Returns to the previous channel.
- **TOOLS:** Accesses quick settings or tools menu.
- **RETURN:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or function.
- **INFO:** Displays information about the current program or input.
- **Directional Pad (Up/Down/Left/Right) & OK:** Navigates menus and confirms selections.
- **MENU:** Opens the main TV menu.
- **CC (Closed Caption):** Toggles closed captions on or off.
- **MTS (Multi-Track Sound):** Selects audio tracks or modes.
- **P.SIZE (Picture Size):** Adjusts the picture aspect ratio.
- **FAV.CH (Favorite Channel):** Accesses favorite channels list.
- **SRS:** Activates or deactivates SRS sound features.

MAINTENANCE

Proper care and maintenance will ensure the longevity and reliable performance of your remote control.

Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following troubleshooting steps:

- **Remote not responding:**
 - Ensure batteries are correctly inserted with the correct polarity (+/-).
 - Replace old batteries with fresh AAA alkaline batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within the effective range and pointing the remote directly at the TV.
- **Specific buttons not working:**
 - Clean the remote control, especially around the affected buttons, to remove any dirt or debris that might be preventing proper contact.
 - If only a few buttons are unresponsive after checking batteries and cleaning, the remote may be faulty and

require replacement.

If problems persist after attempting these steps, please refer to the support information below.

SPECIFICATIONS

Model	BN59-00678A
Brand	NKF
Connectivity Technology	Infrared (IR)
Compatible Devices	Samsung Televisions
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 1.97 x 0.79 inches
Item Weight	3.2 ounces

SUPPORT

For any issues or questions regarding your NKF BN59-00678A remote control, please contact the seller or manufacturer directly. Providing feedback before contacting support can sometimes delay resolution. We are committed to assisting you with any problems you may encounter.

© 2023 NKF. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I pair the NKF BN59-00678A remote control with my Samsung TV?

The NKF BN59-00678A replacement remote control does not require any pairing or programming. It is a standard infrared (IR) remote designed to work immediately with compatible Samsung TV models. To set up the remote, follow...

[Read full answer](#)