

ECONTROLLY RCEC-ELELHYN

ECONTROLLY Remote Control User Manual

FOR ELEMENT SMART TV MODELS: E4SW5518, E4SFT5017, E4SFT5517

1. Product Overview

This manual provides instructions for the ECONTROLLY replacement remote control, designed for use with specific Element Smart TV models. This remote control offers direct functionality without the need for programming.

1.1. Compatibility

This remote control is compatible with the following Element Smart TV models:

- Element Smart TV E4SW5518
- Element Smart TV E4SFT5017
- Element Smart TV E4SFT5517

Please verify your TV model number to ensure compatibility.

2. Setup

2.1. Battery Installation

The remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: No programming or pairing is required. The remote is ready for use once batteries are installed.







Image 1: ECONTROLLY Remote Control. This image displays the full layout of the remote control, including all buttons and their labels, from the power button at the top to the CC button at the bottom.

3. Operating Instructions

This section details the functions of each button on your ECONTROLLY remote control.

Button	Function
Power	Turns the TV on or off.
Input	Selects the input source (e.g., HDMI 1, AV, Component).
Number Pad (0-9)	Direct channel selection or numerical input.
- (Dash)	Used for entering sub-channels (e.g., 7-1).
List	Displays a list of channels or other content.
HOME	Accesses the TV's main home screen or smart TV interface.
YouTube	Direct access to the YouTube application.
NETFLIX	Direct access to the Netflix application.
Q.MENU (Quick Menu)	Opens a quick settings or options menu.
Menu	Opens the main settings menu of the TV.
Navigation (Up, Down, Left, Right)	Navigates through menus and options.
ENTER	Confirms selections or enters a menu item.
Back	Returns to the previous screen or menu.
Exit	Closes the current menu or application.
Color Buttons (Red, Green, Yellow, Blue)	Functions vary depending on the TV menu or application. Refer to on-screen prompts.
Mute (Speaker icon)	Mutes or unmutes the TV audio.
VOL + / -	Adjusts the volume level up or down.
CH ^ / v	Changes the TV channel up or down.
TTS (Text-to-Speech)	Activates or deactivates the Text-to-Speech function.
Rewind (◀◀)	Rewinds media playback.
Play/Pause (▶/)	Plays or pauses media playback.

Button	Function
Fast Forward (▶▶)	Fast forwards media playback.
Stop (■)	Stops media playback.
INFO	Displays information about the current program or input.
MTS/Audio	Selects Multi-channel Television Sound (MTS) or audio options.
VUDU	Direct access to the VUDU application.
Pandora	Direct access to the Pandora application.
CC (Closed Caption)	Activates or deactivates closed captions.

4. Troubleshooting

If you encounter issues with your remote control, please refer to the following common solutions:

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Confirm the remote is pointed directly at the TV.
- **Specific buttons not working:**
 - Clean the remote control buttons and surface with a soft, dry cloth to remove any dirt or residue.
 - If only certain app buttons (e.g., Netflix, YouTube) are not working, ensure your TV is connected to the internet and the apps are updated.
- **Remote works intermittently:**
 - This often indicates low battery power. Replace the batteries.
 - Minimize strong light sources (like direct sunlight or bright fluorescent lights) that might interfere with the infrared signal.

If issues persist after following these steps, please refer to the customer support section.

5. Specifications

- **Model Number:** RCEC-ELELHYN
- **Brand:** ECONTROLLY
- **Connectivity Technology:** Infrared
- **Compatible Devices:** Element Smart Televisions (E4SW5518, E4SFT5017, E4SFT5517)
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 7 x 2 x 0.65 inches (approximately)
- **Item Weight:** 1 ounce (approximately)
- **Special Feature:** Ergonomic design

6. Maintenance

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote control. Avoid using liquid cleaners, aerosols, or abrasive materials, as these can damage the remote.
- **Battery Care:** Remove batteries if the remote control will not be used for an extended period to prevent leakage and potential damage. Dispose of used batteries responsibly according to local regulations.
- **Storage:** Store the remote control in a cool, dry place, away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Avoid dropping the remote control or subjecting it to strong impacts, which can damage internal components.

7. Warranty and Support

7.1. Warranty Information

Please refer to the product packaging or your purchase receipt for specific warranty details provided by the seller or manufacturer. General warranty terms typically cover manufacturing defects for a limited period from the date of purchase.

7.2. Customer Support

For further assistance, technical support, or inquiries regarding your ECONTROLLY remote control, please contact the seller or manufacturer through the platform where the product was purchased. Provide your order number and product model (RCEC-ELELHYN) for efficient service.