

[manuals.plus](#) /› [Whirlpool](#) /› [Whirlpool DSCX10123 10 kg Front Load Dryer Instruction Manual](#)

## Whirlpool DSCX10123

# Whirlpool DSCX10123 10 kg Front Load Dryer Instruction Manual

Model: DSCX10123

---

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new Whirlpool DSCX10123 10 kg Front Load Dryer. Please read these instructions thoroughly before using the appliance and retain them for future reference. Proper installation, use, and maintenance will ensure optimal performance and extend the lifespan of your dryer.

## 2. SAFETY INFORMATION

Always adhere to the following safety precautions to prevent personal injury or damage to the appliance.

- Ensure the dryer is properly grounded according to local electrical codes.
- Do not install or store the dryer in an area where it will be exposed to water or weather.
- Keep flammable materials, such as gasoline, away from the dryer.
- Do not dry items that have been soiled with cooking oil, flammable chemicals, or other combustible substances.
- Always clean the lint filter before or after each load.
- Do not allow children to play on or in the dryer.
- Unplug the dryer from the power supply before performing any maintenance or cleaning.

## 3. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Whirlpool DSCX10123 dryer.



**Figure 3.1: Front View of the Whirlpool DSCX10123 Dryer.** This image displays the appliance with its door closed, showing the control panel at the top and the main drum door in the center.



**Figure 3.2: Front View of the Whirlpool DSCX10123 Dryer with Door Open.** This image illustrates the dryer with its front door open, revealing the interior drum where laundry is placed for drying.

### Key Components:

- **Control Panel:** Located at the top, featuring program selection, start/pause button, and indicator lights.
- **Loading Door:** Front-facing door for loading and unloading laundry.
- **Drum:** Interior cylinder where clothes are tumbled during the drying cycle.
- **Lint Filter:** Collects lint during drying; requires regular cleaning.
- **Condenser Unit (if applicable):** Collects moisture from the drying process.

## 4. INSTALLATION AND SETUP

Proper installation is crucial for the safe and efficient operation of your dryer. It is recommended that installation be performed by a qualified technician.

#### **4.1 Unpacking**

- Remove all packaging materials, including any internal packing from the drum.
- Inspect the dryer for any shipping damage. Report any damage to your retailer immediately.

#### **4.2 Location Requirements**

- Place the dryer on a firm, level floor.
- Ensure adequate space around the dryer for ventilation and servicing.
- Avoid installing in areas where temperatures may drop below freezing.

#### **4.3 Electrical Connection**

- The dryer requires a 220/240 V electrical supply.
- Connect the dryer to a dedicated, properly grounded electrical outlet. Do not use extension cords.

#### **4.4 Leveling the Dryer**

- Use a spirit level to check if the dryer is perfectly level.
- Adjust the leveling feet at the bottom of the dryer until it is stable and level.

#### **4.5 Ventilation (for vented models) / Condenser (for condenser models)**

If your model is a vented dryer, ensure the exhaust vent is properly installed and clear of obstructions. If it is a condenser dryer, ensure the water tank is correctly seated.

### **5. OPERATING INSTRUCTIONS**

---

Follow these steps for typical drying operations.

#### **5.1 Preparing Laundry**

- Sort laundry by fabric type and desired drying level.
- Close zippers, hooks, and fastenings to prevent snagging.
- Do not overload the dryer. The 10 kg capacity refers to dry weight.

#### **5.2 Loading the Dryer**

- Open the dryer door.
- Place the sorted laundry loosely into the drum.
- Close the door firmly until it latches.

#### **5.3 Selecting a Program**

- Turn the program selector knob on the control panel to choose the appropriate drying program for your load. Refer to Section 6 for program details.
- Select any desired options, such as Delay Start, if available for the chosen program.

#### **5.4 Starting the Cycle**

- Press the Start/Pause button to begin the drying cycle.

- The dryer will start, and the selected program indicator will illuminate.

## 5.5 End of Cycle

- The dryer will signal the end of the cycle.
- Remove laundry promptly to minimize wrinkling.
- Clean the lint filter after each use.

## 6. PROGRAMS AND FEATURES

---

Your Whirlpool DSCX10123 dryer offers 11 drying programs and several features to optimize your laundry care.

### 6.1 Drying Programs

- **Cotton:** For robust cotton items, such as towels and bed linens.
- **Wool Finish:** Gentle drying for wool items, helping to maintain their shape and texture.
- **Mixed:** Suitable for mixed loads of cotton and synthetic fabrics.
- **Big Items:** Designed for large items like duvets, blankets, or sleeping bags.
- **Synthetics:** For synthetic fabrics, such as polyester and nylon.
- **Airing:** A cool air cycle to refresh items or remove dust without heat.
- **Delicates:** Low-temperature drying for delicate garments.
- **Steam Refresh:** Uses steam to reduce wrinkles and refresh clothes without a full wash or dry cycle.
- **Drying Time:** Allows manual selection of a specific drying duration.
- *(Two additional programs are available, consult your dryer's control panel for specific names and uses.)*

### 6.2 Special Features

- **Delay Start:** Allows you to postpone the start of a drying cycle for a set number of hours.
- **Drying Intensive System:** Enhances drying performance for heavier or more demanding loads.
- **Steam Care:** Utilizes the natural power of steam to help reduce wrinkles and make clothes ready to wear directly after drying.

## 7. MAINTENANCE AND CARE

---

Regular maintenance ensures the longevity and efficiency of your dryer.

### 7.1 Cleaning the Lint Filter

- Locate the lint filter, typically inside the door opening.
- Remove the filter and clean off any accumulated lint by hand or with a soft brush.
- Reinsert the clean lint filter securely before operating the dryer.

### 7.2 Emptying the Water Tank (for condenser models)

- If your dryer is a condenser model, the water tank collects moisture.
- Empty the water tank after each drying cycle to prevent interruptions.

### 7.3 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

## 8. TROUBLESHOOTING

Refer to this section for solutions to common issues. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Dryer does not start	Power cord unplugged, door not closed, circuit breaker tripped.	Check power connection, ensure door is latched, reset circuit breaker.
Clothes not drying properly	Lint filter clogged, overloaded dryer, incorrect program selected.	Clean lint filter, reduce load size, select appropriate program.
Dryer makes unusual noise	Foreign object in drum, dryer not level.	Check drum for objects, ensure dryer is level.
Water tank full indicator (condenser models)	Water tank needs emptying.	Empty the water tank.

## 9. SPECIFICATIONS

Technical details for the Whirlpool DSCX10123 dryer.

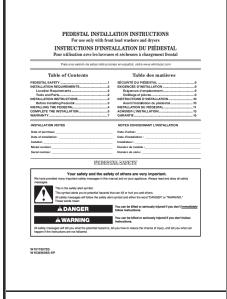
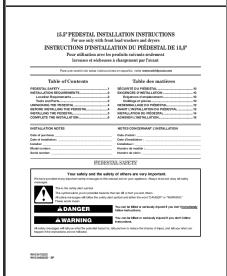
- **Model:** DSCX10123
- **Brand:** Whirlpool
- **Capacity:** 10 kg
- **Type:** Front Load Dryer
- **Programs:** 11 (including Cotton, Wool Finish, Mixed, Big Items, Synthetics, Airing, Delicates, Steam Refresh, Drying Time)
- **Input Voltage:** 220/240 V
- **Power Source:** Electric Powered
- **Material:** Stainless Steel (drum), White finish (exterior)
- **Item Weight:** 35 kg
- **Product Dimensions (W x D x H):** 65.9 x 35 x 84.5 cm

## 10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Whirlpool website. Keep your purchase receipt as proof of purchase for warranty claims.

**Whirlpool Customer Service:** Refer to your regional Whirlpool contact information for service and technical assistance.

## Related Documents - DSCX10123

	<p><a href="#">Whirlpool Front Load Laundry: Key Features and Specifications</a></p> <p>Explore the key step-up features and detailed specifications for Whirlpool's front load washer and dryer lineup, including model number decoding and product comparisons.</p>
	<p><a href="#">Whirlpool Pedestal Installation Instructions for Front Load Washers and Dryers</a></p> <p>Comprehensive installation guide for Whirlpool, Maytag, and Kenmore laundry pedestals. Covers safety, requirements, step-by-step installation, leveling, and warranty information for front-load washer and dryer models.</p>
	<p><a href="#">Whirlpool High Efficiency Dryer Quick Reference Guide</a></p> <p>A concise guide to operating your Whirlpool High Efficiency Dryer, covering essential steps, settings, options, and important safety warnings for efficient and safe use.</p>
	<p><a href="#">Whirlpool Smart Capable Front Load Electric/Gas Dryer Dimension Guide</a></p> <p>Detailed planning dimensions and spacing requirements for Whirlpool Smart Capable Front Load Electric/Gas Dryers with AccuDry™ System and Steam Refresh Cycle, 7.4 cu. ft. Includes electrical requirements, product dimensions, and installation clearances.</p>
	<p><a href="#">15.5 Inch Pedestal Installation Instructions for Front Load Washers and Dryers</a></p> <p>Comprehensive guide for installing a 15.5-inch laundry pedestal with front-load washers and dryers. Includes safety warnings, required tools and parts, step-by-step installation procedures for both washer and dryer, and leveling instructions.</p>
	<p><a href="#">Whirlpool W10323246 4-Way Vent Kit Installation Instructions</a></p> <p>Detailed installation instructions for the Whirlpool W10323246 4-Way Vent Kit, designed for front-load dryers. This guide covers disassembly, venting configuration (bottom, left side, right side), and reassembly, with textual descriptions for all diagrams.</p>