

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Topp Pro](#) /

› [Topp Pro TPM6250MKII Professional Expandable Mixer User Manual](#)

Topp Pro TPM6250MKII

Topp Pro TPM6250MKII Professional Expandable Mixer User Manual

Model: TPM6250MKII

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Topp Pro TPM6250MKII Professional Expandable Mixer. Please read this manual thoroughly before using the device to ensure proper setup, operation, and maintenance. Retain this manual for future reference.

SAFETY INFORMATION

- **Power Source:** Only connect the mixer to a power source specified in the specifications section. Ensure the voltage matches your region.
- **Ventilation:** Do not block ventilation openings. Ensure adequate airflow around the unit to prevent overheating.
- **Moisture:** Do not expose the unit to rain or moisture. Avoid placing liquid-filled objects on the mixer.
- **Servicing:** Refer all servicing to qualified service personnel. Do not attempt to service this product yourself.
- **Cleaning:** Disconnect power before cleaning. Use a dry cloth only.

SETUP

1. Unpacking

Carefully remove the mixer from its packaging. Inspect the unit for any signs of damage that may have occurred during transit. Retain the packaging for future transport or storage.

2. Connecting Power

Connect the provided power cord to the AC inlet on the rear panel of the mixer. Plug the other end into a suitable electrical outlet. Ensure the mixer's power switch is in the OFF position before connecting to power.



Image Description: This image displays the rear panel of the Topp Pro TPM6250MKII mixer. Visible components include the AC power inlet, ventilation grilles, and output jacks, along with regulatory labels. This view is crucial for understanding power connections and overall unit ventilation.

3. Connecting Audio Inputs

The TPM6250MKII features multiple input channels. Each channel typically includes XLR inputs for microphones and 1/4" TRS inputs for line-level sources. Connect your microphones, instruments, or other audio devices to the appropriate input jacks.

- **Microphone Inputs (XLR):** Use balanced XLR cables for microphones.
- **Line Inputs (1/4" TRS):** Use 1/4" TRS cables for line-level devices such as keyboards, drum machines, or other mixers.
- **RCA Inputs:** Dedicated RCA inputs are available for connecting consumer audio devices like CD players or media players.

4. Connecting Audio Outputs

Connect your main speakers or power amplifier to the main output jacks. The mixer typically provides XLR outputs for balanced connections to professional audio equipment.

- **Main Outputs (XLR):** Connect to your main PA system or powered speakers using balanced XLR cables.
- **Monitor Outputs:** If available, connect to stage monitors or headphones for monitoring purposes.



Image Description: This image shows the front control panel of the Topp Pro TPM6250MKII mixer. It highlights the various input channels with their respective gain, EQ, and level controls, along with the master section, DSP effects, and main output controls. This view is essential for understanding the mixer's operational layout.

5. Initial Power On

Once all connections are secure, switch the mixer's power to the ON position. Observe the power indicator light. Ensure all volume controls are set to their minimum level before playing any audio.

OPERATING INSTRUCTIONS

1. Channel Controls

- **GAIN:** Adjusts the input sensitivity for each channel. Set this to achieve a strong signal without clipping (distortion).
- **EQ (Equalization):** Typically includes HIGH, MID, and LOW controls to shape the tone of each input.
- **LEVEL:** Controls the output volume of the individual channel to the main mix.

2. Main Output

The MAIN LEVEL fader or knob controls the overall output volume of the mixer. Adjust this to the desired listening level for your main speakers.

3. DSP Effects

The TPM6250MKII features a Digital Signal Processor (DSP) for effects. Use the DSP controls to select and apply various effects such as reverb, delay, or chorus to your audio. Refer to the display and dedicated controls for effect selection and parameter adjustment.

4. Monitoring

Use the MONITOR controls to adjust the level of the mix sent to your headphones or stage monitors. This allows performers to hear themselves and other instruments clearly.

MAINTENANCE

1. Cleaning

Before cleaning, ensure the mixer is powered off and disconnected from the power source. Use a soft, dry cloth to wipe down the exterior. Do not use liquid cleaners, abrasive materials, or solvents, as these can damage the finish and internal components.

2. Storage

When not in use for extended periods, store the mixer in a cool, dry place, away from direct sunlight and extreme temperatures. If possible, use the original packaging or a protective case to prevent dust accumulation and physical damage.

3. Ventilation

Regularly check that the ventilation grilles on the unit are free from dust and debris to ensure proper heat dissipation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord disconnected; power switch off; faulty outlet.	Check power cord connection; ensure power switch is ON; test outlet with another device.
No sound output	Main level down; channel level down; faulty cables; speakers off/disconnected.	Increase MAIN LEVEL; increase individual channel LEVEL; check all audio cables; ensure speakers are powered and connected.
Distorted sound	Input GAIN too high; output level too high; faulty cable/device.	Reduce input GAIN; reduce MAIN LEVEL; test with different cables/devices.
No effect sound	DSP effect level set to zero; effect not selected.	Increase DSP effect level; ensure an effect is selected and applied to the desired channel.

SPECIFICATIONS

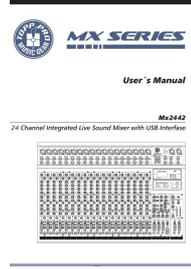
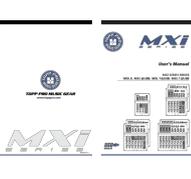
Feature	Detail
Brand	Topp Pro
Model Number	TPM6250MKII
Equipment Type	Audio Mixer
Frequency Response	20Hz to 22kHz, +/-3dB
Gain	50 dB
Line Input	Electronically balanced
Microphone Input Impedance	1.5 k ohm
Output Power	300W RMS at 1kHz, THD=1%, Load=4Ohm
Net Weight	9.70 Kg (21.38 lbs)
Power Source	Corded Electric
Connectivity Technology	XLR, TRS
Output Connector Type	XLR
Audio Input	Analog XLR, 1/4" or RCA jacks

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official Topp Pro website. Keep your proof of purchase for warranty claims.

For further assistance, contact Topp Pro customer service.

Related Documents - TPM6250MKII

	<p>TOPP PRO MX2442 24-Channel Integrated Live Sound Mixer User's Manual</p> <p>This user's manual provides comprehensive information on the TOPP PRO MX2442, a 24-channel integrated live sound mixer. It details features, safety precautions, control elements, installation and connection procedures, optional modules, technical specifications, and warranty information.</p>
	<p>Top Pro T2208 Digital Mixer User Manual</p> <p>Comprehensive user manual for the Topp Pro T2208 digital mixer, detailing its 16 microphone preamplifiers, 20 line inputs, extensive DSP control, routing options, and technical specifications for professional audio applications.</p>
	<p>Top Pro DM24.8 Firmware Utility (PC) Operating Instructions</p> <p>Operating instructions for the Topp Pro DM24.8 Firmware Utility (PC) software, detailing connection methods, firmware versions, and update procedures.</p>
	<p>DM Series Firmware and GUI Update Guide</p> <p>User manual detailing the process for updating the firmware and GUI on Topp Pro DM Series digital audio mixers. Covers preparation, system connections, and step-by-step instructions for both firmware and GUI updates.</p>
	<p>Top Pro TPA-PLUS-BK User Manual: Professional Power Product</p> <p>User manual for the Topp Pro TPA-PLUS-BK professional power product, detailing features, installation, operation, technical specifications, and warranty.</p>
	<p>Top Pro MXi Series Mixers: MXi.5, MXi.6/USB, MXi.10/USB, MXi.12/USB User Manual & Specifications</p> <p>Comprehensive user manual and technical specifications for the Topp Pro MXi series of analog mixing consoles, including models MXi.5, MXi.6/USB, MXi.10/USB, and MXi.12/USB. Learn about features, controls, installation, and technical details.</p>