



Manuals.plus /

› Bumpboxx /

› Bumpboxx Ultra Bluetooth Boombox Instruction Manual

Bumpboxx Ultra

Bumpboxx Ultra Bluetooth Boombox

Instruction Manual

Setup

Operation

Maintenance

Troubleshooting

Specifications

Warranty & Support

1. SETUP

1.1 Unboxing and Package Contents

Carefully remove all items from the packaging. Ensure all components are present:

- Bumpboxx Ultra Bluetooth Boombox
- Carrying Strap
- Charging Block
- Remote Control
- 3.5mm Line In/Line Out Cable
- RCA Adapter

1.2 Charging the Boombox

Before first use, fully charge the Bumpboxx Ultra. Connect the provided charging block to the DC 15V input port on the boombox and plug it into a power outlet. The 'CHARGE' LED indicator will illuminate during charging and turn 'FULL' when complete. A full charge provides approximately 22 hours of playtime.



Figure 1: Front view of the Bumpboxx Ultra Bluetooth Boombox.

1.3 Initial Power On

Locate the POWER switch on the control panel. Slide the switch to the 'ON' position. The display will light up, indicating the device is ready for use.

 


Figure 2: Detailed view of the control panel, showing power switch, input ports, and control buttons.

2. OPERATION

2.1 Power On/Off

To power on the device, slide the 'POWER' switch to 'ON'. To power off, slide the switch to 'OFF'.

2.2 Bluetooth Pairing

1. Ensure the boombox is powered on.
2. The boombox will automatically enter Bluetooth pairing mode, indicated by 'BT' flashing on the display.
3. On your mobile device, enable Bluetooth and search for available devices.
4. Select 'Bumpboxx Ultra' from the list to connect. A confirmation tone will sound upon successful pairing.

True Wireless Stereo (TWS) Pairing: The Bumpboxx Ultra supports TWS pairing, allowing two units to connect

wirelessly for a stereo sound experience. Refer to the separate TWS pairing guide for detailed instructions.

2.3 Audio Inputs

The Bumpboxx Ultra offers multiple audio input options:

- **Bluetooth:** For wireless audio streaming from compatible devices.
- **USB:** Insert a USB drive into the USB port to play audio files.
- **TF Card:** Insert a TF (MicroSD) card into the TF CARD slot to play audio files.
- **AUX In:** Connect external audio devices using a 3.5mm audio cable to the 'AUX IN' port.

Use the 'MODE' button on the control panel to switch between input sources.

2.4 Controls

- **Volume Knob:** Rotate to adjust the overall volume level.
- **Bass Knob:** Adjusts the low-frequency audio output.
- **Treble Knob:** Adjusts the high-frequency audio output.
- **PREV / NEXT Buttons:** Navigate between tracks in USB/TF card mode or skip tracks in Bluetooth mode.
- **P/P (Play/Pause) Button:** Play or pause audio playback.
- **EQ Button:** Cycle through preset equalizer settings.
- **LED Switch:** Turns the LED lighting on the boombox on or off.

Video 1: An overview of the Bumpboxx Ultra Bluetooth Boombox, showcasing its design and features in a gym setting.

3. MAINTENANCE

3.1 Cleaning

To clean the exterior of the boombox, use a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Avoid getting moisture into any openings.

3.2 Battery Care

The Bumpboxx Ultra contains a rechargeable Lithium Ion battery. To prolong battery life:

- Avoid fully discharging the battery frequently.
- Charge the battery regularly, even if not in use, to maintain its capacity.
- Store the boombox in a cool, dry place when not in use for extended periods.

4. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted; Power switch is off.	Charge the boombox; Ensure the power switch is in the 'ON' position.
No sound	Volume is too low; Incorrect input source selected; Device not properly connected.	Increase volume; Press 'MODE' to select correct input; Re-pair Bluetooth or re-connect cable.
Bluetooth connection fails	Boombox not in pairing mode; Device too far; Interference.	Ensure boombox is in pairing mode ('BT' flashing); Move device closer to boombox; Turn off other Bluetooth devices.
Remote control not working	Battery depleted; Obstruction between remote and boombox.	Replace remote battery; Ensure clear line of sight to the boombox's sensor.

5. SPECIFICATIONS

- **Product Dimensions:** 4.25 x 16.5 x 11.75 inches
- **Item Weight:** 7 pounds
- **Batteries:** 1 Lithium Ion battery (included)
- **Audio Output:** 140 Watts Max Power
- **Drivers:** 2 Drivers, 2 Tweeters
- **Connectivity:** Bluetooth, USB, TF Card, 3.5mm AUX In
- **Speaker Type:** Stereo
- **Playtime:** Up to 22 hours (rechargeable lithium battery)

6. WARRANTY & SUPPORT

6.1 Manufacturer's Warranty

The Bumpboxx Ultra Bluetooth Boombox comes with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

6.2 Customer Support

For technical assistance, warranty claims, or general inquiries, please visit the official Bumpboxx website or contact their customer support team. Please have your product model and purchase date available when contacting support.