

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Viatek](#) /

› [WeedErase Chemical Free Weed Killer - User Manual](#)

Viatek WE-WIRE

WeedErase Chemical Free Weed Killer - User Manual

Model: WE-WIRE

Brand: Viatek

PRODUCT OVERVIEW

The WeedErase Chemical Free Weed Killer is an innovative device designed to eliminate weeds from the root level using a concentrated blend of light. This environmentally friendly solution avoids the need for harsh chemicals, making it safe for surrounding plants and grass.

It utilizes a combination of ultraviolet (UV) and infrared (IR) light. The infrared light generates heat that disrupts the water supply to the weed's root, while the ultraviolet light penetrates the ground to interfere with root functions. This dual-action approach effectively destroys the root, root crown, and leaves within approximately 10 days.



Figure 1: The WeedErase device, showing its main components and power connection.

- **Chemical-Free Operation:** Eliminates weeds without the use of harmful chemicals, ensuring safety for your garden and the environment.
- **Root-Level Targeting:** Patented technology focuses light to destroy weeds at their source, preventing regrowth.
- **Environmentally Friendly:** The unique dome design precisely targets weeds, preventing overspray or damage to desired plants.
- **Direct Contact Application:** Provides controlled and focused light application for effective weed removal.

SETUP

Before using the WeedErase device, ensure you have access to a standard AC power outlet. The device operates by plugging directly into an electrical socket.

1. Unpack the WeedErase device and its power cord from the packaging.
2. Inspect the device and power cord for any visible damage. Do not use the device if any damage is observed.
3. Plug the power cord into a grounded AC outlet. Ensure the connection is secure.

4. The device is now ready for operation.

OPERATING INSTRUCTIONS

Follow these steps for effective and safe operation of your WeedErase device:

1. Identify the specific weed you wish to eliminate.
2. Carefully place the dome of the WeedErase device directly over the target weed, ensuring the weed is fully enclosed within the dome.
3. Hold the device steady in this position for the specified duration. The exact time required may vary depending on the weed type and size, but typically a few minutes per weed is sufficient for the light to penetrate and begin its work.
4. After the treatment time, lift the device from the weed. The weed may not show immediate signs of damage, but the light treatment will begin to affect its root system.
5. Repeat the process for all desired weeds.

Important Safety Note: Always ensure the device's dome is placed directly over the target weed and away from surrounding desirable plants or grass. While designed to be safe, direct exposure to the concentrated light for extended periods on non-target vegetation could potentially cause damage.



Figure 2: The WeedErase in operation, targeting weeds.

MAINTENANCE

The WeedErase device is designed for minimal maintenance. Regular cleaning will help ensure its longevity and optimal performance.

- **Cleaning:** After each use, ensure the device is unplugged and cool. Wipe the dome and exterior surfaces with a clean, damp cloth to remove any dirt or debris. Do not use abrasive cleaners or immerse the device in water.
- **Storage:** Store the device in a cool, dry place, away from direct sunlight and extreme temperatures. Keep it out of reach of children and pets.
- **Cord Care:** Avoid kinking or wrapping the power cord tightly around the device. Store the cord loosely to prevent damage.

TROUBLESHOOTING

If you encounter issues with your WeedErase device, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on or lights do not illuminate.	No power to the outlet. Loose power connection. Device malfunction.	Check if the outlet is working by plugging in another appliance. Ensure the power cord is securely plugged into both the device and the AC outlet. If the issue persists, contact customer support.
Weeds are not dying after treatment.	Insufficient treatment time. Incorrect placement of the dome. Environmental factors (e.g., very cold weather).	Increase the duration of treatment per weed. Ensure the dome fully covers the weed. Optimal performance is achieved in moderate temperatures. Very cold conditions may reduce effectiveness.
Lights are blinking randomly or inconsistently.	Internal electrical issue.	Unplug the device, wait 30 seconds, and plug it back in. If the problem continues, the device may require service. Contact customer support.

SPECIFICATIONS

Attribute	Detail
Brand	Viatek
Model Number	WE-WIRE
ASIN	B089JBQ8JD
UPC	813061025291
Item Form	Device (listed as "Spray" in some data, but functionally a device)
Coverage	Non-selective broad spectrum coverage (targeted application)
Power Source	AC Outlet
Package Dimensions	73.15 x 28.45 x 17.53 cm
Item Weight	2.4 kg

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please contact Viatek customer service directly. Details can typically be found on the manufacturer's official website or through the retailer where the product was purchased.

Please have your product model number (WE-WIRE) and ASIN (B089JBQ8JD) ready when contacting support to expedite assistance.

This manual is for informational purposes only. Specifications are subject to change without notice.