

## Fakir FKRHDS13283V

# Fakir Quadro FKRHDS13283V 1000W Hand Blender Chopper User Manual

Model: FKRHDS13283V | Brand: Fakir

## INTRODUCTION

Thank you for choosing the Fakir Quadro FKRHDS13283V Hand Blender Chopper. This versatile kitchen appliance is designed to assist with various food preparation tasks, including blending, chopping, and whisking. With its powerful 1000W motor and stainless steel components, it offers efficient performance. Please read this manual carefully before first use to ensure safe and optimal operation, and retain it for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the power supply voltage matches the rating on the appliance before connecting.
- Unplug the appliance from the power outlet before assembling, disassembling, cleaning, or when not in use.
- Keep hands, hair, clothing, and utensils away from moving parts during operation to prevent injury.
- Blades are sharp. Handle with extreme care when assembling, disassembling, and cleaning.
- Do not immerse the motor unit in water or any other liquid. Clean it with a damp cloth only.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid processing extremely hot liquids to prevent splashing and burns.
- Do not use attachments not recommended or sold by the manufacturer.

## PACKAGE CONTENTS

Verify that all components are present and in good condition:

- Motor Unit (Hand Blender Body)
- Blending Shaft (Stainless Steel)
- Whisk Attachment with Gear Box
- Chopper Bowl with Lid and Blade
- Measuring Cup

## PRODUCT OVERVIEW

Familiarize yourself with the various parts of your Fakir Quadro Hand Blender Chopper:



The image displays the Fakir Quadro FKRHDS13283V Hand Blender Chopper set. It includes the main motor unit (purple), a blending shaft, a whisk attachment with its gear box, a chopper bowl with a blade, and a measuring cup. All components are arranged on a white background.

1. **Motor Unit:** The main power unit with speed controls.
2. **Blending Shaft:** For pureeing, mixing, and blending liquids.
3. **Whisk Attachment:** For whipping cream, beating eggs, and mixing light batters.
4. **Chopper Bowl:** For chopping herbs, nuts, vegetables, and meat.
5. **Chopper Blade:** Sharp blade for chopping tasks.
6. **Measuring Cup:** For blending smaller quantities and measuring ingredients.

## SETUP AND ASSEMBLY

Before first use, wash all detachable parts (except the motor unit) in warm soapy water, rinse thoroughly, and dry. Ensure the appliance is unplugged before assembly.

### Assembling the Blending Shaft

1. Align the blending shaft with the motor unit.
2. Twist clockwise until it locks securely into place.

### Assembling the Whisk Attachment

1. Insert the whisk into the whisk gear box.
2. Align the whisk gear box with the motor unit.
3. Twist clockwise until it locks securely into place.

### Assembling the Chopper

1. Carefully place the chopper blade onto the central pin inside the chopper bowl.
2. Add ingredients to the chopper bowl.
3. Place the chopper bowl lid onto the bowl.
4. Align the motor unit with the lid and twist clockwise until it locks securely into place.

## OPERATING INSTRUCTIONS

Always ensure the appliance is correctly assembled and plugged into a suitable power outlet before operation.

### Using the Hand Blender

1. Attach the blending shaft to the motor unit.
2. Immerse the blending shaft into the ingredients in a suitable container (e.g., the measuring cup).
3. Press and hold the desired speed button on the motor unit to start blending. Release to stop.
4. Move the blender up and down gently for even blending.

### Using the Whisk

1. Attach the whisk attachment to the motor unit.
2. Place the whisk into the ingredients in a suitable bowl.
3. Press and hold the desired speed button to start whisking. Release to stop.

### Using the Chopper

1. Assemble the chopper as described in the 'Setup and Assembly' section.
2. Ensure the lid is securely locked with the motor unit.
3. Press and hold the desired speed button in short pulses to chop ingredients. Release to stop.
4. Do not continuously operate the chopper for more than 30 seconds to prevent overheating. Allow a short break between pulses.

## CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your appliance.

- Always unplug the appliance before cleaning.
- **Motor Unit:** Wipe the motor unit with a damp cloth. Never immerse it in water or wash it under running water.
- **Blending Shaft, Whisk, Chopper Bowl, Lid, Blade, Measuring Cup:** These parts can be washed in warm soapy water. Rinse thoroughly and dry immediately. The chopper blade is very sharp; handle with extreme care.
- Some parts may be dishwasher safe, refer to specific markings on the parts or consult the manufacturer's website for confirmation.
- Store the appliance and its attachments in a dry, safe place, out of reach of children.

## TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet faulty; motor unit not properly attached to attachment.	Check power connection; try a different outlet; ensure attachments are securely locked.
Poor blending/chopping performance.	Too much food; ingredients too large/hard; blade dull or incorrectly installed.	Reduce quantity; cut ingredients into smaller pieces; ensure blade is correctly placed and sharp.
Motor stops during operation.	Overheating due to prolonged use or processing tough ingredients.	Unplug and let the appliance cool down for at least 15-20 minutes before resuming use. Reduce load.

## SPECIFICATIONS

Feature	Detail
Brand	Fakir
Model Number	FKRHDS13283V
Color	White
Power / Electrical Power	1000 Watts
Material	Stainless Steel
Special Features	Portable
Item Weight	3 Kilograms
Blade Material	Stainless Steel

Feature	Detail
Included Components	Juice Container (Measuring Cup)
Style	Modern

## WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or contact the retailer where the product was purchased. For technical support or service inquiries, please contact Fakir customer service or visit their official website. Keep your proof of purchase for any warranty claims.