

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Mr. Coffee](#) /

› [Mr. Coffee BVMCMJX41NWF 12-Cup Programmable Coffee Maker User Manual](#)

Mr. Coffee BVMCMJX41NWF

Mr. Coffee BVMCMJX41NWF 12-Cup Programmable Coffee Maker User Manual

Model: BVMCMJX41NWF

INTRODUCTION

Welcome to the user manual for your new Mr. Coffee BVMCMJX41NWF 12-Cup Programmable Coffee Maker. This manual provides detailed instructions for the safe operation, setup, maintenance, and troubleshooting of your appliance. Please read all instructions carefully before first use and retain this manual for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using this product.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycle.

- The carafe is designed for use with this appliance only. It must never be used on a range top.
- Do not place a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive material.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

PARTS AND FEATURES



Figure 1: Front view of the Mr. Coffee 12-Cup Programmable Coffee Maker, showing the digital display, control panel, and glass carafe.



Figure 2: Close-up of the control panel, highlighting the digital clock, program buttons (Hr. Min, Set Delay, Select/Off), and brew strength options.



Figure 3: Top view of the coffee maker with the lid open, showing the water reservoir and the removable filter basket.

- **Water Reservoir:** Holds water for brewing.
- **Lid:** Covers the water reservoir and filter basket.
- **Filter Basket:** Holds the coffee filter and ground coffee.
- **Glass Carafe:** Collects brewed coffee.
- **Heating Plate:** Keeps coffee warm after brewing.
- **Control Panel:** Includes digital display, clock, and programming buttons.
- **Brew Pause™ Function:** Allows you to pour a cup during brewing.
- **Auto Shut-Off:** Automatically turns off the coffee maker after a set time.

INITIAL SETUP AND FIRST USE

Before using your coffee maker for the first time, it is recommended to clean all removable parts and run a full brewing cycle with just water to prime the system.

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the carafe, lid, and removable filter basket in warm, soapy water. Rinse thoroughly and dry.

3. **Position:** Place the coffee maker on a flat, stable surface.
4. **First Brew Cycle (Cleaning):**
 - a. Fill the water reservoir with cold water up to the 12-cup mark.
 - b. Place an empty paper filter (or the reusable filter) into the filter basket and close the lid.
 - c. Place the empty carafe on the heating plate.
 - d. Plug the power cord into a standard electrical outlet.
 - e. Press the "Select/Off" button to start a brew cycle. Allow the cycle to complete.
 - f. Discard the water from the carafe and turn off the coffee maker.
5. Your coffee maker is now ready for use.

OPERATING INSTRUCTIONS

Setting the Clock

1. Plug in the coffee maker. The display will flash "12:00".
2. Press the "Hr.Min" button repeatedly to set the current hour. The clock will cycle through AM and PM.
3. Press the "Hr.Min" button again to set the minutes.
4. Once the desired time is displayed, stop pressing the button. The clock is now set.

Brewing Coffee

1. **Fill Water Reservoir:** Open the lid and fill the water reservoir with cold, fresh water to the desired level indicated by the cup markings. Do not exceed the 12-cup maximum fill line.
2. **Add Coffee Grounds:** Place a standard basket-style paper filter (or the reusable filter) into the filter basket. Add the desired amount of ground coffee. A general guideline is 1 tablespoon of ground coffee per cup. Adjust to taste.
3. **Close Lid:** Close the lid securely.
4. **Place Carafe:** Ensure the empty glass carafe is properly seated on the heating plate.
5. **Select Brew Strength (Optional):** Press the "Brew Strength" button if you desire a stronger brew. The indicator light will illuminate.
6. **Start Brewing:** Press the "Select/Off" button. The "Brew Now" indicator light will illuminate, and brewing will begin.
7. **Brew Pause™ Feature:** If you wish to pour a cup before the brewing cycle is complete, you can temporarily remove the carafe. The flow of coffee will pause. Replace the carafe within 30 seconds to prevent overflow.
8. **After Brewing:** Once brewing is complete, the coffee maker will automatically switch to the "Keep Warm" mode. The "Cycle-Finish Chime" will sound.
9. **Auto Shut-Off:** The coffee maker will automatically shut off after 2 hours of keeping warm.

Using the Delay Brew Function

The Delay Brew function allows you to set the coffee maker to start brewing at a later time.

1. Follow steps 1-4 for "Brewing Coffee" (fill water, add grounds, close lid, place carafe).
2. Press the "Set Delay" button. The "Delay Brew" indicator light will flash.
3. Press the "Hr.Min" button repeatedly to set the desired delay brew time.
4. Once the desired time is displayed, stop pressing the button. The "Delay Brew" indicator light will remain illuminated, indicating the delay brew is set.
5. The coffee maker will automatically start brewing at the programmed time.

CARE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your coffee maker.

Daily Cleaning

- Always unplug the coffee maker before cleaning.
- Discard used coffee grounds and paper filter.
- Wash the carafe, carafe lid, and removable filter basket in warm, soapy water. These parts can also be washed on the top rack of a dishwasher.
- Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Do not immerse the coffee maker in water or any other liquid.

Decalcification (Mineral Deposit Removal)

Mineral deposits (calcium) can build up in your coffee maker over time, affecting its performance. The "Clean" indicator light will illuminate when decalcification is recommended. Decalcify every 80 cycles or every 2-3 months, depending on water hardness.

1. Empty the carafe and remove the filter from the filter basket.
2. Fill the water reservoir with 4 cups of undiluted white household vinegar.
3. Place the empty carafe on the heating plate.
4. Press the "Select/Off" button to start a brew cycle. Allow half of the vinegar solution to brew into the carafe, then press "Select/Off" to turn off the coffee maker.
5. Let the coffee maker soak for at least 30 minutes.
6. Press the "Select/Off" button again to resume the brewing cycle and brew the remaining vinegar solution.
7. Discard the vinegar solution from the carafe.
8. Fill the water reservoir with a full carafe of fresh, cold water.
9. Place the empty carafe on the heating plate and run a full brew cycle with just water to rinse the system.
10. Repeat the fresh water rinse cycle at least two more times to ensure all vinegar residue is removed.
11. The "Clean" indicator light will turn off after the decalcification process is complete.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Coffee does not brew.	<ul style="list-style-type: none">• Coffee maker not plugged in.• Water reservoir empty.• "Select/Off" button not pressed.• Delay Brew function is set.	<ul style="list-style-type: none">• Ensure power cord is securely plugged into a working outlet.• Fill water reservoir with cold water.• Press the "Select/Off" button to start brewing.• Check if "Delay Brew" light is on. If so, wait for programmed time or press "Select/Off" twice to cancel and start immediately.

Problem	Possible Cause	Solution
Coffee overflows from filter basket.	<ul style="list-style-type: none"> Too much coffee grounds used. Filter basket not seated correctly. Carafe not on heating plate or not seated correctly. Coffee maker needs decalcifying. 	<ul style="list-style-type: none"> Reduce amount of coffee grounds. Ensure filter basket is securely in place. Ensure carafe is centered on the heating plate and fully pushed in. Perform decalcification process.
Coffee tastes weak or too strong.	<ul style="list-style-type: none"> Incorrect coffee-to-water ratio. Brew strength setting. 	<ul style="list-style-type: none"> Adjust the amount of coffee grounds to your preference. Use the "Brew Strength" button for a stronger brew.
"Clean" light is on.	Mineral deposits have built up.	Perform the decalcification process as described in the "Care and Cleaning" section.

PRODUCT SPECIFICATIONS

- Model Number:** BVMCMJX41NWF
- Capacity:** 12 Cups
- Color:** Black/Silver
- Features:** Programmable, Auto Shut-Off, Grab-A-Cup Brew Pause™ Function, Timer, Cycle-Finish Chime
- Filter Type:** Reusable (also compatible with standard basket-style paper filters)
- Voltage:** 120 Volts (DC)
- Product Dimensions:** Approximately 1 x 1 x 1 inches (L x W x H) -*Note: Dimensions provided are generic, actual dimensions may vary slightly.*
- Item Weight:** Approximately 5 pounds

WARRANTY INFORMATION

Mr. Coffee products are manufactured to the highest quality standards. For specific warranty details, including duration and coverage, please refer to the warranty card included with your purchase or visit the official Mr. Coffee website. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, product registration, or to purchase replacement parts, please visit the official Mr. Coffee website or contact their customer service department. Contact information can typically be found on the product packaging or the brand's official website.

Online Support: www.mrcoffee.com

Note: Website link is for illustrative purposes. Please refer to your product's packaging for the most accurate and up-to-date support information.

Related Documents - BVMCMJX41NWF

	<p><u>Mr. Coffee 14-Cup Programmable Coffeemaker User Manual</u></p> <p>User manual for the Mr. Coffee BVMC-PC14 Series 14-Cup Programmable Coffeemaker, detailing features, operation, cleaning, and troubleshooting.</p>
	<p><u>Mr. Coffee PC12 Series 12-Cup Coffeemaker User Manual</u></p> <p>Official user manual for the Mr. Coffee PC12 Series 12-Cup Coffeemaker. Learn how to set up, operate, clean, and maintain your coffeemaker for the perfect cup of coffee.</p>
	<p><u>Mr. Coffee LMX Series 12 Cup Programmable Coffeemaker User Manual</u></p> <p>User manual for the Mr. Coffee LMX Series 12 Cup Programmable Coffeemaker, detailing setup, operation, cleaning, and maintenance for optimal coffee brewing. Features a dishwasherable design and programmable brewing.</p>
	<p><u>Mr. Coffee 12-Cup Programmable Coffeemaker User Manual</u></p> <p>This user manual provides comprehensive instructions for operating, cleaning, and maintaining your Mr. Coffee 12-Cup Programmable Coffeemaker (BVMC-EVX Series). Learn about its features, safety precautions, and troubleshooting tips to ensure optimal performance. Visit mrcoffee.com for more.</p>
	<p><u>Mr. Coffee PC12 Series 12 Cup Coffeemaker User Manual</u></p> <p>User manual for the Mr. Coffee PC12 Series 12 Cup Coffeemaker, providing instructions on setup, operation, cleaning, and maintenance. Learn how to brew coffee, use special features like Brew Now or Later, and care for your appliance.</p>
	<p><u>Mr. Coffee EHX33 Series Coffeemaker User Manual</u></p> <p>Comprehensive user manual for the Mr. Coffee EHX33 Series Coffeemaker, covering important safeguards, setup, operation, cleaning, maintenance, troubleshooting, and warranty information.</p>