

RASTAR Wrangler JL

RASTAR 1/24 Scale Wrangler JL Remote Control RC Car Instruction Manual

INTRODUCTION

This manual provides instructions for the safe and proper operation and maintenance of your RASTAR 1/24 Scale Wrangler JL Remote Control RC Car. Please read this manual thoroughly before use and retain it for future reference.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x RASTAR Jeep Wrangler JL RC Car
- 1 x Dual-Grip Remote Controller
- 1 x User Guide (this manual)

SAFETY INFORMATION

Observe the following safety guidelines to prevent injury or damage to the product:

- This product is recommended for users aged 6 years and up.
- Do not operate the RC car near people, pets, or obstacles.
- Avoid operating in wet conditions or on public roads.
- Always turn off the RC car and remote controller when not in use.
- Remove batteries from both the car and controller if storing for extended periods.
- Do not attempt to modify or disassemble the product.
- Use only recommended batteries.

SETUP

Battery Installation

The RC car and remote controller require batteries (not included) for operation.

1. RC Car Battery Installation:

Locate the battery compartment on the underside of the RC car. Use a screwdriver to open the compartment. Insert 3 x AA batteries, ensuring correct polarity (+/-). Close the compartment and secure

it with the screw.

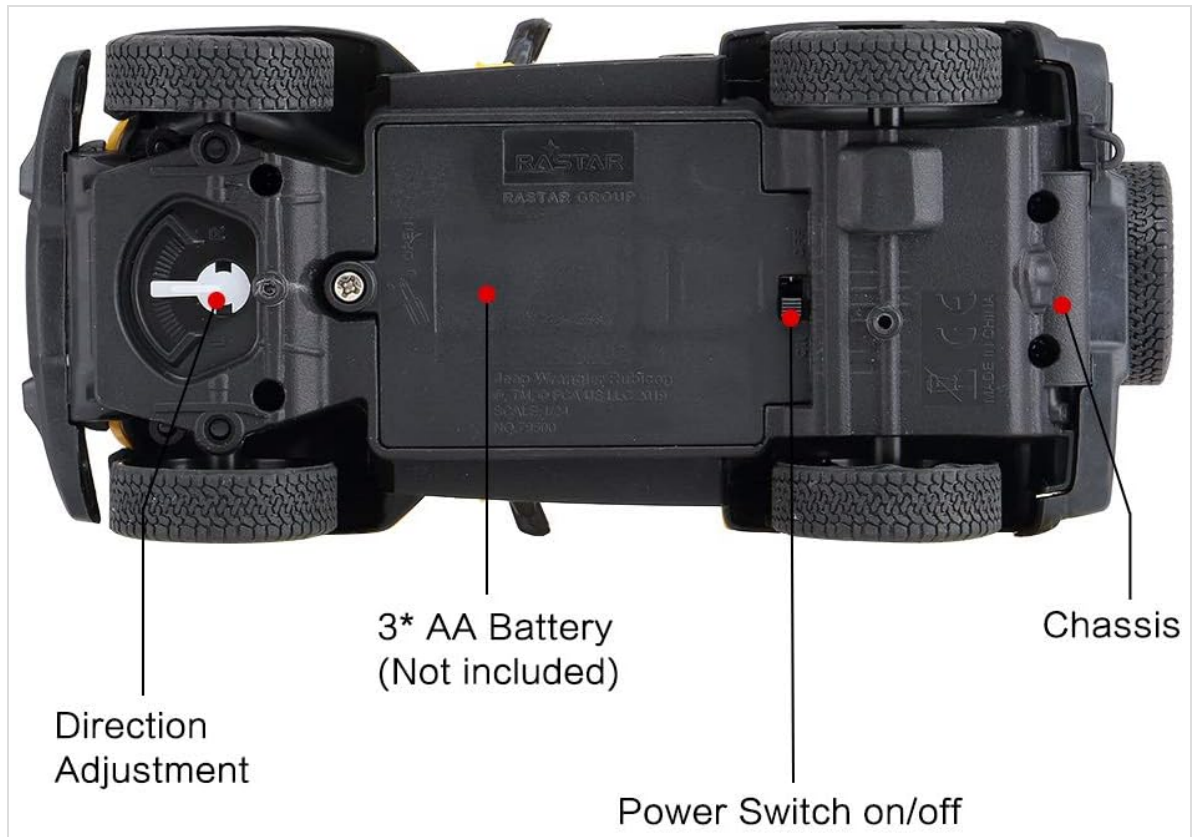


Image: Underside of the RASTAR RC car, highlighting the battery compartment for 3 AA batteries, the power switch, and direction adjustment.

2. Remote Controller Battery Installation:

Locate the battery compartment on the back of the remote controller. Use a screwdriver to open the compartment. Insert 2 x AA batteries, ensuring correct polarity (+/-). Close the compartment and secure it with the screw.



Image: The RASTAR 1/24 Scale Wrangler JL RC car in yellow, positioned next to its black dual-grip remote controller.

OPERATION

Powering On

1. Ensure batteries are correctly installed in both the RC car and the remote controller.
2. Turn on the power switch located on the underside of the RC car.
3. Turn on the power switch on the remote controller. The remote and car will automatically pair using 2.4GHz frequency.

Controlling the RC Car

The dual-grip remote controller allows for full function control:

- **Forward:** Push the left joystick forward.
- **Reverse:** Pull the left joystick backward.
- **Turn Left:** Push the right joystick left.
- **Turn Right:** Push the right joystick right.
- **Stop:** Release both joysticks to their neutral position.



Image: A top-down view of the RASTAR RC car, illustrating forward and reverse movement with arrows. The remote controller is shown at the bottom, indicating its function in controlling the car's direction.

Direction Adjustment

If the RC car does not drive straight, use the direction adjustment switch located on the underside of the car to fine-tune its alignment.

MAINTENANCE

Cleaning

- Wipe the RC car and remote controller with a soft, dry cloth.
- Do not use chemical cleaners or water, as this may damage electronic components.

Storage

- When not in use for extended periods, remove all batteries from both the RC car and the remote controller.
- Store the product in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
RC car does not move.	Batteries are low or incorrectly installed. Power switch is off.	Replace batteries in both car and remote. Ensure correct polarity. Turn on power switches.
RC car moves slowly or erratically.	Low battery power. Interference.	Replace batteries. Operate in an open area away from other electronic devices.
RC car does not steer straight.	Steering alignment needs adjustment.	Use the direction adjustment switch on the underside of the car.
Remote controller not responding.	Batteries are low or incorrectly installed. Out of range.	Replace batteries. Ensure car is within 80 feet (24 meters) of the remote.

SPECIFICATIONS

Brand: RASTAR

Model: Wrangler JL

Scale: 1:24

Material: Quality ABS plastic

Product Dimensions (L x W x H): 8.3 x 4.3 x 3.5 inches (21 x 11 x 8.8 cm)

Item Weight: 1.04 pounds

Recommended Age: 6 years and up

Functions: Forward, Reverse, Stop, Turn Left, Turn Right

Remote Range: Up to 80 feet (24 meters)

Speed: Approximately 4 mph (6.4 km/h)

Frequency: 2.4GHz (allows multi-user racing)

RC Car Batteries: 3 x AA (not included)

Remote Controller Batteries: 2 x AA (not included)



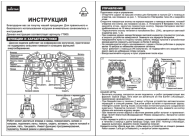 
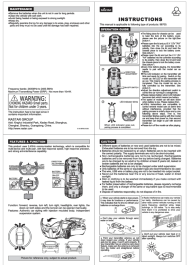 
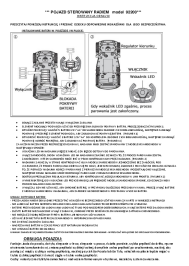 
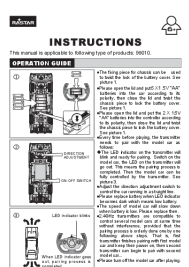 
Image: The RASTAR RC car shown from the front and side, with key dimensions (length, width, height) indicated in centimeters and inches.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official RASTAR website. RASTAR Official offers free replacements, accessories, and after-sale service.

For further assistance, you may contact the seller directly through the platform where the product was purchased.

Related Documents - Wrangler JL

	Инструкция по эксплуатации робота RASTAR 77900 Полное руководство по использованию игрушечного робота RASTAR 77900. Включает настройку, управление, функции, программирование и меры безопасности.
	RASTAR 2.4GHz Remote Control Car Instructions - Models 92000-96300 User manual and operation guide for RASTAR 2.4GHz remote control cars, including setup, features, functions, maintenance, and safety warnings for models 92000, 94500, 94600, 94900, and 96300.
	RASTAR 98700 Remote Control Car: Operation Guide and Safety Instructions Detailed instructions for the RASTAR 98700 remote control car, covering setup, operation, maintenance, and important safety precautions for safe and enjoyable play.
	Rastar RC Car 53800/98500/93300/93400 Instructions and Operation Guide Official instructions and operation guide for Rastar 1:18 scale RC cars (models 53800, 98500, 93300, 93400), covering features, functions, maintenance, and safety precautions.
	RASTAR 92200 Radio-Controlled Car Instruction Manual Comprehensive instruction manual for the RASTAR 92200 radio-controlled car, covering battery installation, pairing, operation, wheel changes, and safety guidelines.
	RASTAR 99010 Radio Control Car: Operation, Features, and Safety Instructions Comprehensive guide for the RASTAR 99010 radio control car, covering operation, features, battery installation, pairing, maintenance, and important safety precautions.



[pdf]

405178 405179 405180 Jeep Wrangler JL DE GB FR IT ES CZ PL NL SK HU 2022 indd JAMARA
Manuals jamara manuals files |||

No. 405178 yellow 2,4 GHz No. 405179 red 2,4 GHz B No. 405180 black 2,4 GHz
Jeep Wrangler JL 2,4GHz DE - Gebrauchsanleitung GB - Instruction FR - Notice IT -
Istruzione ES - Instruccin CZ - Nvod k použit PL - Instrukcja uytkowania NL -
Gebruiksaanwijzing SK - Nvod na použitie HU - Hasznlati...

lang:it score:33 filesize: 3.33 M page_count: 8 document date: 2022-05-18



[Jeep Wrangler JL 2.4GHz Fernsteuerung Anleitung](#)

Bedienungsanleitung für den Jeep Wrangler JL mit 2.4GHz Fernsteuerung von Jamara. Enthält Anleitungen zur Installation von Batterien, Komponentenübersicht und Sicherheitshinweise.

lang:it score:33 filesize: 3.07 M page_count: 8 document date: 2022-05-02



[pdf]

405181 405182 Jeep Wrangler JL Big Wheel DE GB FR IT ES CZ PL NL SK HU 2022 indd JAMARA
Manuals jamara manuals files |||

Jeep Wrangler JL Big Wheel 2,4GHz No. 405181 yellow 2,4 GHz A No. 405182 red
2,4 GHz DE - Gebrauchsanleitung GB - Instruction FR - Notice IT - Istruzione ES -
Instruccin CZ - Nvod k použit PL - Instrukcja uytkowania NL - Gebruiksaanwijzing SK
- Nvod na použitie HU - Hasznlati utasts DE - Allg...

lang:it score:32 filesize: 3.4 M page_count: 8 document date: 2022-05-18

