

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [EPOMAKER](#) /

› [EPOMAKER Ajazz i610T 61 Keys Bluetooth Mechanical Keyboard Dual Mode User Manual](#)

EPOMAKER i610T

EPOMAKER Ajazz i610T 61 Keys Bluetooth Mechanical Keyboard User Manual

Model: i610T

INTRODUCTION

The EPOMAKER Ajazz i610T is a compact 61-key mechanical keyboard designed for versatility and performance. It features dual-mode connectivity, allowing for both Bluetooth wireless and wired (Type-C) operation. This manual provides detailed instructions for setting up, operating, and maintaining your keyboard to ensure optimal performance and longevity.

Key features include N-key rollover, 17 distinct backlight effects, and a professional chip for responsive input, suitable for both gaming and general use. The ergonomic design with varying keycap heights aims to enhance typing comfort during extended use.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 x Ajazz i610T Mechanical Keyboard
- 1 x Type-C USB Cable
- 1 x User Manual (this document)

PRODUCT OVERVIEW

The Ajazz i610T features a 60% layout, providing a compact form factor while retaining essential functionalities through FN key combinations. The keyboard is equipped with mechanical switches for a tactile typing experience and a monochrome backlight.



Figure 1: Top-down view of the Ajazz i610T keyboard, showing the 61-key layout.



Figure 2: Angled view of the Ajazz i610T keyboard, highlighting its compact design.

SETUP

1. Charging the Keyboard

Before first use, it is recommended to fully charge the keyboard. Connect the supplied Type-C USB cable to the keyboard's Type-C port and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The keyboard has a 1000mAh battery capacity.

2. Wired Mode Connection

To use the keyboard in wired mode, simply connect the Type-C USB cable from the keyboard to your computer's USB port. The keyboard will be automatically detected and ready for use. In wired mode, the keyboard will also charge its internal battery.

3. Bluetooth Mode Pairing

The Ajazz i610T can connect to up to three Bluetooth devices simultaneously. Follow these steps to pair with a device:

1. Ensure the keyboard is powered on.
2. Press and hold **FN + Q**, **FN + W**, or **FN + E** for 3-5 seconds to enter pairing mode for the desired Bluetooth channel. The corresponding key (Q, W, or E) will flash rapidly, indicating it is ready to pair.

3. On your device (computer, tablet, smartphone), enable Bluetooth and search for new devices.
4. Select "Ajazz i610T" from the list of available devices.
5. Once paired, the flashing light on the Q/W/E key will become solid or turn off, indicating a successful connection.

To switch between paired Bluetooth devices, simply press **FN + Q**, **FN + W**, or **FN + E** briefly (do not hold) to select the desired channel.

OPERATING INSTRUCTIONS

1. Function Key (FN) Combinations

Due to its compact 61-key layout, many functions are accessed via the **FN** key in combination with other keys. Refer to the keycaps for secondary functions, often indicated by smaller legends.

- **FN + [1-0, -, =]**: F1-F12 functions (e.g., FN+1 for F1, FN+2 for F2, etc.)
- **FN + Q/W/E**: Switch between Bluetooth devices 1, 2, and 3.
- **FN + R**: Toggle between wired and Bluetooth modes.
- **FN + T**: Print Screen (PrtSc)
- **FN + Y**: Scroll Lock (ScrlK)
- **FN + U**: Pause Break (Pause)
- **FN + I**: Insert
- **FN + O**: Home
- **FN + P**: Page Up (PgUp)
- **FN + J**: Delete (Del)
- **FN + K**: End
- **FN + L**: Page Down (PgDn)
- **FN + WIN**: Lock/Unlock Windows key.
- **FN + Spacebar (hold for 3 seconds)**: Reset keyboard to factory defaults.

2. Backlight Control

The keyboard features a monochrome backlight with 17 different lighting effects. Use the following FN key combinations to control the backlight:

- **FN + \ \}**: Cycle through backlight effects.
- **FN + [\ {**: Decrease backlight brightness.
- **FN +] \ }**: Increase backlight brightness.
- **FN + ; \ :** Decrease backlight speed.
- **FN + ' '**: Increase backlight speed.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your keyboard.

- **Cleaning Keycaps:** Use a soft, damp cloth to wipe down keycaps. For deeper cleaning, keycaps can be carefully removed using a keycap puller (not included) and washed with mild soap and water. Ensure they are completely dry before reattaching.
- **Cleaning the Keyboard Body:** Use a soft, dry cloth to wipe the keyboard's surface. For dust

between keys, use compressed air.

- **Avoid Liquids:** Do not spill liquids on the keyboard. If a spill occurs, immediately disconnect the keyboard, turn it upside down to drain, and allow it to dry completely before attempting to use it again.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Ajazz i610T keyboard, refer to the following common solutions:

Problem	Solution
Keyboard not responding in wired mode.	<ul style="list-style-type: none">◦ Ensure the USB Type-C cable is securely connected to both the keyboard and the computer.◦ Try a different USB port on your computer.◦ Test with a different Type-C cable if available.◦ Ensure the keyboard is not in Bluetooth mode (some keyboards have a physical switch or FN combination to toggle).
Cannot connect via Bluetooth.	<ul style="list-style-type: none">◦ Ensure the keyboard is charged.◦ Make sure the keyboard is in Bluetooth pairing mode (FN+Q/W/E held for 3-5 seconds).◦ Check that Bluetooth is enabled on your device and it is discoverable.◦ Remove any previous "Ajazz i610T" pairings from your device's Bluetooth settings and try pairing again.◦ Try pairing to a different Bluetooth channel (Q, W, or E).◦ Ensure the keyboard is within the 10-meter transmission range.
Backlight not working or stuck.	<ul style="list-style-type: none">◦ Ensure the backlight brightness is not set to minimum (FN +] to increase).◦ Cycle through backlight effects using FN + \ .◦ Perform a factory reset (hold FN + Spacebar for 3 seconds).
Certain keys are not working.	<ul style="list-style-type: none">◦ Check if the Windows key is locked (FN + WIN).◦ Perform a factory reset (hold FN + Spacebar for 3 seconds).◦ Ensure the keyboard is clean and there's no debris under the keycap.

SPECIFICATIONS

Feature	Detail
Brand	EPOMAKER / Ajazz
Model	i610T

Feature	Detail
Material	ABS
Color	Black (Blue Switch variant)
Switch Type	Blue Switch (as per product title)
Interface Type	Type-C
Transmission Mode	USB Wired, Bluetooth 3.0
Number of Keys	61
Backlight	Monochrome backlight (17 kinds of light effects)
Battery Capacity	1000mAh (Lithium Ion)
Cable Length	Approx. 1.5m
Operating System Support	Windows 2000/XP/Vista/7/8/10
Item Dimensions (L*W*H)	29.1 x 10.1 x 4 cm (11.46 x 3.98 x 1.57 inches)
Item Weight	Approx. 580g (20.46 oz)

WARRANTY AND SUPPORT

EPOMAKER products are designed and manufactured to the highest quality standards. For information regarding warranty coverage and technical support, please refer to the official EPOMAKER website or contact your retailer. Keep your purchase receipt as proof of purchase for warranty claims. For further assistance, please visit the [EPOMAKER Store on Amazon](#).