

EPOMAKER i610T

Epomaker Ajazz i610T 61-Key Bluetooth Mechanical Keyboard User Manual

Model: i610T

1. INTRODUCTION

The Epomaker Ajazz i610T is a compact 61-key mechanical keyboard designed for versatility and performance. It supports both Bluetooth wireless and wired (Type-C) dual-mode connectivity, allowing connection to up to three devices simultaneously. Featuring N-key rollover and 17 distinct backlight effects, this keyboard is suitable for various applications, including gaming and professional work environments. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your Ajazz i610T keyboard.

2. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Ajazz i610T Mechanical Keyboard
- 1 x Type-C Cable
- 1 x User Manual

3. SETUP

3.1 Wired Mode Connection

1. Locate the Type-C port on the keyboard, typically on the side or back.
2. Connect one end of the provided Type-C cable to the keyboard.
3. Connect the other end of the Type-C cable to an available USB port on your computer.
4. The keyboard will automatically be recognized and function in wired mode. The keyboard will also charge its internal battery while connected via USB.

3.2 Bluetooth Wireless Mode Connection

The Ajazz i610T supports connecting to up to three different Bluetooth devices.

1. Ensure the keyboard is powered on. The power switch is usually located on the back or side of the keyboard.
2. Press **Fn + Q**, **Fn + W**, or **Fn + E** to select one of the three Bluetooth device channels. The corresponding key (Q, W, or E) will flash to indicate pairing mode.
3. On your device (computer, tablet, smartphone), enable Bluetooth and search for new devices.
4. Select "Ajazz i610T" (or similar name) from the list of available devices to pair.
5. Once paired, the flashing light on the selected key will become solid, indicating a successful connection.
6. To switch between paired devices, simply press **Fn + Q**, **Fn + W**, or **Fn + E** for the desired channel.

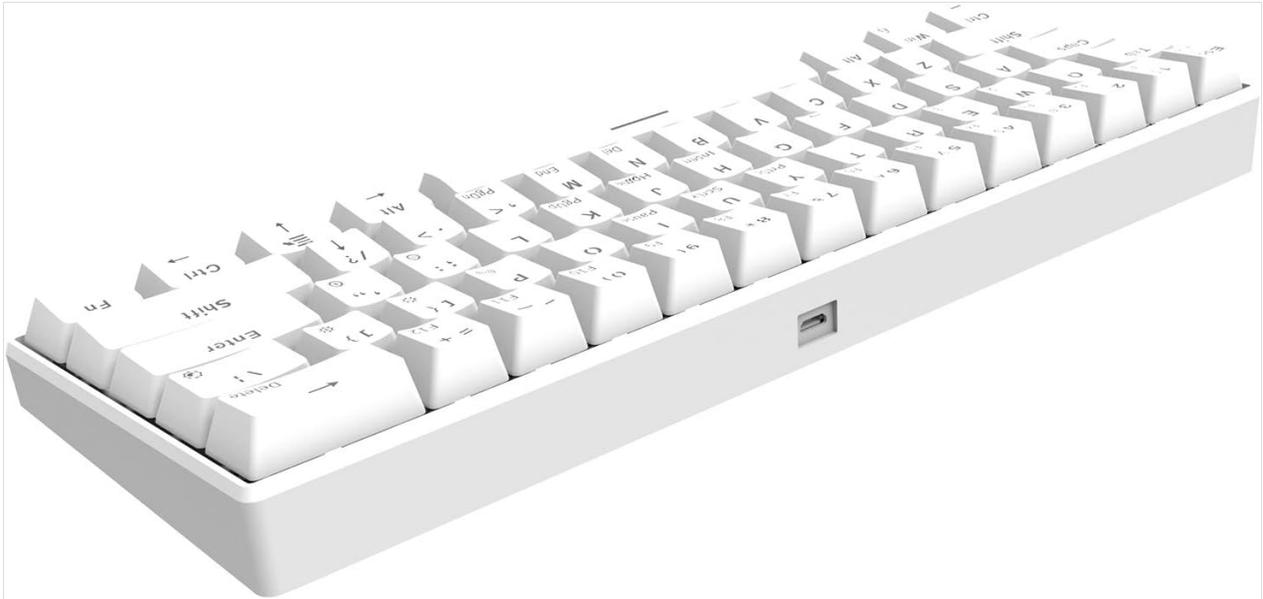


Image: Side view of the Epomaker Ajazz i610T keyboard, highlighting the Type-C port for wired connection and charging.

4. OPERATING INSTRUCTIONS

4.1 Function Key (Fn) Combinations

Due to its compact 61-key layout, many functions are accessed via the **Fn** key in combination with other keys. Refer to the keycaps for specific markings indicating secondary functions.

- **Fn + [Number Row]:** Access F1-F12 functions (e.g., Fn + 1 = F1, Fn + 2 = F2, etc.).
- **Fn + P:** Print Screen (PrtSc).
- **Fn + ;:** Scroll Lock (ScrLk).
- **Fn + ':** Pause.
- **Fn + J:** Insert.
- **Fn + K:** Home.
- **Fn + L:** Page Up (PgUp).
- **Fn + M:** Delete (Del).
- **Fn + ,:** End.
- **Fn + .:** Page Down (PgDn).
- **Fn + Arrow Keys:** Navigate (Up, Down, Left, Right).
- **Fn + Spacebar (hold for 3 seconds):** Reset to default mode or exit special modes.

4.2 Backlight Control

The keyboard features 17 monochrome backlight effects. Specific key combinations are used to cycle through

these effects and adjust brightness.

- **Fn + \|**: Cycle through different backlight effects.
- **Fn + [**: Decrease backlight brightness.
- **Fn +]**: Increase backlight brightness.

4.3 N-Key Rollover (NKRO)

The Ajazz i610T supports N-Key Rollover, meaning all keys pressed simultaneously will be registered accurately. This feature is particularly beneficial for fast typists and gamers, preventing ghosting or missed key presses.



Image: Top-down angled view of the Epomaker Ajazz i610T keyboard, showcasing its compact 61-key layout and keycap legends.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your keyboard.

- **Cleaning:** Use a soft, dry cloth to wipe the keyboard surface. For deeper cleaning, use a can of compressed air to remove dust and debris from between the keycaps. For stubborn stains, a slightly

damp cloth with mild soap can be used, ensuring no liquid enters the keyboard.

- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Spills:** Keep liquids away from the keyboard to prevent damage to internal components.
- **Cable Care:** Avoid bending or twisting the Type-C cable excessively to prevent internal wire damage.

6. TROUBLESHOOTING

If you encounter issues with your Ajazz i610T keyboard, refer to the following common solutions:

Problem	Possible Solution
Keyboard not responding in wired mode.	<ul style="list-style-type: none">◦ Ensure the Type-C cable is securely connected to both the keyboard and the computer.◦ Try a different USB port on your computer.◦ Test with a different Type-C cable if available.
Keyboard not connecting via Bluetooth.	<ul style="list-style-type: none">◦ Ensure the keyboard is powered on and in Bluetooth pairing mode (Fn + Q/W/E, flashing light).◦ Make sure Bluetooth is enabled on your device.◦ Remove any previous pairings of the keyboard from your device's Bluetooth settings and try pairing again.◦ Ensure the keyboard battery has sufficient charge.◦ Try pairing to a different Bluetooth channel (Q, W, or E).
Backlight not working or stuck.	<ul style="list-style-type: none">◦ Adjust backlight brightness using Fn + [or Fn +].◦ Cycle through backlight effects using Fn + \ . ◦ Ensure the keyboard battery has sufficient charge.
Some keys are not responding.	<ul style="list-style-type: none">◦ Clean around the affected keycaps to remove any debris.◦ If using wireless mode, try connecting via wired mode to rule out Bluetooth interference or battery issues.◦ Perform a factory reset if available (refer to specific keyboard documentation if provided, or try Fn + Spacebar for 3 seconds).

7. SPECIFICATIONS

Feature	Detail
Brand	EPOMAKER / Ajazz
Model	i610T
Layout	61 Keys (60% Compact)

Feature	Detail
Connectivity	Bluetooth 3.0 Wireless / USB Type-C Wired Dual Mode
Backlight	Monochrome Backlight (17 effects)
Key Rollover	N-Key Rollover (NKRO)
Switch Type	Mechanical (Black Switch, White color variant)
Material	ABS
Battery Capacity	1000mAh Lithium Ion
Cable Length	Approx. 1.5m
Operating System Support	Windows 2000/XP/Vista/7/8/10
Product Dimensions (L*W*H)	29.1 x 10.1 x 4 cm (11.46 x 3.98 x 1.57 in)
Product Weight	Approx. 580g (20.46 oz)



Image: Angled view of the Epomaker Ajazz i610T keyboard, demonstrating its compact form factor.

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact the manufacturer directly through their official website. Keep your proof of purchase for warranty claims.

