

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [Glitzhome](#) /

> Glitzhome 2-Tier Stone Like Outdoor Water Fountain with Birds Instruction Manual

Glitzhome B089N4SW78

Glitzhome 2-Tier Stone Like Outdoor Water Fountain with Birds Instruction Manual

Model: B089N4SW78

INTRODUCTION

Thank you for choosing the Glitzhome 2-Tier Stone Like Outdoor Water Fountain with Birds. This decorative fountain is designed to enhance your outdoor space with its rustic charm and soothing water sounds. Crafted from durable resin, it features a 2-tier cascading design with realistic faux pebbles texture and charming bird accents. This manual provides essential information for safe setup, operation, and maintenance to ensure long-lasting enjoyment of your fountain.

SAFETY INFORMATION

- Read all instructions carefully before assembly and operation.
- Keep the power cord away from high-traffic areas and ensure it is not pinched or damaged.
- Always disconnect the power supply before performing any maintenance or cleaning.
- Ensure the fountain is placed on a level, stable surface to prevent tipping.
- Do not operate the pump without water. This can damage the pump.
- During freezing temperatures, drain the fountain completely, disconnect the pump, and store it indoors to prevent damage.
- This product is for outdoor use only.

PACKAGE CONTENTS

Please check to ensure all components are present and undamaged:

- Fountain Base (Pedestal)
- Lower Basin
- Upper Tier with Birds

- Submersible Pump (UL listed)
- Power Cord and Adapter

SETUP INSTRUCTIONS

- 1. Unpack Components:** Carefully remove all parts from the packaging and place them on a soft, clean surface.
- 2. Assemble the Fountain:**
 - Place the fountain base (pedestal) on your desired level outdoor surface.
 - Carefully place the lower basin onto the top of the pedestal, ensuring it is stable and centered.
 - Position the upper tier onto the lower basin. Ensure the water flow channels align correctly.
- 3. Install the Pump:**
 - Locate the submersible pump. Attach the pump's tubing to the water outlet on the underside of the upper tier.
 - Place the pump inside the lower basin, ensuring it is fully submerged when the fountain is filled with water.
 - Route the power cord out of the fountain, ensuring it exits through the designated opening to prevent pinching.
- 4. Fill with Water:** Fill the lower basin with distilled water until the pump is completely submerged. Do not overfill. The water capacity is approximately 1.2 gallons.
- 5. Connect Power:** Plug the power cord into a standard 110V~120V 60HZ electrical outlet. Ensure the outlet is protected by a Ground Fault Circuit Interrupter (GFCI).



Image: The Glitzhome 2-Tier Stone Like Outdoor Water Fountain with Birds, showcasing its faux pebbles texture, relaxing water flow, and UL Listed pump and adapter.




Concrete



Grass



Stone

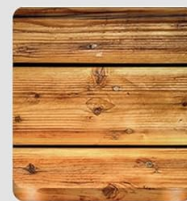

Wood

Image: A diagram illustrating the dimensions of the Glitzhome 2-Tier Stone Like Outdoor Water Fountain, measuring 15.25 inches in diameter and 24.50 inches in height.

OPERATING INSTRUCTIONS

1. **Start the Fountain:** Once plugged in, the pump will begin to circulate water, creating a gentle cascading effect.
2. **Adjust Water Flow:** The pump may have an adjustable flow rate switch. Adjust it to achieve your desired water sound and flow intensity.
3. **Monitor Water Level:** Regularly check the water level, especially during hot weather, as water evaporates. Refill as needed to keep the pump fully submerged.
4. **Turn Off:** To turn off the fountain, simply unplug it from the electrical outlet.

Your browser does not support the video tag.

Video: An official Glitzhome video demonstrating the 2-tier bird fountain in operation, showcasing its water flow and design.

MAINTENANCE

- **Regular Cleaning:** Clean the fountain periodically to prevent algae buildup and mineral deposits. Use a

soft brush and mild soap with water. Rinse thoroughly.

- **Pump Cleaning:** Disconnect the pump and disassemble it according to its specific instructions (usually involves removing the cover and impeller). Clean any debris or mineral buildup from the impeller and housing.
- **Water Quality:** Use distilled water to minimize mineral buildup. If using tap water, consider adding a fountain algaecide or clarifier.
- **Winterization:** Before the first frost, completely drain all water from the fountain and pump. Disconnect the pump and store it in a dry, frost-free location. Clean and cover the fountain base, or bring it indoors if possible, to protect it from harsh winter conditions.

Your browser does not support the video tag.

Video: An official Glitzhome video highlighting the faux pebbles textured polyresin outdoor birdbath fountain, demonstrating its aesthetic and functionality.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fountain not running	Not plugged in; low water level; clogged pump; power outage.	Check power connection; add water; clean pump; check circuit breaker.
Water flow is weak	Low water level; clogged pump; kinked tubing; pump flow adjustment.	Add water; clean pump; straighten tubing; adjust pump flow switch.
Excessive splashing	Water level too high; pump flow too strong.	Reduce water level slightly; adjust pump flow to a lower setting.
Algae buildup	Sunlight exposure; stagnant water.	Clean fountain regularly; use distilled water; consider algaecide.

SPECIFICATIONS

Color: Stone Like

Material: Resin

Product Dimensions: 15.25"L x 15.25"W x 24.5"H

Item Weight: 15.4 Pounds

Power Source: Corded Electric

Pump Flow Rate: Max 63.3 GPH (Gallons Per Hour)

Water Capacity: 1.2 Gallon

Special Feature: Durable, Lightweight, Quiet Submersible Pump

WARRANTY AND SUPPORT

This Glitzhome fountain comes with a **one-year manufacturer warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage due to improper installation, misuse, neglect, freezing temperatures, or unauthorized repairs.

For warranty claims, technical support, or replacement parts, please contact Glitzhome customer service.

Keep your proof of purchase for all warranty inquiries.

For further assistance, please visit the [Glitzhome Store on Amazon](#).