

Cino 78bfe460-f79e-4d69-a333-1c6268f8a996

CINO NINA Espresso Machine User Manual

Model: 78bfe460-f79e-4d69-a333-1c6268f8a996

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your CINO NINA Espresso Machine. Keep this manual for future reference.

- **Electrical Safety:** Do not immerse the appliance, power cord, or plug in water or other liquids. Ensure the voltage matches your local power supply.
- **Hot Surfaces:** The machine produces hot water and steam. Avoid contact with hot surfaces and steam to prevent burns.
- **Children:** This appliance is not intended for use by children. Keep the machine and its cord out of reach of children.
- **Maintenance:** Unplug the machine before cleaning and when not in use. Do not operate with a damaged cord or plug.
- **Intended Use:** Use the machine only for its intended purpose of brewing espresso with Nespresso compatible capsules.

2. PRODUCT OVERVIEW

The CINO NINA Espresso Machine is a fully automatic single-serve coffee maker designed for Nespresso compatible capsules, featuring an automatic operation and a reusable filter type. It also includes a milk frother for various coffee beverages.



Figure 2.1: Side view of the CINO NINA Espresso Machine in white. This image shows the compact design, the water reservoir on the left, and the brewing unit with a cup placed underneath on the right.

Components:

- Water Tank (removable)
- Capsule Compartment
- Brewing Lever/Handle
- Coffee Outlet
- Drip Tray (removable)
- Milk Frother (included component)
- Power Button
- Brew Buttons (Espresso, Lungo)

3. SETUP AND FIRST USE

3.1 Unpacking

Carefully remove all packaging materials. Ensure all components listed in Section 2 are present and undamaged. Place the machine on a stable, flat, heat-resistant surface, away from water sources.

3.2 Initial Cleaning

1. Wash the water tank, drip tray, and milk frother (if detachable) with warm, soapy water. Rinse thoroughly and dry.
2. Wipe the exterior of the machine with a damp cloth.

3.3 Filling the Water Tank

1. Remove the water tank from the back of the machine.
2. Fill the tank with fresh, cold drinking water up to the MAX fill line. Do not use hot water or other liquids.
3. Place the water tank back onto the machine, ensuring it is securely seated.

3.4 Priming the Machine (First Use)

1. Plug the machine into a grounded electrical outlet.
2. Press the Power button to turn on the machine. The indicator lights will blink as the machine heats up.
3. Place a large cup (at least 8 oz) under the coffee outlet.
4. Once the lights stop blinking and remain solid, press any brew button (e.g., Espresso button) without a capsule inserted.
5. Allow the machine to dispense water until the tank is empty. This cleans the internal system and primes the pump.
6. Repeat this process 2-3 times to ensure thorough cleaning and priming.

4. OPERATING INSTRUCTIONS

4.1 Brewing Espresso

1. Ensure the water tank is filled with fresh water.
2. Turn on the machine and wait for it to heat up (indicator lights solid).
3. Lift the brewing lever to open the capsule compartment.
4. Insert a Nespresso compatible capsule into the compartment.
5. Close the brewing lever firmly.
6. Place your desired cup on the drip tray under the coffee outlet.
7. Press the desired brew button (e.g., Espresso for a short shot, Lungo for a longer shot). The machine will automatically stop when the brewing cycle is complete.
8. After brewing, lift the brewing lever again to eject the used capsule into the internal collection bin.
9. Close the lever.

4.2 Using the Milk Frother

Refer to the specific instructions provided with your milk frother accessory for detailed operation. Generally, fill the frother with milk, select the desired frothing option (hot or cold foam), and add the frothed milk to your espresso.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your espresso machine.

5.1 Daily Cleaning

- **Drip Tray:** Empty and rinse the drip tray after each use or when the indicator floats up.
- **Used Capsule Container:** Empty the used capsule container daily or when full. Rinse with warm water.
- **Water Tank:** Rinse the water tank daily and refill with fresh water.
- **Exterior:** Wipe the exterior of the machine with a soft, damp cloth.

5.2 Descaling

Descaling is crucial to remove mineral deposits and maintain machine performance. The frequency

depends on water hardness and usage, typically every 3-6 months.

1. Refer to the descaling solution manufacturer's instructions for proper dilution.
2. Empty the water tank and fill it with the descaling solution.
3. Place a large container under the coffee outlet.
4. Run several brewing cycles without a capsule until the water tank is empty.
5. Rinse the water tank thoroughly and fill with fresh water.
6. Run several cycles with fresh water to rinse out any remaining descaling solution.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet issue.	Check power cord connection; try a different outlet.
No coffee dispenses.	Water tank empty; machine not primed; clogged nozzle.	Fill water tank; perform priming cycle; descale machine.
Coffee is too weak/watery.	Incorrect capsule; machine needs descaling.	Ensure capsule is properly inserted; descale machine.
Water leaking from machine.	Water tank not seated correctly; drip tray full.	Ensure water tank is firmly in place; empty drip tray.

7. SPECIFICATIONS

Brand: Cino

Model: 78bfe460-f79e-4d69-a333-1c6268f8a996

Color: White

Special Feature: Automatic

Coffee Maker Type: Espresso Machine

Filter Type: Reusable

Specific Uses For

Product: Espresso

Included Components: Milk Frother

Operation Mode: Fully Automatic

UPC: 700306913768

ASIN: B089N7JWM1

Date First Available: June 3, 2020

8. WARRANTY AND SUPPORT

Your CINO NINA Espresso Machine comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact Cino customer service. Contact information can typically be found on the product packaging or the official Cino website.

Note: Always provide your product model number (78bfe460-f79e-4d69-a333-1c6268f8a996) and ASIN (B089N7JWM1) when contacting support for faster service.

© 2024 Cino. All rights reserved.

Related Documents - 78bfe460-f79e-4d69-a333-1c6268f8a996

	<p>Breville Choc & Cino LMF200 Milk Frother Instruction Manual</p> <p>Comprehensive instruction manual for the Breville Choc & Cino milk frother (Model LMF200), covering safety guidelines, component identification, operation instructions, milk frothing guide, cleaning and storage, troubleshooting tips, and contact information.</p>
	<p>Cino FuzzyScan Bar Code Scanner Quick Start Guide</p> <p>A quick start guide for the Cino FuzzyScan Bar Code Scanner family, detailing its features, operation modes, and interface controls for various series including A, F, and L.</p>
	<p>Cino FuzzyScan Bluetooth Cordless Image Scanner Quick Start Guide</p> <p>A quick start guide for the Cino FuzzyScan Bluetooth Cordless Image Scanner, detailing setup, connection modes (PAIR, PICO, HID, SPP), and operational features like out-of-range scanning and batch scanning.</p>
	<p>Glass Basin Installation Manual and Care Guide</p> <p>Comprehensive guide for installing and maintaining glass basins, including dimensions, installation steps, and cleaning recommendations.</p>