

Bush Furniture M6SL6078HCBK

Bush Business Furniture Move 60 Series 60-inch Height Adjustable L Shaped Standing Desk Instruction Manual

1. PRODUCT OVERVIEW

The Bush Business Furniture Move 60 Series L Shaped Standing Desk is designed to provide an ergonomic and adaptable workspace. This electric sit-stand desk allows for easy transitions between sitting and standing positions, promoting a healthier work environment. It features a durable construction suitable for a busy professional setting.

Key Features:

- **Ergonomic Comfort:** Promotes a healthy and productive workspace by allowing easy transitions between sitting and standing.
- **Instant Adjustability:** Electric height adjustment from 27 to 46.7 inches with a simplified control panel.
- **Memory Presets:** Two customizable presets to save preferred seated and standing heights.
- **Anti-Collision Sensor:** Automatically stops movement when an object is detected, enhancing safety.
- **Spacious and Durable:** 60W x 78D assembled dimensions with a 200-pound weight capacity, supported by 16-gauge steel legs.
- **Thermally Fused Laminate Surface:** Protects against scratches, stains, and other damage.
- **Wire Management:** Integrated grommets for organized cable routing.



Figure 1.1: Bush Business Furniture Move 60 Series L Shaped Standing Desk (Hansen Cherry with Black Base).



Figure 1.2: Key features and dimensions of the Move 60 Series L Shaped Standing Desk.

Product Video:

Your browser does not support the video tag.

Video 1.1: Official overview of the Bush Business Furniture Move 60 Collection, showcasing its features and benefits.

2. SETUP INSTRUCTIONS

Careful assembly is required for proper function and safety. It is recommended that two people assemble this desk.

2.1 Unpacking

1. Carefully open the packaging and remove all components.
2. Verify that all parts listed in the assembly manual (not included in this document) are present and undamaged.

3. Keep packaging materials until assembly is complete to prevent loss of small parts.

2.2 Assembly

1. Refer to the detailed assembly manual provided with your product for step-by-step instructions.
2. Attach the desk legs to the tabletop using the provided hardware. Ensure all connections are secure.
3. Connect the motor control unit and cables as indicated in the assembly manual.
4. Position the desk in its desired location, ensuring adequate space for height adjustment.

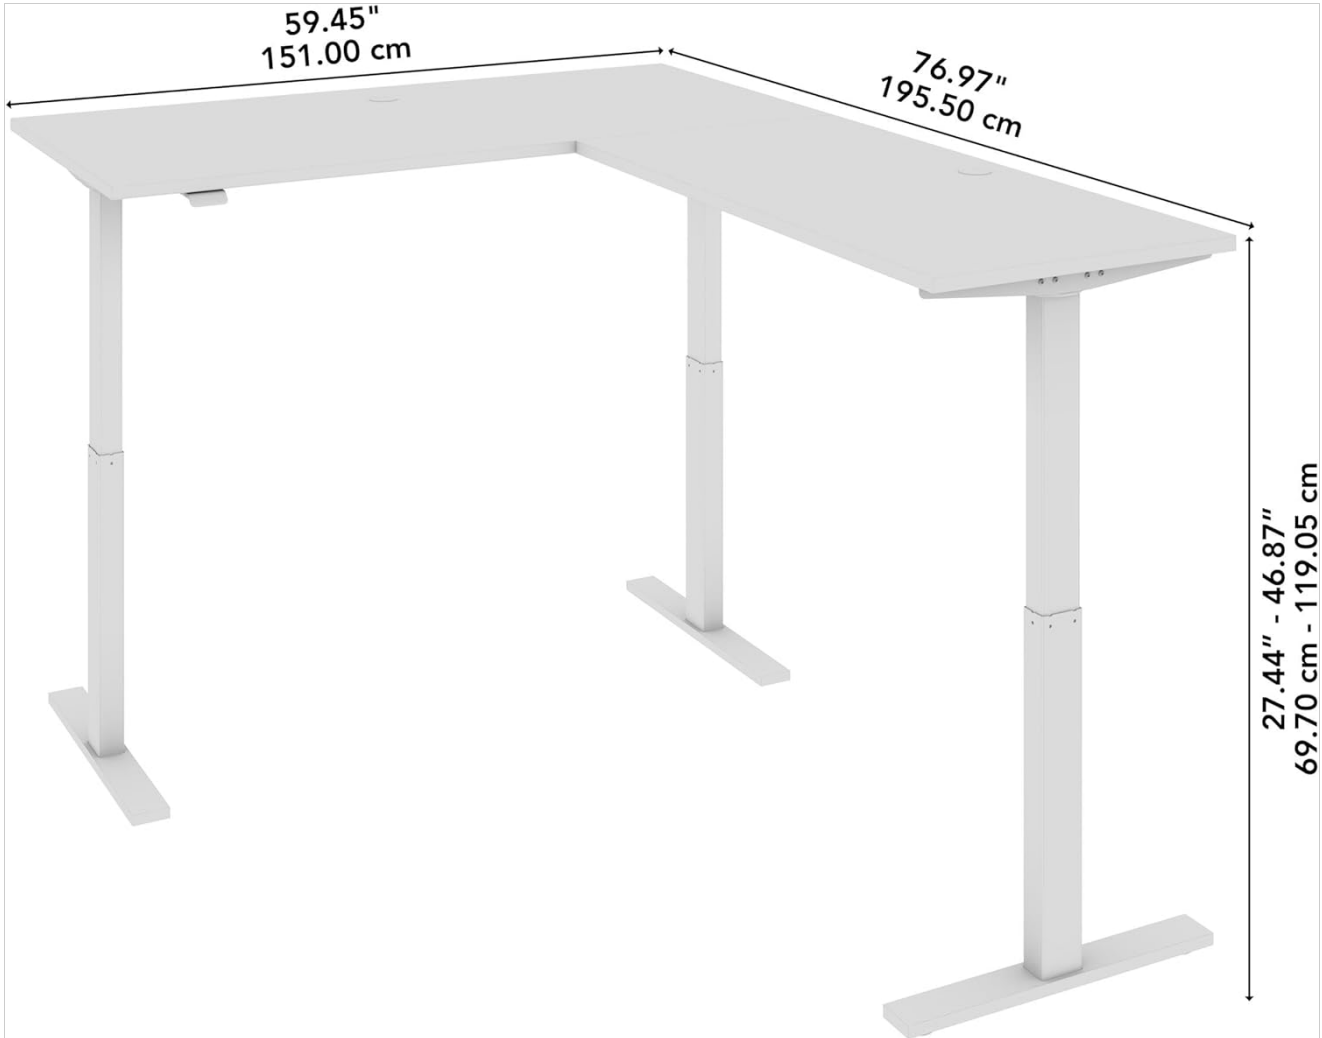


Figure 2.1: Product dimensions for planning your workspace.

2.3 Power Connection

1. Plug the 10-foot power cord into a standard electrical outlet.
2. Ensure the power cord is routed safely to avoid tripping hazards and is not pinched by moving parts of the desk.

3. OPERATING INSTRUCTIONS

The Move 60 Series desk features an intuitive control panel for height adjustment and memory functions.



Figure 3.1: Desk control panel for height adjustment.

3.1 Adjusting Height

- To raise the desk, press and hold the 'Up' arrow button on the control panel.
- To lower the desk, press and hold the 'Down' arrow button on the control panel.
- Release the button when the desired height is reached. The digital display will show the current height.

3.2 Using Memory Presets

The desk allows you to save two preferred height settings for quick recall.

1. Adjust the desk to your desired seated height using the 'Up'/'Down' buttons.
2. Press and hold one of the memory preset buttons (e.g., '1' or '2') until the display confirms the setting is saved.
3. Repeat for your desired standing height with the other preset button.
4. To recall a saved height, press and **hold** the corresponding preset button. The desk will move to the saved height and stop when the button is released or the position is reached. Note that the button must be held down during movement.

3.3 Anti-Collision Sensor

The desk is equipped with an anti-collision sensor that detects obstacles in its path during height adjustment. If an object is detected, the desk will automatically stop movement to prevent damage or injury.

- Ensure the area above and below the desk is clear before adjusting the height.
- If the sensor activates, remove the obstruction and resume adjustment.

4. MAINTENANCE

To ensure the longevity and appearance of your desk, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the desk surface with a damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the thermally fused laminate finish.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight.
- **Cable Management:** Regularly organize cables using the integrated grommets to prevent tangling and interference with desk movement.

5. TROUBLESHOOTING

If you encounter any issues with your desk, refer to the following troubleshooting guide:

Issue	Possible Cause	Solution
Desk does not move.	Power cord disconnected, motor error, or anti-collision sensor activated.	Check power connection. Ensure no obstructions are present. Unplug and replug the desk to reset the motor control unit.
Preset buttons require holding to reach height.	This is a design feature of the Move 60 Series for safety.	Continue to hold the preset button until the desired height is reached or the desk stops.
Anti-collision sensor activates unexpectedly.	Minor vibrations or slight contact with an object.	Ensure the desk area is completely clear. If the issue persists without visible obstruction, contact customer support.
Electronic devices on desk experience interference during movement.	Electromagnetic interference (EMI) from the motor control unit.	Relocate sensitive electronics away from the center underside of the desk, or apply EMI shielding (e.g., aluminum foil) between the control unit and the device.

6. SPECIFICATIONS

Feature	Detail
Brand	Bush Furniture
Model Number	M6SL6078HCBK
Shape	L-Shape

Feature	Detail
Desk Design	Standing Desk
Product Dimensions (D x W x H)	76.97"D x 59.45"W x 27.44"H
Color	Hansen Cherry (Top), Black (Base)
Base Material	Metal
Top Material Type	Engineered Wood
Finish Type	Hansen Cherry (Thermally Fused Laminate)
Special Feature	Adjustable, Electric
Item Weight	155 Pounds
Tabletop Thickness	0.75 Inches
Minimum Height	27 Inches
Maximum Height	46.7 Inches
Maximum Weight Recommendation	200 Pounds
Required Assembly	Yes
Recommended Number of People for Assembly	2
UL Listed	Yes

7. WARRANTY INFORMATION

This Bush Business Furniture Move 60 Series L Shaped Standing Desk is backed by a **5 Year Manufacturer's Warranty**.

For specific details regarding warranty coverage, terms, and conditions, please refer to the product description on the store page or contact Bush Furniture customer support directly.

8. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report a missing or damaged part, please contact Bush Furniture customer support.

Contact information can typically be found on the manufacturer's website or within the original product packaging.