

[Manuals.plus](#) /

> [NKF](#) /

> NS-RC4NA-14 Remote Control for Insignia TV Remote - Effortless Control Various for Insignia TV NS-19ED200NA14 NS-22E400NA14 NS-24E400NA14 NS-32E2000A14 NS-39D400NA14 NS-46E440NA14 NS-50D400NA14

NKF NS-RC4NA-14

NS-RC4NA-14 Remote Control for Insignia TV

Model: NS-RC4NA-14

INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your NS-RC4NA-14 Remote Control for Insignia TV. Please read this manual thoroughly before use to ensure proper functionality and longevity of the device.

SETUP

Battery Installation

The remote control requires two AAA 1.5V alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

NKF

ABS Material No Programming or Set Up Required.

Insert 2 New 1.5V AAA Alkaline Batteries to replace your original remote control perfectly.

(Not Included Batteries)



ABS MATERIAL



Figure 1: Battery installation diagram. The image displays the rear of the remote with the battery cover removed, showing the correct orientation for inserting two AAA batteries.

OPERATING INSTRUCTIONS

This remote control is designed for immediate use with compatible Insignia TV models without requiring any programming or pairing. Simply point the remote at your TV and press the desired button.

Button Functions



Figure 2: Remote Control Button Layout. This image illustrates the front of the remote control, highlighting and labeling key buttons such as TV power, number keys, menu, exit, info, volume, channel, fast play, and skip.

Table 1: Remote Control Button Functions

Button	Function
Power (Red Button)	Turns the TV on or off.
INPUT	Selects the input source (HDMI, AV, etc.).
Number Keys (0-9)	Direct channel selection.
MENU	Accesses the TV's main menu.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menus and options.
ENTER	Confirms selections.

Button	Function
EXIT	Exits the current menu or screen.
INFO	Displays program information.
VOL +/-	Adjusts the volume level.
MUTE	Mutes or unmutes the TV audio.
CH ^/v	Changes channels up or down.
SLEEP	Sets the sleep timer.
FAVORITE	Accesses favorite channels.
MTS/SAP	Selects audio language or SAP.
PICTURE	Adjusts picture settings.
Media Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip)	Controls media playback functions.

THE REMOTE DISTANCE IS UP TO 10M/33F

NKF

(Actual remote distance depends on the model of your TV)



Figure 3: Remote in use with a smart TV. This image demonstrates the remote control being used to navigate a smart TV interface, highlighting its intuitive access to live TV and applications.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and corrosion. Store in a cool, dry place.
- **Avoid Damage:** Do not drop the remote control or expose it to extreme temperatures, humidity, or direct sunlight.

TROUBLESHOOTING

Table 2: Common Issues and Solutions

Problem	Possible Cause	Solution
Remote not working.	Dead or incorrectly installed batteries.	Replace batteries with new AAA 1.5V alkaline batteries, ensuring correct polarity (+/-).
Remote range is poor.	Weak batteries; Obstruction between remote and TV; Remote sensor on TV is blocked.	Replace batteries. Ensure a clear line of sight to the TV's IR sensor. Remove any obstructions.
Specific buttons not responding.	Button stuck or damaged; Remote not compatible with all TV functions.	Check if the button is physically stuck. This remote is a direct replacement for NS-RC4NA-14 and should work for listed Insignia TV models. If issues persist, contact support.

SPECIFICATIONS

- **Model:** NS-RC4NA-14
- **Brand:** NKF
- **Compatible Devices:** Insignia Televisions (various models including NS-19ED200NA14, NS-22E400NA14, NS-24E400NA14, NS-32E2000A14, NS-39D400NA14, NS-46E440NA14, NS-50D400NA14, etc.)
- **Power Source:** 2 x AAA 1.5V Alkaline Batteries (not included)
- **Material:** High-quality ABS
- **Dimensions:** 6.69 x 1.98 x 0.82 inches (approximately)
- **Item Weight:** 2.08 ounces (approximately)
- **Special Feature:** No Programming Required
- **Color:** Black
- **Max Number of Supported Devices:** 1 (Television)

NKF



Simple and intuitive - Quickly access your favorite live TV and your most used applications from the main menu.

Figure 4: Remote Control Dimensions. This image provides a visual representation of the remote control's length, width, and thickness, with measurements indicated.

WARRANTY AND SUPPORT

This product is designed for durability and reliability. For any issues or inquiries, please refer to the seller's return policy or contact the manufacturer directly through their official channels. The product is built with high-quality ABS material for long-term worry-free use.

For further assistance, please contact your point of purchase or visit the NKF Store on Amazon [NKF Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Which button on the NS-RC4NA-14 remote is used to show the Guide or list of TV channels for the Insignia NS-39D400NA14 TV?

Based on the manual for the NS-RC4NA-14 remote control, there is no dedicated button labeled "Guide." To view a list of channels or navigate programming on your Insignia NS-39D400NA14 TV, please try the following:FAVORITE...

[Read full answer](#)