

[Manuals.plus](#) /

› [Polly Pocket](#) /

› Polly Pocket Unicorn Surprise Party Playset (GVL88) Instruction Manual

Polly Pocket GVL88

Polly Pocket Unicorn Surprise Party Playset (GVL88) Instruction Manual

INTRODUCTION

Welcome to the magical world of the Polly Pocket Unicorn Surprise Party Playset! This manual provides comprehensive instructions for the assembly, operation, and care of your new playset. Designed for children aged 4 and up, this playset offers a variety of interactive features and over 25 surprises to discover.

SAFETY INFORMATION

WARNING: Not suitable for children under 36 months due to small parts which may present a choking hazard.

Please ensure all packaging materials are removed before giving the toy to a child. Adult supervision is recommended during play, especially during the initial unboxing of surprises.

PACKAGE CONTENTS

Your Polly Pocket Unicorn Surprise Party Playset includes:

- 1 Unicorn Surprise Party Playset (GVL88)
- 2 Micro Dolls (Polly and Lila)
- Over 25 surprise accessories (including 2 unicorns, a carriage, a dragon, 2 swings, a balloon stand, a necklace, a ring, 2 crowns, 2 princess skirts, 2 lollipops, and more)
- 1 Sticker sheet with Polly Stick technology



Image: The Polly Pocket Unicorn Surprise Party Playset as it appears in its retail packaging.

SETUP INSTRUCTIONS

1. **Unbox the Playset:** Carefully remove the playset and all accessories from the packaging.
2. **Activate the Confetti Surprise:** Locate the pull tab on the playset. Gently pull the tab to release colorful confetti and reveal over 25 hidden surprises. Some surprises are individually wrapped for an exciting unboxing experience.



Image: A hand pulling the tab on the unicorn playset to initiate the confetti surprise.

3. **Open the Playset:** Unclassp the playset to reveal the interior play areas, including the enchanting castle, inflatable house, rainbow swing, and more.

4. **Apply Polly Stick Stickers:** Use the included sticker sheet to place Polly Stick stickers on any flat surface within the playset where you want your dolls to stand securely. The dolls will adhere to these stickers.

OPERATING INSTRUCTIONS

Explore the various interactive features of your Unicorn Surprise Party Playset:

- **Bouncing Fun:** Place a micro doll on the designated bouncing area. Press the lever or platform to make the doll bounce.



Image: A micro doll actively bouncing on the playset's interactive platform.

- **Rainbow Swing:** Seat micro dolls on the rainbow swing. Gently push the swing to make them sway back and forth.



Image: Two micro dolls enjoying the rainbow-themed seesaw swing.

- **Cloud Ride:** Position a micro doll on the rainbow cloud. Move the cloud along its track for a scenic ride above the castle.



Image: A micro doll on the cloud accessory, moving along the rainbow track.

- **Castle Exploration:** Open the enchanting castle doors to reveal a throne room and bedroom for the micro dolls.



Image: The open castle section of the playset, featuring a throne and bedroom.

- **Accessory Interaction:** Utilize the various surprise accessories to enhance playtime. Attach them to designated spots, have dolls hold them, or create new scenarios.
- **Unicorn River Float:** Place the inflatable unicorn accessory in the river area and have a micro doll float along.

STORAGE AND PORTABILITY

The playset is designed for easy storage and transport:

- **Closing the Playset:** Ensure all micro dolls and accessories are securely placed inside the playset. Close the two halves of the unicorn and fasten the clasp.
- **Using the Strap:** Attach the removable strap to the designated loops on the playset for convenient carrying. The colorful wings can also be opened for a decorative touch.

MAINTENANCE

To ensure the longevity of your Polly Pocket playset:

- **Cleaning:** Wipe the playset and accessories with a damp cloth. Do not immerse in water. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the playset in a clean, dry place away from direct sunlight and extreme temperatures.

- **Polly Stick Care:** If the Polly Stick stickers lose their adherence, gently clean them with a damp cloth to remove dust or debris. Allow them to air dry completely.

TROUBLESHOOTING

- **Small Parts Lost:** Due to the micro size of the accessories, it is recommended to play on a contained surface to prevent loss. Always store all pieces inside the playset when not in use.
- **Dolls Not Standing:** Ensure the Polly Stick stickers are clean and properly applied to a flat surface. Press the doll firmly onto the sticker. If the sticker is worn, use a fresh one from the sheet or clean the existing one.
- **Playset Not Closing:** Check that all accessories and dolls are correctly placed within the playset and not obstructing the closing mechanism.

SPECIFICATIONS

Feature	Detail
Brand	Polly Pocket
Model Number	GVL88
Manufacturer	Mattel
Material Type	Plastic
Color	Purple - Unicorn Surprises
Item Dimensions (L x W x H)	10.1 x 36 x 30.8 cm
Item Weight	500 Grams
Number of Pieces	30
Recommended Minimum Age	48 months (4 years)
Recommended Maximum Age	1188 months (99 years)
Assembly Required	No

WARRANTY INFORMATION

This product comes with a 2-year manufacturer's warranty. Please retain your proof of purchase for any warranty claims. For detailed warranty terms and conditions, refer to the information provided by the manufacturer or contact customer support.

CUSTOMER SUPPORT

For further assistance, questions, or to report any issues with your Polly Pocket Unicorn Surprise Party Playset, please contact Mattel customer service. Contact information can typically be found on the product packaging or the official Mattel website.

