

Moyu XPB08-F2

Moyu XPB08-F2 Portable Foldable Washing Machine User Manual

Model: XPB08-F2

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, setup, and maintenance of your Moyu XPB08-F2 Portable Foldable Washing Machine. This appliance is designed for washing light clothes that require separate cleaning, featuring advanced ultrasonic technology and a soft spin dry function. Please read this manual thoroughly before first use and retain it for future reference.



Image 1.1: Moyu XPB08-F2 Portable Foldable Washing Machine in its operational state.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, observe the following safety precautions:

- Ensure the power supply voltage matches the rating label on the appliance.
- Do not immerse the main unit in water or other liquids.
- Unplug the appliance from the power outlet when not in use or before cleaning.
- Keep the appliance out of reach of children.
- Do not operate the machine if the power cord or plug is damaged.
- Only use the appliance for its intended purpose as described in this manual.
- Avoid washing heavy or bulky items that exceed the machine's 1.8 lb capacity.

3. PRODUCT COMPONENTS AND FEATURES

The Moyu XPB08-F2 is designed for convenience and efficiency. Key features include:

- **Foldable Design:** For easy storage and portability.
- **Ultrasonic Technology:** For effective cleaning.
- **Wave Wheel Washing:** Ensures thorough cleaning without residue.
- **Soft Spin Dry:** For gentle removal of excess water.
- **Integrated Drain Pipe:** For convenient water drainage.



Image 3.1: Key features of the Moyu XPB08-F2, including the hidden clasp, storage drain, and control panel.



Image 3.2: The Moyu XPB08-F2 washing machine shown with its removable spin basket.

4. SETUP

1. **Unpacking:** Carefully remove the washing machine and all accessories from the packaging. Inspect for any damage.
2. **Placement:** Place the machine on a flat, stable surface. Ensure there is enough space for operation and drainage. The bottom of the machine features suction cups for stability during operation.
3. **Unfolding:** Gently pull the top rim upwards to extend the foldable bucket to its full operational height. Ensure all sections are securely expanded.
4. **Power Connection:** Connect the power cord to the machine and then plug it into a suitable electrical outlet.



Image 4.1: Proper placement of the Moyu XPB08-F2 on a stable surface.



Image 4.2: The suction cups on the base provide stability during use.

5. OPERATING INSTRUCTIONS

1. **Load Laundry:** Place light clothing items into the washing machine. Do not exceed the 1.8 lb capacity.
2. **Add Water and Detergent:** Fill the machine with an appropriate amount of water and a small quantity of liquid detergent.
3. **Select Wash Cycle:** Use the touch control panel to select your desired wash cycle. The machine offers preset cycles, typically 5 minutes for washing, 10 minutes for a deeper wash, and 6 minutes for spin drying.
4. **Start Washing:** Press the power button to begin the selected cycle. The machine will automatically perform the washing action using ultrasonic and wave wheel technology.
5. **Spin Dry (Optional):** After the wash cycle, you can place the clothes into the provided spin basket and select the spin dry function to remove excess water.
6. **Drain Water:** Once the cycle is complete, pull out the drain plug located at the bottom side of the machine and extend the drain pipe to empty the water.



Image 5.1: The internal washing action of the machine.

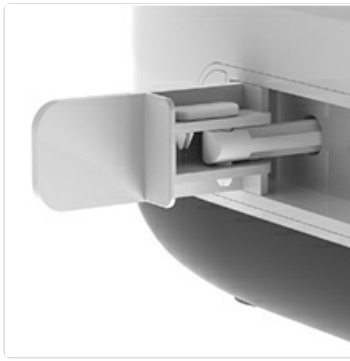 


Image 5.2: The intuitive touch control panel for cycle selection.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

- **Cleaning:** After each use, drain all water and wipe the interior and exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.
- **Draining:** Ensure the machine is completely drained after each wash to prevent mildew and odors. The drain plug and hose are designed for easy water removal.
- **Storage:** When not in use, ensure the machine is clean and dry. Gently push down the top rim to fold the bucket for compact storage. Store in a cool, dry place.

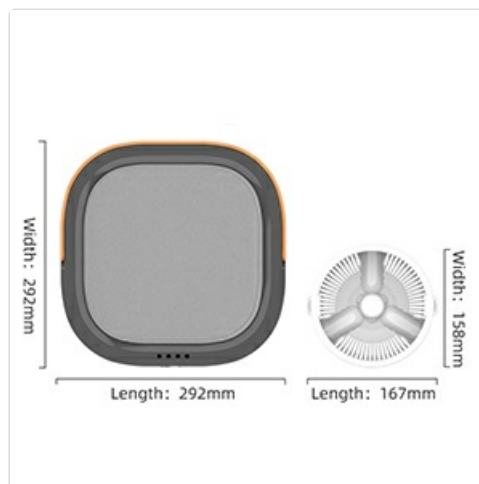 


Image 6.1: The drain plug for easy water removal.



Image 6.2: The integrated drain hose for convenient drainage.



Image 6.3: The machine's compact folded state for storage.

7. TROUBLESHOOTING

If you encounter issues with your Moyu XPB08-F2, refer to the following common problems and solutions:

- **Machine does not power on:**
 - Check if the power cord is securely plugged into both the machine and the electrical outlet.
 - Verify that the power outlet is functional.
- **Machine is not washing effectively:**
 - Ensure the water level is appropriate for the load size.
 - Do not overload the machine beyond its 1.8 lb capacity.
 - Confirm that the correct wash cycle has been selected.

- **Water is not draining:**
 - Check if the drain plug is fully open and the drain hose is extended and not kinked.
 - Ensure the drain hose is positioned lower than the machine's base for gravity drainage.
- **Machine is unstable or vibrating excessively:**
 - Ensure the machine is placed on a flat, level, and stable surface.
 - Verify that the suction cups on the base are properly engaged with the surface.
 - Do not overload the machine.

8. SPECIFICATIONS

Feature	Specification
Brand	Moyu
Model Info	XPB08-F2
Product Dimensions (Expanded)	29.2 x 29.2 x 28.8 cm (11.5 x 11.5 x 11.3 inches)
Product Dimensions (Folded)	29.2 x 29.2 x 9.7 cm (11.5 x 11.5 x 3.8 inches)
Capacity	1.8 Pounds
Item Weight	2.5 Kilograms
Material Type	ABS
Color	White
Control Console	Touch
Special Features	End Of Cycle Signal, Foldable Design
Included Components	Power Cord, Spin Basket

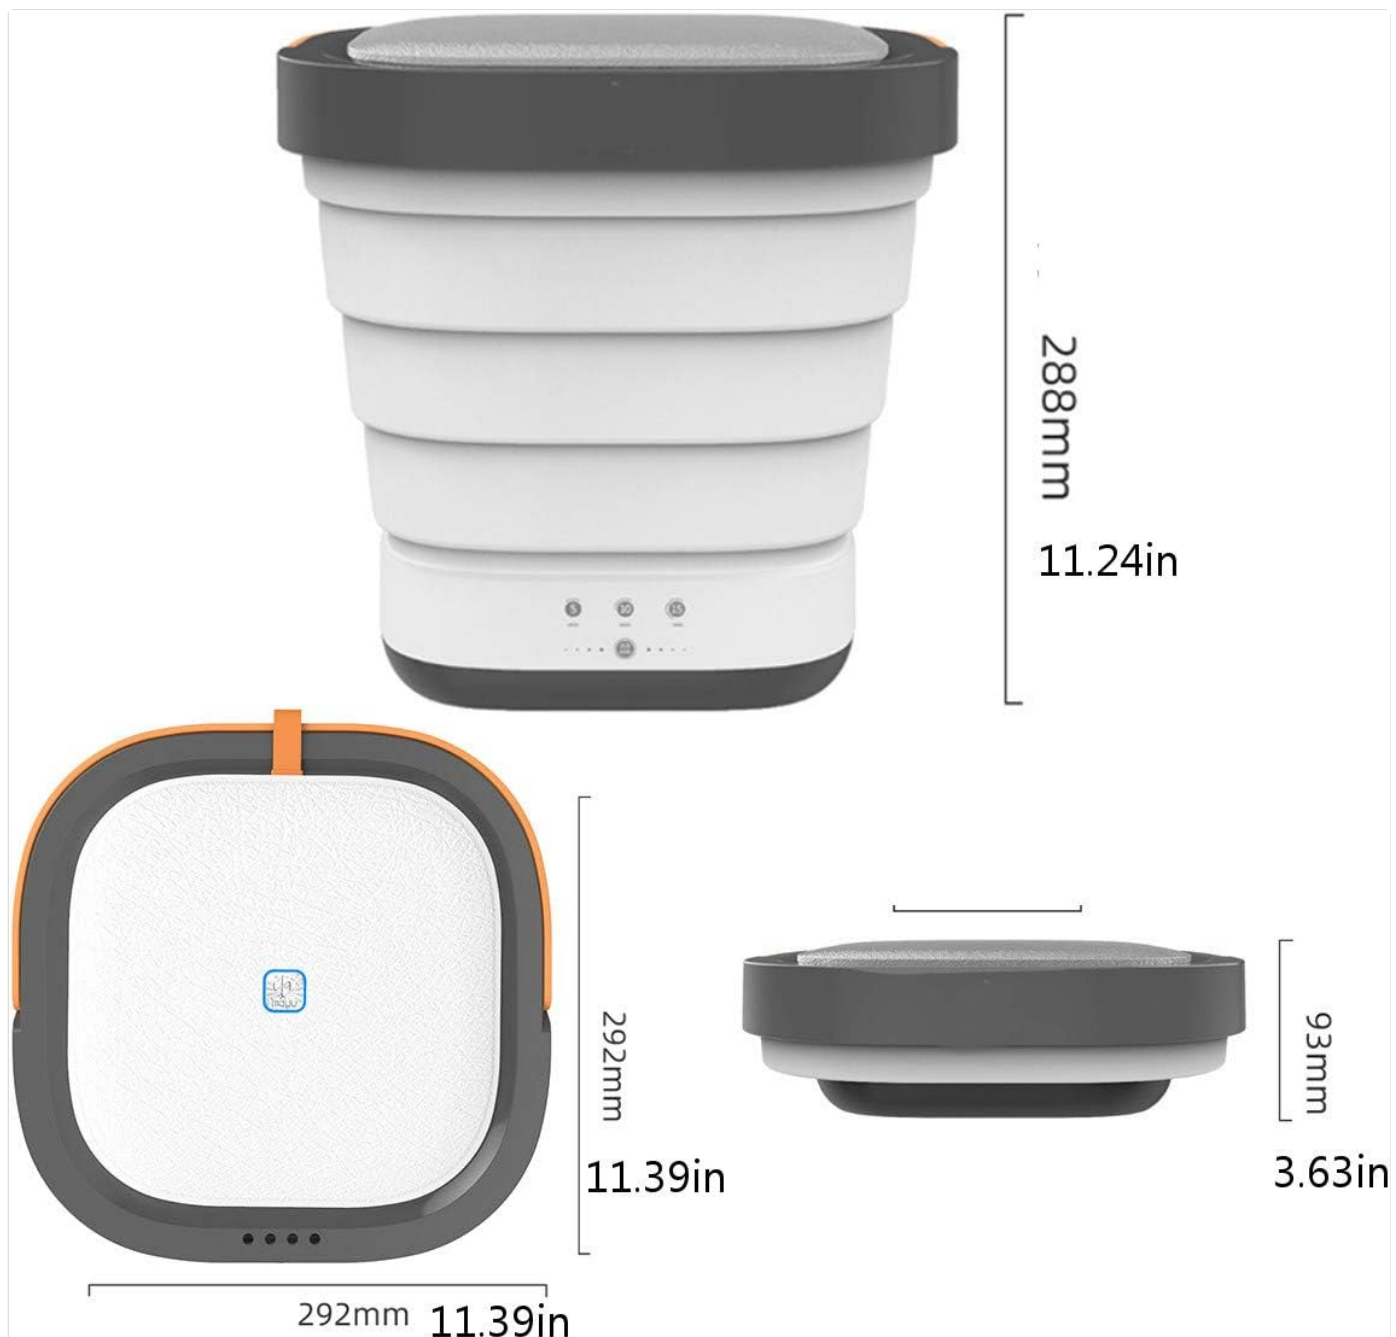 


Image 8.1: Detailed dimensions of the Moyu XPB08-F2 washing machine.

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase. If you require technical support or have questions not covered in this manual, please contact Moyu customer service or your retailer.

For installation inquiries, you may contact the following regional support numbers:

- Riyadh: +966-11-4094006 Ext – 113
- Jeddah: +966-12-6577714
- Dammam: +966-13-8343691
- Qassim: +966 581044198
- Abha: +966 593322785

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question