



Manuals.plus /

- › AILUKI /
- › AILUKI Kids Walkie Talkie Set User Manual

AILUKI HK-188

AILUKI Kids Walkie Talkie Set User Manual

Model: HK-188

INTRODUCTION

Thank you for choosing the AILUKI Kids Walkie Talkie Set. This manual provides essential information for the safe and effective operation of your new walkie-talkies. Please read it thoroughly before use and keep it for future reference.



Image: The AILUKI Kids Walkie Talkie Set, including three colorful walkie-talkies, their packaging, and lanyards.

PACKAGE CONTENTS

Please check the package to ensure all items are present and in good condition:

- 3 x AILUKI HK-188 Walkie Talkies
- 3 x Lanyards
- 1 x User Manual (this document)

Bestes Geschenk für Kinder



Image: A visual representation of the package contents, including the walkie-talkies, lanyards, and manual.

PRODUCT OVERVIEW

Familiarize yourself with the different parts of your AILUKI Walkie Talkie:



Image: Labeled diagram showing the various components of the walkie-talkie.

1. **Antenna:** For transmitting and receiving signals.
2. **Built-in Flashlight:** Provides illumination.
3. **PTT (Push-to-Talk) Button:** Press to speak.
4. **Up Button:** Navigates up in menus or increases values.
5. **Monitor Button:** Checks for activity on the current channel.
6. **Down Button:** Navigates down in menus or decreases values.
7. **Microphone:** For voice input.
8. **Call / Menu Lock Button:** Initiates a call tone or locks/unlocks the menu.
9. **Menu / Power Button:** Accesses menu settings or turns the device on/off.
10. **Channel Scan / Lamp Button:** Initiates channel scan or turns the flashlight on/off.
11. **Speaker:** For audio output.

SETUP

Battery Installation

The AILUKI Walkie Talkies require 4 x AAA batteries (not included) for each unit.

1. Ensure the walkie-talkie is turned off.
2. Locate the battery compartment cover on the back of the unit.
3. Press down on the clip and slide the cover downwards to open.
4. Insert 4 AAA batteries, observing the correct polarity (+/-) as indicated inside the compartment.
5. Replace the battery compartment cover by sliding it upwards until it clicks into place.



Image: Step-by-step guide for installing AAA batteries.

Important: Batteries are not included. Always use fresh batteries and remove them if the device will not be used for an extended period.

OPERATING INSTRUCTIONS

Power On/Off

- To turn ON: Press and hold the **Menu / Power** button until the LCD screen lights up.
- To turn OFF: Press and hold the **Menu / Power** button until the LCD screen turns off.

Channel Selection (8 Channels)

To communicate, all walkie-talkies must be on the same channel.

1. Press the **Menu / Power** button once. The channel number on the LCD will flash.
2. Use the **Up** or **Down** buttons to select your desired channel (1-8).
3. Press the **Menu / Power** button again to confirm your selection and exit the menu, or wait a few seconds for it to auto-confirm.

Voice Activated Transmission (VOX) Function

The VOX function allows for hands-free communication without pressing the PTT button. When VOX is active, the walkie-talkie will transmit automatically when it detects your voice.

1. Press the **Menu / Power** button three times. The VOX icon and sensitivity level (e.g., 'OF' for off, '1' to '3' for sensitivity) will flash.
2. Use the **Up** or **Down** buttons to select the desired VOX sensitivity level (1-3, with 3 being the most sensitive) or 'OF' to disable VOX.
3. Press the **Menu / Power** button again to confirm.

Call Tone Selection (10 Ring Tones)

You can choose from 10 different call tones.

1. Press the **Menu / Power** button twice. The current call tone number will flash.
2. Use the **Up** or **Down** buttons to cycle through the 10 available call tones.
3. Press the **Menu / Power** button again to confirm.

Flashlight Function

- To turn ON/OFF: Briefly press the **Channel Scan / Lamp** button.

Monitoring

The monitor function allows you to listen for weak signals on the current channel.

- To activate: Press and hold the **Monitor** button.
- To deactivate: Release the **Monitor** button.

Communication (PTT)

- To speak: Press and hold the **PTT** button. Speak clearly into the microphone.
- To listen: Release the **PTT** button.



Image: Key features of the walkie-talkie, including range, display, and VOX function.

MAINTENANCE

- **Cleaning:** Wipe the walkie-talkie with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the walkie-talkies in a cool, dry place when not in use. Remove batteries if storing for extended periods to prevent leakage.
- **Water Resistance:** The device is water-resistant, but not waterproof. Avoid submerging it in water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power / Device won't turn on	Batteries are dead or incorrectly installed.	Replace batteries with new ones. Check battery polarity.
Cannot communicate with other walkie-talkies	Not on the same channel. Out of range. Obstructions.	Ensure all walkie-talkies are on the same channel. Move closer to the other unit. Avoid large obstructions like buildings or hills.
Poor sound quality / Static	Weak signal. Interference. Low battery.	Move closer to the other unit. Change channels to avoid interference. Replace batteries.
VOX not working	VOX is off or sensitivity is too low.	Check VOX settings in the menu and increase sensitivity.

SPECIFICATIONS

Feature	Detail
Model Number	HK-188
Number of Channels	8
Max. Talk Range	Up to 4 km (open field)
Frequency Range	VHF
Special Feature	Voice-activated transmission (VOX)
Voltage	1.5 Volts (per AAA battery)
Water Resistance Rating	Water-resistant
Dimensions (Packaging)	19.4 x 15 x 8.4 cm
Weight (Packaging)	300 Grams

SAFETY INFORMATION

- **Radiation Safety:** The radiation power is less than 0.5W, which is safe for children and adults.
- **Battery Safety:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Always insert batteries correctly. Remove batteries if the device is

not used for a long time.

- **Choking Hazard:** Small parts (like lanyards) may pose a choking hazard for very young children. Adult supervision is recommended.
- **Environmental:** Made from durable and environmentally friendly materials.
- **Usage Environment:** Avoid using the walkie-talkies in extremely hot, cold, or humid environments. Keep away from direct sunlight and heat sources.