

- Manuals.plus /
- › [CHKOSDA](#) /
- › Remote Control for CH3386/CH3387/CH3389 Series LED Digital Wall Clock Instruction Manual

CHKOSDA CH3387-Parents

Instruction Manual for CHKOSDA Remote Control

Model: CH3387-Parents

INTRODUCTION

This manual provides comprehensive instructions for the CHKOSDA Remote Control, designed specifically for CHKOSDA CH3386, CH3387, and CH3389 series LED Digital Wall Clocks. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your remote control.

PRODUCT OVERVIEW



Image: Front view of the CHKOSDA Remote Control, displaying its full array of buttons including power, number pad, and function keys.

The CHKOSDA Remote Control is a compact, battery-powered device designed to provide full control over compatible CHKOSDA LED Digital Wall Clocks. It features a clear button layout for easy navigation and setting adjustments.

SETUP

1. Battery Installation

The remote control requires one CR2032 battery (not included). Follow these steps to install the battery:

1. Locate the battery compartment on the back of the remote control.
2. Carefully open the battery compartment cover. This may require a small coin or screwdriver to pry open, as some compartments can be stiff.
3. Insert one CR2032 battery, ensuring the positive (+) side faces upwards, as indicated inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.

Note: If the remote control does not respond after battery installation, ensure the battery is inserted correctly and is not depleted. Replace with a new battery if necessary.

OPERATING INSTRUCTIONS

This section details the functions of each button on your CHKOSDA remote control.

Button	Function
Power Button (Red, top left)	Turns the clock display on or off.
Play/Pause (Top row, second from left)	Functionality may vary depending on clock model; typically used for starting/pausing specific modes or sounds.
Mute (Top row, third from left)	Mutes or unmutes any audible alerts or sounds from the clock.
RET (Green, top right)	Return or exit from current settings menu.
Number Buttons (0-9)	Used for direct input of numbers, such as setting time, date, or countdown values.
12/24 (Below '0')	Toggles between 12-hour and 24-hour time display formats.
°C/°F (Below '7')	Switches the temperature display between Celsius and Fahrenheit.
DIM (Below '8')	Adjusts the brightness level of the clock's LED display. Press repeatedly to cycle through brightness levels.
DISP	Changes the display mode or cycles through different information displays (e.g., time, date, temperature).
CD SET	Enters the countdown timer setting mode.
ST	Starts or stops the stopwatch function.
UP	Increases values or navigates upwards in menus.
T SET	Enters the time setting mode.
C SET	Enters the calendar or date setting mode.
AL SET	Enters the alarm setting mode.

Button	Function
MODE	Switches between different operating modes of the clock (e.g., normal time display, alarm display, timer).
AL ON/OFF	Toggles the alarm on or off without entering the setting menu.
+	Increases values or moves forward in settings.
-	Decreases values or moves backward in settings.
DOWN	Decreases values or navigates downwards in menus.
A1, A2, A3	Dedicated buttons for setting or activating specific alarms (Alarm 1, Alarm 2, Alarm 3).
A++	Functionality may vary; potentially for advanced alarm settings or additional alarm slots.
FLASH	Activates a flashing display mode or light effect.
FULL	Sets the display to full brightness or full segment illumination.
O/Φ	Likely a reset or clear button, or a specific function related to clock settings.

MAINTENANCE

Battery Replacement

When the remote control's range decreases or it becomes unresponsive, it is time to replace the battery. Follow the battery installation steps outlined in the "Setup" section.

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the remote. Do not use abrasive cleaners or solvents.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, it is recommended to remove the battery to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not responding.	Depleted or incorrectly installed battery. Obstruction between remote and clock. Remote out of range.	Replace the CR2032 battery. Ensure the battery is inserted with correct polarity. Remove any obstructions. Move closer to the clock.
Some buttons not working.	Dirt or debris under the button. Internal malfunction.	Clean the remote control. If the issue persists, the remote may be faulty and require replacement.
Clock not responding to remote.	Clock is off or in a non-responsive mode. Remote is not compatible with the specific clock model.	Ensure the clock is powered on and functioning correctly. Verify that your clock is a CHKOSDA CH3386, CH3387, or CH3389 series model.

SPECIFICATIONS

- **Brand:** CHKOSDA
- **Model:** CH3387-Parents (Compatible with CH3386/CH3387/CH3389 series LED Digital Wall Clocks)
- **Color:** Remote Control (Black with white buttons)
- **Power Source:** Battery Powered
- **Batteries Required:** 1 x CR2032 (not included)
- **Item Weight:** 3.2 ounces
- **Package Dimensions:** 8 x 4.5 x 1.6 inches
- **UPC:** 743815841269
- **Manufacturer:** Chihai Electronic Co.,Ltd

WARRANTY AND SUPPORT

Warranty Information

The CHKOSDA Remote Control comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

If you encounter any issues with your remote control or have questions not covered in this manual, please contact CHKOSDA customer service directly. If your remote control is not working properly, we will assist you with troubleshooting or arrange for a replacement if covered under warranty.

For support, please refer to the contact information provided with your product or visit the official CHKOSDA store page on Amazon: [CHKOSDA Store](#).

© 2024 CHKOSDA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B089VMCM5C>

More documents and user manuals: <https://manuals.plus/>