



[Manuals.plus](#) /

> [HOMCOM](#) /

> HOMCOM 9.5 Gallon Mop Bucket with Wringer Cleaning Cart (Model 720-015GY) User Manual

## HOMCOM 720-015GY

# HOMCOM 9.5 Gallon Mop Bucket with Wringer Cleaning Cart User Manual

Model: 720-015GY

## 1. INTRODUCTION

This manual provides instructions for the safe and efficient use of your HOMCOM 9.5 Gallon (38 Quart) Mop Bucket with Wringer Cleaning Cart. Please read this manual thoroughly before assembly and operation, and retain it for future reference.



Image 1.1: The HOMCOM 9.5 Gallon Mop Bucket with Wringer Cleaning Cart, featuring a grey bucket, black wringer, and four wheels.

## 2. SAFETY INFORMATION

- Always ensure the bucket is stable before filling or moving.
- Do not overfill the buckets to prevent spills.
- Use caution when moving the cart on uneven surfaces or inclines.
- Keep hands clear of the wringer mechanism during operation.
- Store the mop bucket in a dry, secure location when not in use.
- This product is intended for general cleaning purposes. Do not use for other applications.

## 3. PACKAGE CONTENTS

Verify that all components are present before assembly:

- Mop Bucket (main body)
- Wringer Assembly

- Separate Inner Bucket (for clean water)
- Handle
- 4 Moving Wheels (casters)
- Mop-Handle Holder
- Assembly Hardware (if applicable)

*Note: Mop is not included with this product.*

## 4. SETUP AND ASSEMBLY

---

Follow these steps to assemble your mop bucket cleaning cart:

1. **Attach the Wheels:** Turn the main bucket body upside down. Insert the stems of the four wheels into the designated holes on the bottom of the bucket. Ensure they are securely fastened.
2. **Install the Wringer:** Place the wringer assembly onto the top edge of the main bucket. It should fit snugly into the molded slots.
3. **Insert the Inner Bucket:** Position the smaller, separate bucket into the main bucket, typically on the side opposite the wringer, to create the water separation feature.
4. **Attach the Handle:** Secure the metal handle to the designated attachment points on the wringer assembly.
5. **Attach Mop-Handle Holder:** If separate, attach the mop-handle holder to the side of the bucket or wringer as indicated by the design.



Image 4.1: Key components of the mop bucket, illustrating the metal handle, mop-handle holder, down press wringer, and the water-separation design.

## 5. OPERATING INSTRUCTIONS

### 5.1 Filling the Buckets

- Fill the smaller, separate inner bucket with clean water and your preferred cleaning solution.
- The larger section of the main bucket is designed to collect dirty water after mopping and wringing.

### 5.2 Using the Down Press Wringer

The integrated down press wringer efficiently removes excess water from your mop head.

1. **Step 1:** Submerge your mop head into the clean water bucket.
2. **Step 2:** Place the wet mop head into the wringer basket.
3. **Step 3:** Firmly press down on the wringer lever. This action compresses the mop head, forcing water into the dirty water section of the bucket.
4. **Step 4:** Release the lever. Your mop is now ready for use.

## EASY TO USE



1

Put the mop in the basket



2

Pressing the lever firmly



3

Dirty water flows from the bottom



4

The mop can be twisted for a best squeeze

Image 5.2: Step-by-step guide on operating the down press wringer for effective mop drying.

### 5.3 Moving the Cleaning Cart

The four non-marking caster wheels allow for easy portability.

- Grasp the handle firmly and push or pull the cart to your desired cleaning area.
- Ensure the path is clear of obstacles to prevent tipping.



Image 5.3: A user demonstrating the easy mobility of the mop bucket cart.

#### 5.4 Using the Mop-Handle Holder

The integrated holder keeps your mop handle upright and secure when not in use, preventing it from falling or leaning against walls.

### 6. MAINTENANCE

- **Cleaning the Bucket:** After each use, empty both the clean and dirty water sections. Rinse the entire bucket thoroughly with clean water.
- **Wringer Care:** Periodically inspect the wringer mechanism for any debris or wear. Clean any residue to ensure smooth operation.
- **Wheel Maintenance:** Check the wheels occasionally for hair or debris that might impede movement. Clean as necessary.
- **Storage:** Store the mop bucket in a cool, dry place away from direct sunlight when not in use.

### 7. TROUBLESHOOTING

<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
Wringer not effectively squeezing mop.	Mop head too thick or wringer mechanism obstructed.	Ensure mop head fits correctly. Check for and remove any debris in the wringer. Apply more pressure to the lever.
Cart difficult to move.	Wheels obstructed by debris or damaged.	Inspect wheels for hair, lint, or other obstructions and remove them. Ensure wheels are properly attached.
Water leaking from bucket.	Bucket damaged or overfilled.	Check the bucket for cracks or damage. Do not fill past the maximum fill line.

## 8. SPECIFICATIONS

<b>Feature</b>	<b>Detail</b>
Model Number	720-015GY
Brand	HOMCOM
Capacity	9.5 Gallons (36 Liters)
Product Dimensions (L x W x H)	21.25" x 16.25" x 36"
Item Weight	15.07 Pounds
Material	Plastic (body), Metal (handle)
Color	Gray
Wheels	4 Moving Caster Wheels
Wringer Type	Down Press
Water Separation	Yes, with separate inner bucket



Image 8.1: Product dimensions for the HOMCOM Mop Bucket with Wringer Cleaning Cart.

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided at the point of purchase or visit the official HOMCOM website. Keep your purchase receipt as proof of purchase.  
Manufacturer: Aosom LLC