

[Manuals.plus](#) /

> [CHiQ](#) /

> CHiQ U58H7 4K LED Smart TV User Manual

CHiQ U58H7

CHiQ U58H7 4K LED Smart TV User Manual

Model: U58H7

INTRODUCTION

Welcome to the user manual for your new CHiQ U58H7 4K LED Smart TV. This television offers a superior viewing experience with its 58-inch 4K UHD display, HDR10 support, and Android 9.0 operating system. Enjoy high-quality sound, a full-screen display, and access to popular streaming services like Netflix, YouTube, Prime Video, and Shahid. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your TV.

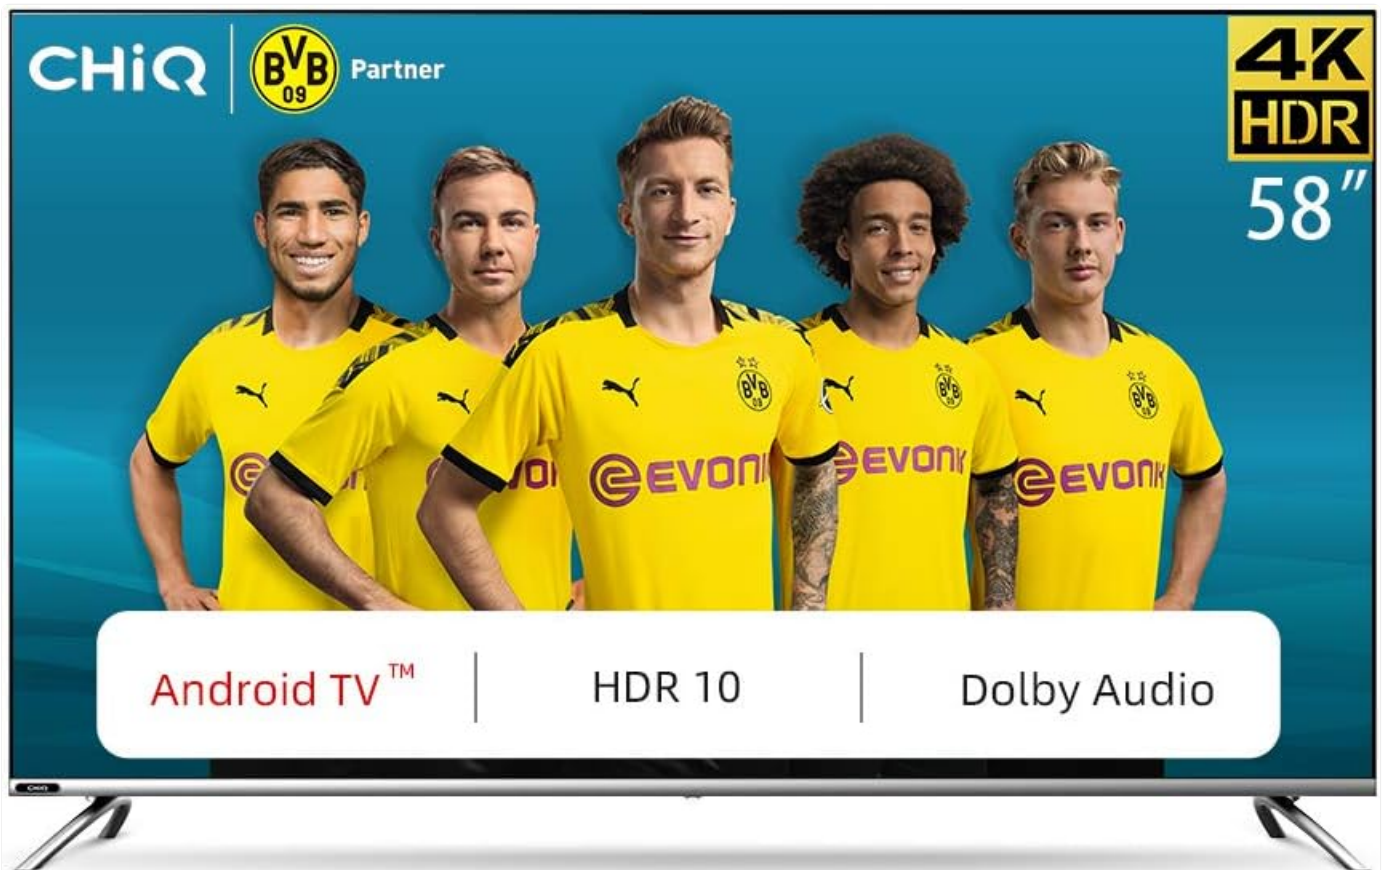 


Figure 1: Front view of the CHiQ U58H7 Smart TV, highlighting Android TV, HDR10, and Dolby Audio features.

1. Unpacking

Carefully remove the TV and all accessories from the packaging. Retain the packaging materials for future transport or storage. Ensure no components are missing or damaged.

2. Attaching the Stand

Place the TV screen-down on a soft, flat surface to prevent scratches. Align the TV stands with the corresponding screw holes on the bottom of the TV. Secure the stands using the provided screws. Refer to the diagram below for dimensions to ensure proper placement.

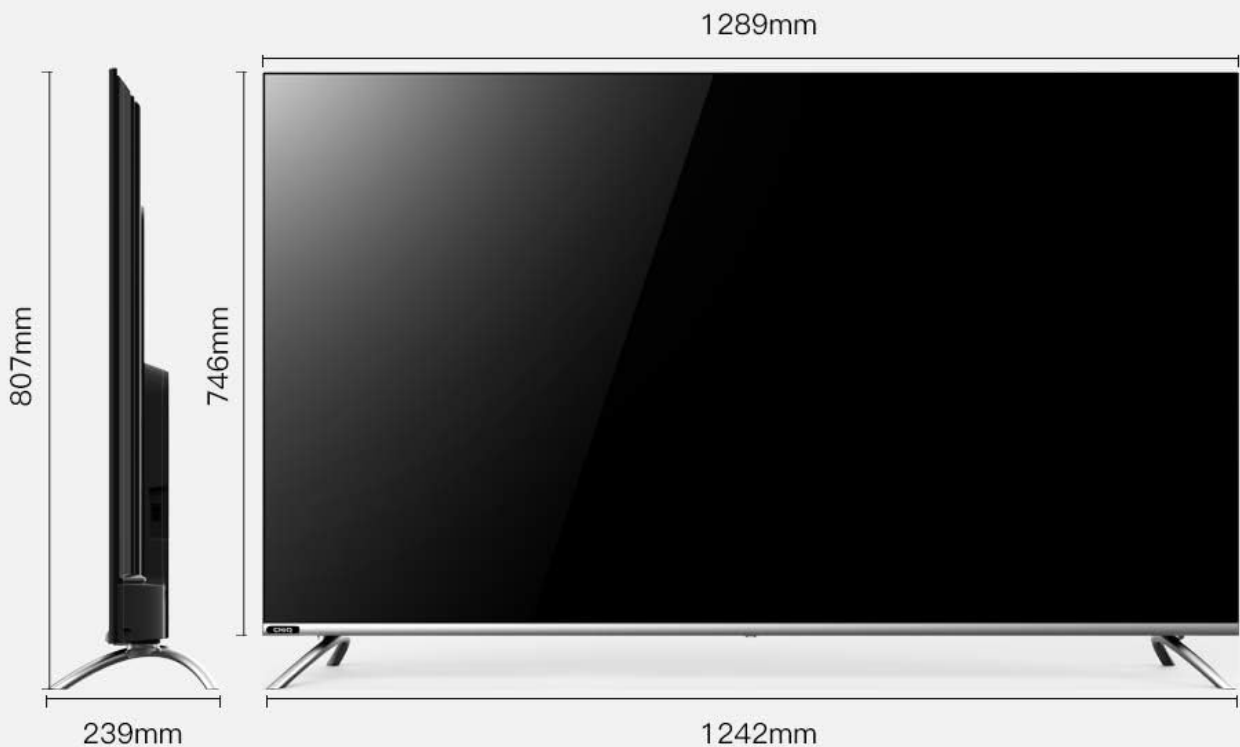 


Figure 2: Dimensions of the CHI Q U58H7 TV, useful for stand attachment and placement.

3. Connecting Peripherals

Connect your external devices such as set-top boxes, gaming consoles, or Blu-ray players to the TV's HDMI ports. Use the USB ports for connecting USB drives. Ensure all cables are securely connected.

4. Initial Power On & First-Time Setup

Plug the power cord into a wall outlet. Press the power button on the remote control or the TV. Follow the on-screen instructions to complete the initial setup, including language selection, network connection (Wi-Fi), and channel scanning.

OPERATING YOUR CHiQ SMART TV

1. Remote Control Overview

The remote control is your primary interface for navigating the TV. It features a digital key area for channel selection, a function key area for menu navigation, and a shortcut key area for quick access to popular apps.



Figure 3: Layout of the CHiQ Smart TV remote control, showing digital, function, and shortcut key areas.

2. Smart Features and Connectivity

Your CHiQ U58H7 TV runs on Android 9.0, providing access to a wide range of applications via the Google Play Store. Pre-installed apps include Netflix, YouTube, Prime Video, and Shahid. The TV supports Wi-Fi for internet connectivity and Bluetooth 5.0 for connecting wireless accessories.

3. Multi-Screen Display

The multi-screen feature allows you to cast content from your mobile devices directly to the TV, enhancing your viewing experience.

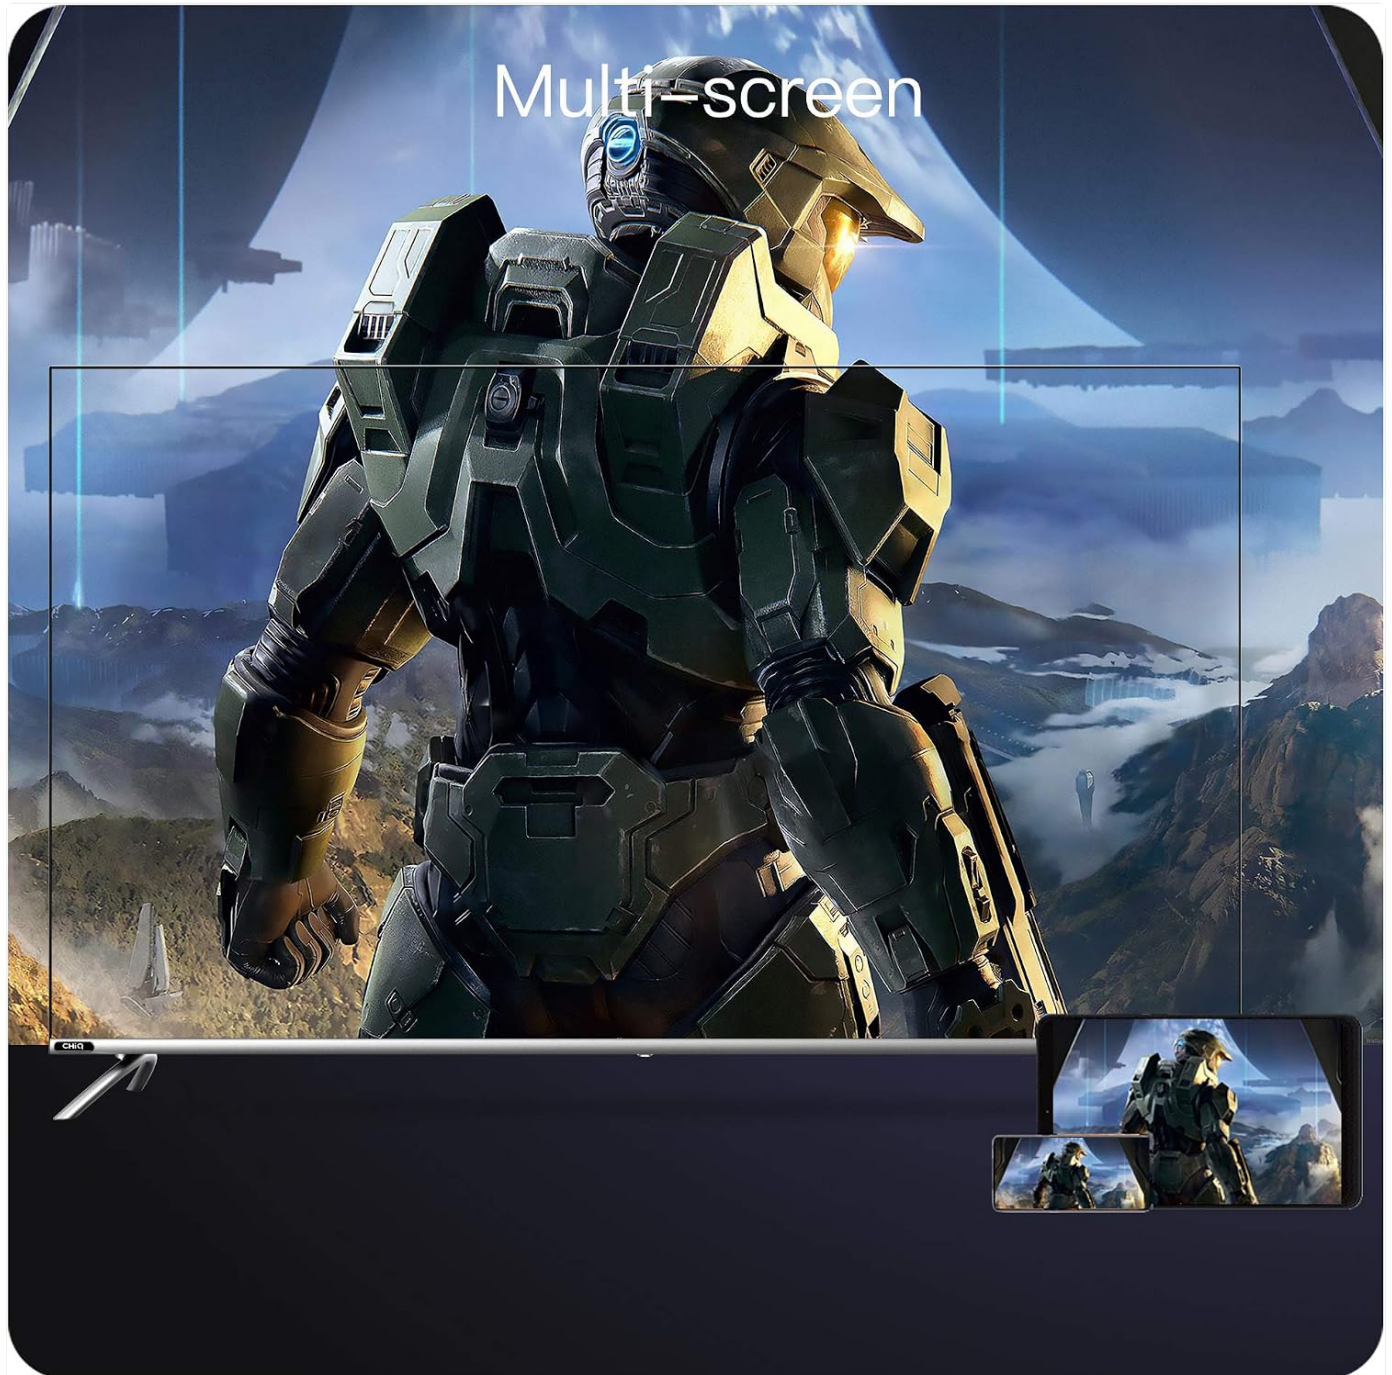 


Figure 4: The multi-screen feature allows content mirroring from compatible devices.

4. Picture and Sound Settings

The TV supports Dolby Vision and HDR10, offering enhanced contrast and color accuracy for a vivid viewing experience. Navigate to the picture settings menu to adjust brightness, contrast, color, and other display options. The TV is equipped with superior audio technology for a cinema-like sound experience.

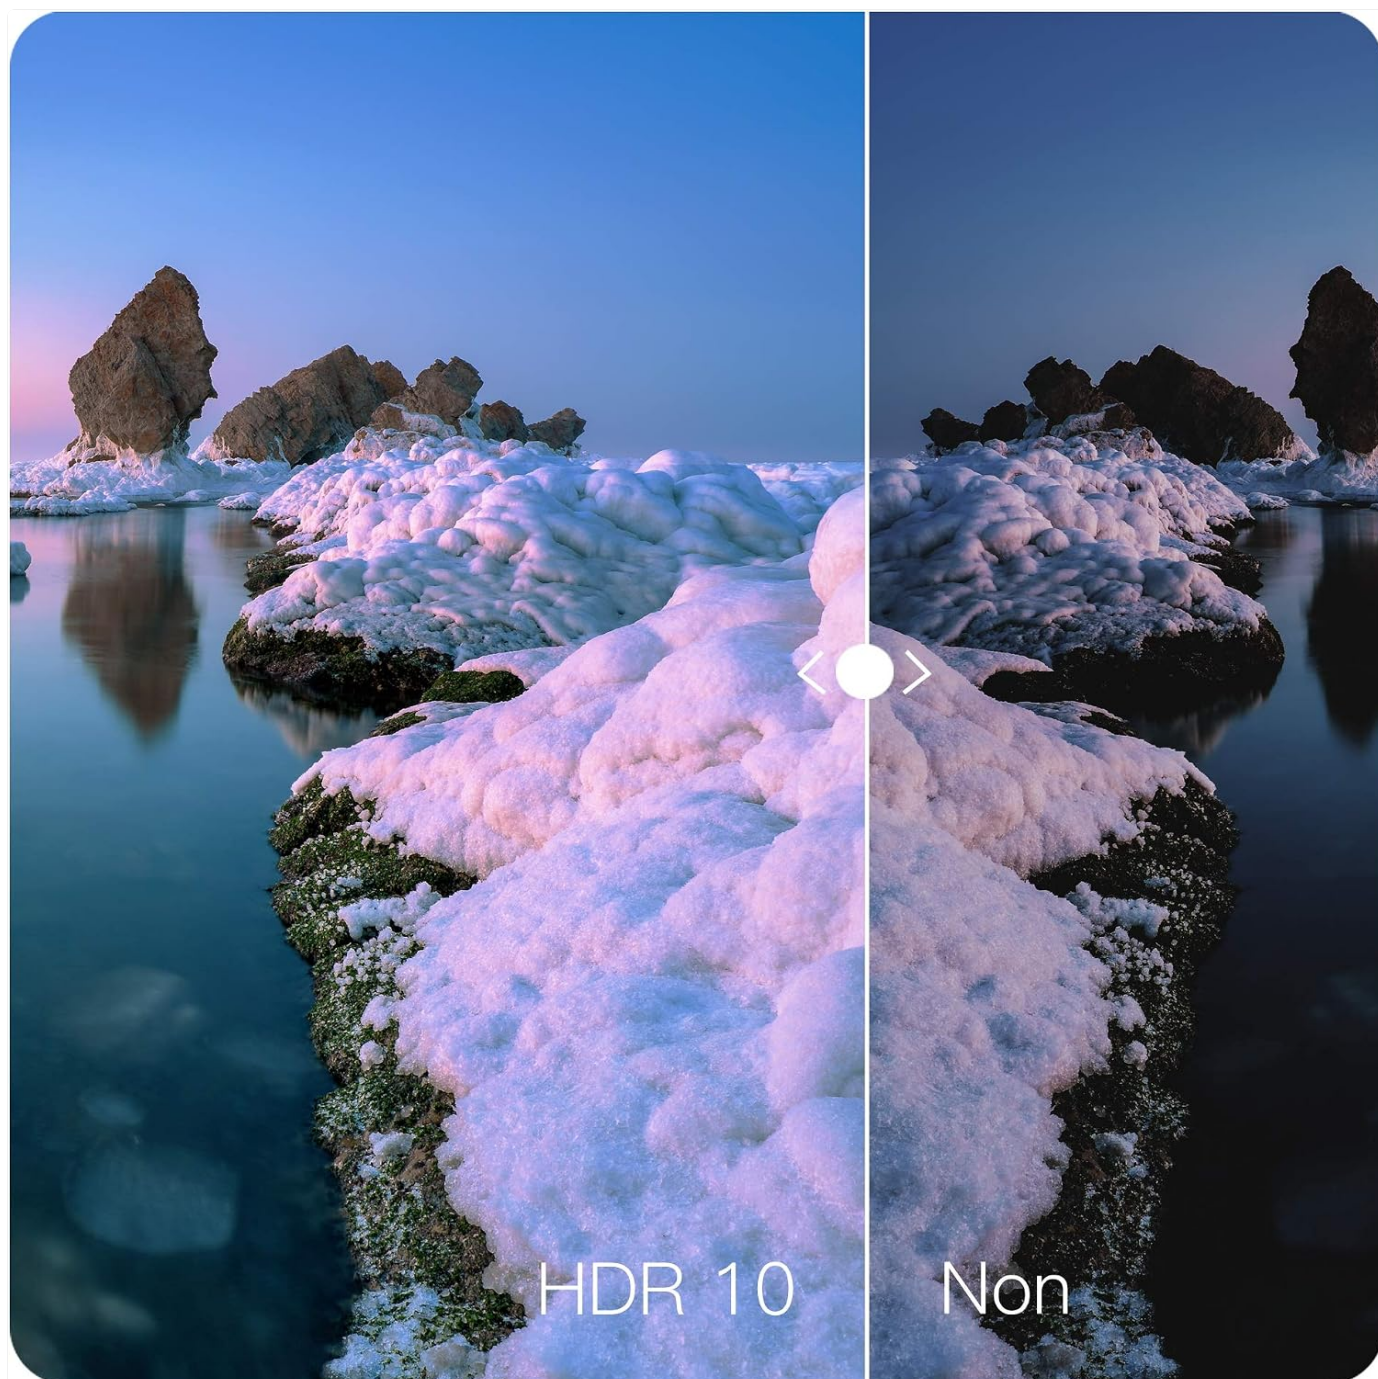 


Figure 5: Visual comparison demonstrating the enhanced quality with HDR10.

MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your CHiQ U58H7 TV, follow these maintenance guidelines:

- **Cleaning:** Always unplug the TV before cleaning. Use a soft, dry cloth to wipe the screen and cabinet. For stubborn marks, lightly dampen the cloth with water or a screen-cleaning solution. Avoid using harsh chemicals or abrasive materials.
- **Ventilation:** Ensure adequate ventilation around the TV. Do not block the ventilation openings on the back of the TV.
- **Software Updates:** Periodically check for software updates through the TV's settings menu to ensure you have the latest features and performance improvements.
- **Safety:** Avoid placing the TV in direct sunlight or near heat sources. Protect the power cord from being walked on or pinched.

TROUBLESHOOTING COMMON ISSUES

This section addresses common issues you might encounter with your CHiQ U58H7 TV. If the problem persists, please contact customer support.

Problem	Possible Cause	Solution
No power	Power cord disconnected; power outlet issue	Ensure power cord is securely plugged into TV and wall outlet. Test outlet with another device.
No picture, but sound is present	Incorrect input source; loose HDMI cable	Press the 'Input' button on the remote to select the correct source. Check HDMI cable connections.
No sound, but picture is present	Volume too low or muted; external audio system issue	Increase volume or unmute. Check connections to external audio devices if used.
Remote control not responding	Batteries low or incorrectly inserted; obstruction	Replace batteries. Ensure correct polarity. Remove any obstructions between remote and TV.
Cannot connect to Wi-Fi	Incorrect password; router issue; TV too far from router	Verify Wi-Fi password. Restart router. Move TV closer to router or use a Wi-Fi extender.

TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	U58H7
Screen Size	58 Inches / 148 cm
Resolution	4K UHD (3840 x 2160)
Display Technology	LED
Refresh Rate	60 Hz
Operating System	Android 9.0
Connectivity Technology	Wi-Fi, Bluetooth 5.0
Supported Internet Services	Netflix, YouTube, Prime Video, Shahid
Special Features	Smart / Internet, HDR10, Dolby Vision, Full Screen Display
Product Dimensions (W x D x H)	129 x 10 x 75 cm (without stand)
Weight	18.3 kg
Included Components	Remote control

WARRANTY AND CUSTOMER SUPPORT

Your CHiQ U58H7 4K LED Smart TV comes with a**1-year full warranty** from the date of purchase. This warranty covers manufacturing defects and ensures your product functions as intended under normal use.

For warranty claims, technical assistance, or any other inquiries, please contact CHiQ customer support. Keep your proof of purchase handy as it will be required for any service requests.

Note: No official product videos were available in the provided data for embedding.

© 2023 CHiQ. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question