

Philips Audio TAM2505/10

Philips TAM2505 HiFi DAB+ Radio User Manual

MODEL: TAM2505/10

1. INTRODUCTION

Thank you for choosing the Philips TAM2505 HiFi DAB+ Radio. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly before use to ensure optimal performance and safety.

2. PRODUCT OVERVIEW

2.1 What's in the Box

- Philips TAM2505 HiFi DAB+ Radio
- AC Adaptor
- Remote Control
- Batteries (for remote control)
- FM Antenna
- Wall Mounting Kit
- Stand
- Quick Start Guide

2.2 Controls and Connections



Figure 2.2.1: Front View. Shows the main unit with the display and speaker grilles.



Figure 2.2.2: Side View. Illustrates the slim profile of the radio.



Figure 2.2.3: Back View. Displays the power input, antenna connection, and wall mounting holes.



Figure 2.2.4: Remote Control. Details the layout of buttons for power, source selection, tuning, volume, and presets.

3. SETUP

3.1 Unpacking

Carefully remove all components from the packaging. Retain the packaging for future transport or storage.

3.2 Power Connection

1. Connect the AC adaptor to the DC IN socket on the back of the radio.
2. Plug the AC adaptor into a wall power outlet.

3.3 Antenna Connection

For optimal DAB+ and FM reception, connect the supplied FM antenna to the antenna input on the back of the radio. Extend the antenna fully and adjust its position for the best signal.

3.4 Placement Options

The Philips TAM2505 offers versatile placement options:

- **Using the Stand:** Attach the provided stand to the bottom of the radio for stable tabletop placement.
- **Wall Mounting:** Use the included wall mounting kit to securely attach the radio to a wall. Ensure the wall material can support the weight of the unit and follow the instructions provided with the wall mounting kit.



Figure 3.4.1: Tabletop Placement. The radio positioned on a side table, demonstrating its compact size.



Figure 3.4.2: Wall-Mounted Placement. The radio mounted on a wall, showcasing its space-saving design.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Press the **Power** button on the remote control or the unit to turn the radio on or off.

4.2 Source Selection

Press the **DAB**, **FM**, **Bluetooth**, or **AUX IN** buttons on the remote control to switch between different audio sources.

4.3 Volume Control

Use the **Volume +** or **Volume -** buttons on the remote control to adjust the sound level.

4.4 DAB+ Radio Operation

1. Press the **DAB** button to select DAB+ mode.
2. The radio will automatically scan for available DAB+ stations upon first use. To initiate a manual scan, press the **MENU** button, navigate to 'Full Scan', and press **OK**.
3. Use the **Up/Down** arrow buttons to browse through the list of available stations.
4. Press **OK** to select a station.
5. To save a preset, press and hold the **PRESET** button, select a preset number, and press **OK**. To recall a preset, press **PRESET** briefly, then use the arrow buttons to select and **OK** to confirm.

4.5 FM Radio Operation

1. Press the **FM** button to select FM mode.
2. To auto-scan for stations, press and hold the **SCAN** button. The radio will scan and save available stations.
3. To manually tune, press the **Up/Down** arrow buttons.
4. Saving and recalling presets works similarly to DAB+ mode.

4.6 Bluetooth Pairing and Playback

1. Press the **Bluetooth** button to switch to Bluetooth mode. The display will show 'Pairing' or 'Waiting for connection'.
2. On your Bluetooth-enabled device (e.g., smartphone, tablet), enable Bluetooth and search for available devices.
3. Select 'Philips TAM2505' from the list of devices.
4. Once paired, the radio will indicate a successful connection. You can now play audio from your device through the radio.

4.7 Audio-In Connection

Connect an external audio device (e.g., MP3 player) to the **AUX IN** port on the radio using a 3.5mm audio cable (not supplied). Press the **AUX IN** button to select this source.

5. MAINTENANCE

5.1 Cleaning

Wipe the unit with a soft, damp cloth. Do not use abrasive cleaners, alcohol, or benzene, as these may damage the surface. Ensure the unit is unplugged before cleaning.

5.2 Remote Control Battery Replacement

The remote control uses 1 CR2 battery. If the remote control stops responding, replace the battery. Ensure correct polarity when inserting the new battery.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC adaptor not connected properly.	Ensure the AC adaptor is securely plugged into the radio and a working power outlet.
Poor radio reception (DAB+/FM)	Antenna not extended or positioned correctly. Weak signal in your area.	Fully extend the FM antenna and adjust its position. Try moving the radio to a different location. Perform a full scan for DAB+ stations.

Problem	Possible Cause	Solution
Bluetooth pairing issues	Bluetooth not enabled on your device. Radio not in pairing mode. Device too far from the radio.	Ensure Bluetooth is enabled on your device. Press the Bluetooth button on the radio to enter pairing mode. Keep your device within 10 meters of the radio.
No sound from Audio-In	Audio cable not connected properly. Incorrect source selected. Volume too low.	Check the audio cable connection. Ensure 'AUX IN' source is selected. Increase the volume on both the radio and the connected device.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	TAM2505/10
Product Dimensions	40 x 11 x 22 cm
Item Weight	1.7 kg
Power Source	Corded Electric
Wattage	10 W
Connectivity Technology	Bluetooth 5, 3.5mm Audio-In
Tuner Technology	DAB+, FM
Material Type	Plastic
Colour	Black
Included Components	Power Adapter, Remote Control, Batteries, FM Antenna, Wall Mounting Kit, Stand, Quick Start Guide

8. WARRANTY AND SUPPORT

This Philips product is covered by a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included with your product or visit the official Philips Audio support website.

For technical support, troubleshooting assistance, or to register your product, please visit the Philips support page or contact their customer service. Keep your purchase receipt as proof of purchase for warranty claims.

You can find more information and support at:[Philips Audio Support](#)

lang:af score:24 filesize: 130.25 K page_count: 1 document date: 0000-00-00

lang:pl score:18 filesize: 210.13 K page_count: 2 document date: 2024-10-16

- Zakres dostawy: radio cyfrowe Philips DAB M250G/20 (model 20002021) czarne; zasilacz, pilot zdalnego sterowania, baterie, antena FM, zestaw montażowy do ściany, podstawa, książka instrukcja obsługi (może nie być dostępna w języku polskim), certyfikat gwarancyjny