

[Manuals.plus](#) /

> [XENOCAM](#) /

> XENOCAM L336 Universal IR Learning Remote Control User Manual

XENOCAM L336

XENOCAM L336 Universal IR Learning Remote Control User Manual

Model: L336

INTRODUCTION

Welcome to the user manual for the XENOCAM L336 Universal IR Learning Remote Control. This remote is designed to consolidate control of up to three infrared (IR) devices, such as TVs, VCRs, cable boxes, DVD players, satellite receivers, and audio systems. It features digital circulation learning technology for fast and accurate programming and retains memory even after battery replacement.

Please read these instructions carefully before using your remote control.

PRODUCT FEATURES

- 3-in-1 functionality: Control up to three different IR devices.
- 126 programmable keys for comprehensive learning.
- Digital circulation learning technology for efficient programming.
- Permanent memory retention: Settings are saved even when batteries are removed.
- Compatible with various IR-controlled home appliances (TV, VCR, CBL, DVD, VCD, CD, SAT, HI-FI).
- Constructed from durable ABS plastic.
- CE & ROHS certified.

PACKAGE CONTENTS

- 1 x XENOCAM L336 Universal IR Learning Remote Control
- 1 x User Manual (this document)

SETUP

Battery Installation

The L336 remote control requires 2 AAA batteries (not included).

1. Open the battery compartment cover on the back of the remote.

2. Insert 2 AAA batteries, ensuring correct polarity (+/-).
3. Close the battery compartment cover.

Note: *If the remote cannot learn or the signal light flashes erratically, replace the batteries with new ones.*

Learning Function (Programming the Remote)

The L336 remote learns functions directly from your original IR remote controls. Ensure your original remote is functional and uses infrared signals.

1. **Enter Learning Mode:** Press and hold the desired equipment key (e.g., **TV**, **VCR**, **SAT**) on the L336 remote until the indicator light illuminates steadily. Then release the key.
2. **Position Remotes:** Place the L336 remote and your original remote control head-to-head, approximately 1 inch apart.
3. **Initiate Learning:** On your original remote, press the key you wish to program (e.g., Power, Volume Up). The indicator light on the L336 remote will flash quickly, indicating it has received the signal.
4. **Assign Function:** Immediately press the corresponding key on the L336 remote where you want to store this function. The indicator light on the L336 will turn solid, confirming the function has been learned.
5. **Repeat for More Keys:** Repeat steps 3 and 4 for all other keys you wish to learn for that device.
6. **Exit Learning Mode:** Press the same equipment key (e.g., **TV**) again to exit learning mode. The indicator light will turn off.

Important: *The L336 can only learn from functional IR original remotes. It does not support RF (Radio Frequency) remotes.*



Image: The XENOCAM L336 Universal IR Learning Remote Control. This image illustrates the remote's design, including its array of buttons and the IR emitter at the top, which should be aligned with the original remote during the learning process.

OPERATING THE REMOTE

After successfully programming the L336 remote, you can use it to control your devices.

1. Select the desired device by pressing the corresponding equipment key (e.g., **TV**, **VCR**, **SAT**). The indicator light may briefly illuminate to confirm selection.
2. Point the L336 remote towards your device and press the programmed function keys (e.g., Power, Channel Up/Down, Volume Up/Down).

MAINTENANCE

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's indicator light becomes dim or unresponsive. Always replace both batteries at the same time.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote does not respond.	Dead or incorrectly inserted batteries.	Check battery polarity and replace with fresh AAA batteries.
Learning fails (indicator light flashes quickly but doesn't turn solid).	Original remote is not IR, original remote is not working, or remotes are too far apart/misaligned.	Ensure original remote is IR and functional. Position remotes head-to-head, 1 inch apart. Try again.
Learned function does not work correctly.	Learning error or signal interference.	Repeat the learning process for that specific key. Ensure no obstructions during learning.
Remote loses programmed functions after battery change.	This remote features permanent memory retention. If this occurs, it indicates a fault.	Contact customer support.

SPECIFICATIONS

- **Model:** L336
- **Material:** ABS Plastic
- **Learning Keys:** 126
- **Supported Devices:** Up to 3 (TV, VCR, CBL, DVD, VCD, CD, SAT, HI-FI, etc.)
- **Learning Technology:** Digital Circulation IR Learning
- **Memory:** Permanent retention
- **Power:** 2 x AAA Batteries (not included)
- **Dimensions:** Approximately 8.86 x 1.18 x 1.14 inches
- **Weight:** Approximately 2.39 ounces
- **Certifications:** CE, ROHS

WARRANTY AND SUPPORT

This product is designed for reliability and performance. For any questions, technical assistance, or warranty inquiries, please contact XENOCAM customer support.

Please refer to your purchase documentation for specific warranty terms and contact information.