

[Manuals.plus](#) /

› [Epson](#) /

› Epson EB-992F 3LCD Projector User Manual

Epson EB-992F

Epson EB-992F 3LCD Projector User Manual

Model: EB-992F (V11H988040)

INTRODUCTION

Maximise your presentations with this bright Full HD projector that's capable of producing a large and scalable screen size. The long-lasting lamp provides years of lessons before a replacement lamp is required or the air filter needs attention. It's easy to set up and offers a range of connectivity solutions, so you can quickly access content from multiple devices.



Figure 1: Front view of the Epson EB-992F 3LCD Projector.

PACKAGE CONTENTS

Before you begin, ensure all items are present in the package:

- Computer cable
- Main unit
- Power cable

- Remote control incl. batteries
- User manual
- Warranty document

SETUP

1. Placement

Position the projector on a stable, flat surface or mount it securely. Ensure adequate ventilation around the projector. For optimal image quality, place the projector perpendicular to the screen or wall.

2. Connecting Power

1. Connect the power cable to the AC inlet on the projector.
2. Plug the other end of the power cable into a grounded electrical outlet.

3. Connecting Input Sources

The EB-992F projector offers various connectivity options. Refer to the rear panel diagram below for port locations.



Figure 2: Rear panel of the Epson EB-992F showing various input and output ports.

- **HDMI:** Connect HDMI cables to HDMI 1 or HDMI 2 ports for digital video and audio.
- **Computer (VGA):** Use a VGA cable to connect to Computer 1 or Computer 2 ports for analog video.
- **USB:** Connect USB devices to the USB-A or USB-B ports. USB-A supports media playback, while USB-B is for computer connection.
- **LAN:** Connect an Ethernet cable to the LAN port for network connectivity.
- **Audio In/Out:** Use 3.5mm audio cables for audio input (Audio 1, Audio 2) or output (Audio Out).
- **Video (RCA):** Connect composite video and stereo audio cables to the Video (RCA) ports.
- **RS-232C:** For serial control.

OPERATING INSTRUCTIONS

1. Powering On/Off

Press the power button on the projector's control panel or the remote control to turn the projector on. Press it again to turn off. A confirmation message may appear; press the power button again to confirm shutdown.



Figure 3: Top view of the Epson EB-992F showing the control panel and lens adjustments.

2. Adjusting Image

- **Focus:** Rotate the focus ring on the lens to sharpen the image.
- **Zoom:** Adjust the zoom ring on the lens to change the image size.
- **Keystone Correction:** If the image appears trapezoidal, use the horizontal and vertical keystone correction sliders or buttons on the control panel/remote to square the image.

3. Selecting Input Source

Press the "Source Search" button on the control panel or remote control to cycle through available input sources (HDMI, Computer, USB, Video, LAN). Alternatively, use the dedicated input buttons if available on the remote.

4. Menu Navigation

Press the "Menu" button to access the projector's settings. Use the arrow keys to navigate and "Enter" to select options. Press "Esc" to go back or exit the menu.

MAINTENANCE

1. Cleaning the Air Filter

Regularly clean the air filter to maintain optimal performance and prevent overheating. The filter is typically located on the side or bottom of the projector. Refer to the diagram below for the filter location.



Figure 4: Side view of the Epson EB-992F, highlighting the ventilation area where the air filter is located.

1. Turn off the projector and unplug the power cable.
2. Locate the air filter cover and open it.
3. Remove the filter and clean it using a small vacuum cleaner or soft brush. Do not wash the filter with water.
4. Reinsert the clean filter and close the cover securely.

2. Replacing the Lamp

The projector lamp has a long lifespan, but will eventually need replacement. A warning message will appear on screen when the lamp is nearing its end of life. Only use genuine Epson replacement lamps.

1. Turn off the projector and unplug the power cable. Allow the projector to cool down for at least an hour.
2. Locate the lamp cover (usually on the top or side) and remove the screw(s) securing it.
3. Carefully remove the old lamp module.
4. Insert the new lamp module, ensuring it is seated correctly.
5. Replace the lamp cover and secure it with the screw(s).
6. Reset the lamp timer through the projector's menu system (refer to the "Menu Navigation" section).

3. General Cleaning

Wipe the exterior of the projector with a soft, dry cloth. For stubborn marks, use a cloth lightly dampened with water. Do not use abrasive cleaners or solvents. Clean the lens gently with a lens cleaning cloth designed for optical surfaces.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No image projected	Power cable disconnected Incorrect input source selected Lens cap on Projector in standby mode	Check power connection. Press "Source Search" to select correct input. Remove lens cap. Press power button to wake up.
Image is blurry	Focus not adjusted Lens dirty	Adjust the focus ring on the lens. Clean the projector lens.
Image is trapezoidal	Projector not perpendicular to screen	Use keystone correction (horizontal/vertical) to square the image. Reposition the projector.
Projector overheats and shuts down	Air filter clogged Insufficient ventilation	Clean the air filter. Ensure proper airflow around the projector.

SPECIFICATIONS

- **Model:** EB-992F (V11H988040)
- **Display Technology:** 3LCD
- **Brightness:** 4000 lumens (white), 4000 lumens (colour)
- **Native Resolution:** 1920 x 1080
- **Aspect Ratio:** 16:9
- **Connectivity:** USB, HDMI, Miracast, 802.11n wireless
- **Product Dimensions:** 14.96 x 14.96 x 6.5 inches
- **Item Weight:** 6.82 pounds
- **Special Feature:** Built-in Speakers
- **Recommended Uses:** Office
- **Brand:** Epson
- **Manufacturer:** Epson

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty document included in your package or visit the official Epson support website. You can also find additional resources and FAQs on the [Epson Store on Amazon](#). Epson offers various protection plans for extended coverage. For details on 2-Year, 3-Year, or Complete Protect plans, please consult your retailer or the Epson website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B089WK548P>

More documents and user manuals: **<https://manuals.plus/>**