

VINABTY N2QAYA000172

VINABTY N2QAYA000172 Replacement Remote Control User Manual

For Panasonic DP-UB9000 Series Blu-ray Players

1. INTRODUCTION

Thank you for choosing the VINABTY N2QAYA000172 Replacement Remote Control. This remote is designed as a direct replacement for the original remote controls of various Panasonic DP-UB9000 series Blu-ray players. It offers comprehensive functionality and is ready to use without complex programming.

Compatible Panasonic Blu-ray Player Models include:

- DP-UB9000
- DP-UB9000E
- DP-UB9000EBK
- DP-UB9000EGK
- DP-UB9000GNK
- DP-UB9004
- DP-UB9004EGK

2. SAFETY INFORMATION

Please read and follow these safety guidelines to ensure proper operation and prevent damage:

- Do not expose the remote control to direct sunlight, heat sources, or extreme temperatures.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Keep batteries out of reach of children.

3. PACKAGE CONTENTS

The package should contain the following item:

- 1 x VINABTY N2QAYA000172 Replacement Remote Control

Note: Batteries are not included and must be purchased separately.

4. PRODUCT OVERVIEW

The VINABTY N2QAYA000172 remote control features an ergonomic design with 50 buttons for comprehensive control over your Panasonic Blu-ray player. Below is an image illustrating the remote's layout.





Front view of the VINABTY N2QAYA000172 Replacement Remote Control, showing all buttons and their labels.

5. SETUP

5.1 Battery Installation

To power your remote control, you will need two new AAA alkaline batteries.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Back view of the remote control with the battery compartment open, showing where to insert AAA batteries.

5.2 First Use

The VINABTY N2QAYA000172 remote control is designed to work immediately with compatible Panasonic Blu-ray players without any programming or code setup. Simply insert the batteries, point the remote at your Blu-ray player, and begin operation.

6. OPERATING INSTRUCTIONS

This section details the functions of the various buttons on your remote control.

6.1 Power and Input Control

- **OPEN/CLOSE:** Opens or closes the disc tray.
- **TV:** Switches the TV input to the Blu-ray player.

- **INPUT AV:** Selects the input source on your connected display.
- **VOL +/-:** Adjusts the volume of your connected TV or audio system.
- **CH ^/v:** Changes channels on your connected TV.

6.2 Number Pad and Text Input

- **0-9:** Enters numbers for track selection, time input, or menu options.
- **abc, def, ghi, jkl, mno, pqr, stuv, wxyz:** Used for text input in menus or search functions.

6.3 Navigation and Menu Control

- **Arrow Keys (Up, Down, Left, Right):** Navigates through menus and options.
- **OK:** Confirms a selection or enters a menu.
- **OPTION:** Displays context-sensitive options during playback or in menus.
- **RETURN:** Goes back to the previous screen or menu.
- **POP-UP MENU (P):** Accesses the disc's pop-up menu.
- **HOME:** Returns to the player's main home screen.
- **INTERNET:** Accesses internet-based features or apps.
- **TOP MENU (T):** Accesses the disc's top menu.
- **SETTING:** Opens the player's system settings menu.

6.4 Playback Controls

- **Play (▶):** Starts or resumes playback.
- **Pause (■ ■):** Pauses playback.
- **Stop (■):** Stops playback.
- **Fast Forward (▶▶):** Fast forwards through content.
- **Rewind (◀◀):** Rewinds through content.
- **Skip Forward (▶▶|):** Skips to the next chapter/track.
- **Skip Backward (|◀◀):** Skips to the previous chapter/track.
- **SLOW:** Activates slow-motion playback.
- **-10s:** Jumps back 10 seconds during playback.
- **+60s:** Jumps forward 60 seconds during playback.
- **MANUAL SKIP:** Allows for manual skipping of content.

6.5 Special Features and Functions

- **NETFLIX:** Direct access to the Netflix application.
- **MIRRORING:** Activates screen mirroring functionality.
- **STATUS:** Displays current playback status or information.
- **PLAYBACK INFO:** Shows detailed information about the currently playing content.
- **HDR SETTING:** Accesses High Dynamic Range settings.
- **SOUND EFFECT:** Adjusts audio effects or sound modes.
- **HIGH CLARITY:** Enhances picture clarity.
- **SUBTITLE:** Toggles or selects subtitle tracks.
- **AUDIO:** Selects audio tracks or languages.
- **LIGHT:** Activates the remote control's backlight.
- **DIM:** Adjusts the brightness of the remote control's backlight.

7. MAINTENANCE

7.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the surface or internal components.

7.2 Battery Replacement

If the remote control becomes unresponsive or its range decreases, it is likely time to replace the batteries. Follow the battery installation steps in Section 5.1 to replace the old batteries with new AAA alkaline batteries.

8. TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common problems and solutions:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with new ones.
 - Ensure there are no obstructions between the remote control and the Blu-ray player's IR sensor.
 - Make sure you are within the effective operating range (up to 10 meters).
- **Specific buttons not working:**
 - Clean the remote control surface, especially around the unresponsive buttons, to remove any dirt or debris.
 - If only certain buttons are affected, the remote might be damaged.
- **Short operating range:**
 - Replace the batteries, as low battery power can reduce the effective range.
 - Ensure the remote is pointed directly at the Blu-ray player.

9. SPECIFICATIONS

Brand	VINABTY
Model Name	N2QAYA000172 (DDCR-N2QAYA000172)
Connectivity Technology	Infrared (IR)
Compatible Devices	Panasonic DP-UB9000 Series Blu-ray Players
Maximum Range	10 Meters
Number of Buttons	50
Battery Type	2 x AAA Alkaline Batteries (not included)
Special Feature	Ergonomic Design
Color	Black

10. WARRANTY INFORMATION

This product is covered by a standard manufacturer's warranty. Please refer to the terms and conditions provided by your retailer or the product packaging for specific warranty details, duration, and claim procedures. Keep your purchase receipt as proof of purchase.

11. SUPPORT

If you require further assistance or have questions not covered in this manual, please contact the seller or manufacturer directly through the platform where you purchased the product. Provide your product model number (N2QAYA000172) and details of your issue for efficient support.