

NKF EN2A27ST

NKF EN2A27ST Universal Remote Control for Sharp TV: Instruction Manual

Model: **EN2A27ST** | Brand: **NKF**

1. INTRODUCTION

This manual provides instructions for the NKF EN2A27ST Universal Remote Control, designed as a direct replacement for various Sharp 4K Ultra LED Smart HDTV models. This remote offers full functionality without requiring any programming or pairing.

2. PACKAGE CONTENTS

- 1 x NKF EN2A27ST Replacement Sharp TV Remote Control

Note: Batteries and a separate user manual are not included in the package.

3. SETUP: BATTERY INSTALLATION

To begin using your remote control, you will need to install two AAA 1.5V alkaline batteries. No programming or pairing is required.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover off.
3. Insert two new AAA 1.5V alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Image: Rear view of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery insertion.

4. OPERATING INSTRUCTIONS

Once batteries are installed, the NKF EN2A27ST remote control is ready for immediate use with compatible Sharp TV models. No additional setup or code entry is necessary.

Compatible Sharp TV Models:

This remote control is compatible with a wide range of Sharp 4K Ultra LED Smart HDTVs, including but not limited to the following models:

- LC40P5000, LC40P5000U, LC43P5000, LC43P5000U, LC50P5000, LC50P5000U, LC55P5000, LC55P6000U, LC60P6000, LC60P6000U, LC60P6070, LC60P6070U
- LC55P5000U, LC55P6000, LC17340N5000U, LC17343N5000U, LC17343N6100U, LC17343N7000U, LC17350N5000U, LC17350N6000U, LC17350N7000U, LC17355N6000U, LC17355N7000U, LC17360N5100U, LC17360N6200U, LC17360N7000U, LC17365N5200U, LC17365N7000U, LC17365N9000U, LC17375N8000U
- LC40N5000U, LC43N6100U, LC43N7000U, LC50N5000U, LC50N6000U, LC50N7000U, LC55N6000U, LC55N620CU, LC55N7000U, LC60N6200U, LC60N7000U, LC65N7000U, LC75N620CU, LC75N8000U, N6200U
- LC32P5000U, LC-32P5000U, LC-40P5000U, LC40Q5000U, LC-40Q5000U, LC43Q620U, LC-43Q620U, LC43Q5000U, LC-43Q5000U, LC-50P5000U, LC50Q5000U, LC-50Q5000U, LC-55P5000U, LC55Q620U, LC-55Q620U, LC-60P6000U, LC-32Q5000U, LC32Q5000, LC-43P5000U





Image: Front view of the NKF EN2A27ST remote control, displaying its full button layout.

5. REMOTE CONTROL BUTTON FUNCTIONS

The remote control provides intuitive access to all standard television functions. Below is a general overview of common button categories:

- **Power Button** (): Turns the TV on or off.
- **Input Button**: Cycles through available input sources (HDMI, AV, etc.).
- **Number Pad (0-9)**: Direct channel selection.
- **Navigation Pad (Up, Down, Left, Right, OK)**: For menu navigation and selection.
- **Volume Up/Down (+/- VOL)**: Adjusts the audio volume.
- **Channel Up/Down (+/- CH)**: Changes TV channels.
- **Back Button**: Returns to the previous screen or menu.
- **Exit Button**: Exits the current menu or application.
- **Home Button** (): Accesses the TV's main smart hub or home screen.
- **Streaming Service Buttons (Netflix, Amazon, Vudu, YouTube)**: Direct access to popular streaming applications.
- **Media Playback Controls (Play, Pause, Fast Forward, Rewind)**: Controls media playback.

6. MAINTENANCE

Proper care will extend the life of your remote control.

- **Cleaning**: Wipe the remote with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA 1.5V alkaline).
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Environment:** Keep the remote away from extreme temperatures, direct sunlight, and moisture.

7. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common solutions:

- **Remote Not Responding:** Ensure the batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new AAA 1.5V alkaline batteries.
- **Limited Range or Intermittent Functionality:** Ensure there is a clear line of sight between the remote control and the TV's infrared receiver. Obstructions can block the signal.
- **Specific Buttons Not Working:** Check for any physical damage or debris lodged under the buttons. If the issue persists after checking batteries and line of sight, the remote may require replacement.

8. SPECIFICATIONS

Feature	Detail
Model Number	EN2A27ST
Brand	NKF
Compatible Devices	Sharp Televisions
Power Source	2 x AAA 1.5V Batteries (not included)
Product Dimensions	7.99 x 1.86 x 0.82 inches
Item Weight	2.72 ounces
Special Feature	No Programming Required
Color	Black

9. WARRANTY AND SUPPORT

This NKF EN2A27ST remote control comes with a**90-day warranty** from the date of purchase. If you encounter any issues or have questions regarding the product within this period, please contact the seller for assistance. We are committed to resolving any problems you may experience.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question