

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Hisense](#) /
- › Hisense HW-K45E 4.5kg Washing Machine User Manual

## Hisense HW-K45E

# Hisense HW-K45E 4.5kg Washing Machine User Manual

Model: HW-K45E

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient operation of your Hisense HW-K45E 4.5kg washing machine. Please read it thoroughly before using the appliance and retain it for future reference.

## 2. SAFETY INFORMATION

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. Ensure the appliance is properly grounded. Do not allow children to operate or play with the washing machine. Disconnect power before cleaning or maintenance.

## 3. PRODUCT OVERVIEW

---

The Hisense HW-K45E is a 4.5kg top-loading washing machine designed for compact spaces and efficient washing. It features a slim body, multiple wash programs, and a wind dry function.



Figure 3.1: Top-down view of the Hisense HW-K45E 4.5kg washing machine, highlighting its compact design and control panel.

### 3.1 Key Components

- **Control Panel:** Located at the top front, with buttons for power, program selection, and settings.
- **Stainless Steel Tub:** Features an uneven design for enhanced washing performance and durability.
- **Pulsator:** Unique design to prevent tangling and effectively remove dirt.
- **Lint Filter:** Collects lint and debris during the wash cycle.
- **Foldable Lid:** Designed for convenience in small spaces, allowing easy access even with items placed above.

# 頼れる「洗浄力」

簡単操作で頼れる洗浄機能が充実



Figure 3.2: Internal view showing the unique pulsator, stainless steel tub with uneven design, and the lint filter for effective cleaning.

# 糸くずフィルター

大容量でお手入れがラクな糸くずフィルターを配置



Figure 3.3: Close-up of the large capacity lint filter, designed for easy removal and cleaning.

## 4. SETUP

### 4.1 Placement

Place the washing machine on a firm, level surface. Due to its slim body (approximately 50cm width), it is suitable for various installation locations. Ensure there is adequate space around the unit for ventilation and operation.

### 4.2 Installation Requirements

- **Space:** Allow at least 1cm clearance from the left/right walls and 1cm from the rear wall. For top-opening, ensure 10-15cm clearance above the machine when the lid is fully open.
- **Water Supply:** Connect the provided water supply hose to a cold water tap.
- **Drainage:** Ensure the drain hose is properly installed for bottom drainage.
- **Power:** Connect to a 100V power outlet.

# 商品寸法+10cm以上の幅が必要です。

## 《搬入における確認項目》

 
※段差やコーナー箇所があり、直線ではない場合、+10cm以上の幅が必要となります。  
 ※手すり・照明・装飾物などがある場合、そこから+10cmの幅が必要となります。

### 《商品の寸法》




### 《玄関の高さ》

商品寸法 +10cm

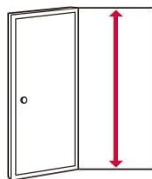


### 《玄関の幅》

 商品寸法 +10cm

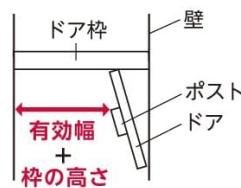


### 《廊下の幅》

 商品寸法 +10cm

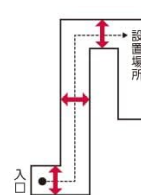


### 《エレベータの幅》

 商品寸法 +10cm

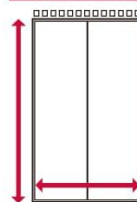


### 《階段の幅》

 商品寸法 +10cm

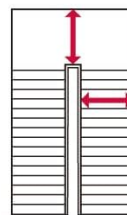


## 《設置における確認項目》

 ・必要なスペースは商品によって異なるため、詳細はメーカーページなどでご確認ください。  
 ・洗濯機の設置時にはドアを開閉するため上部のスペース確保が必要となります。

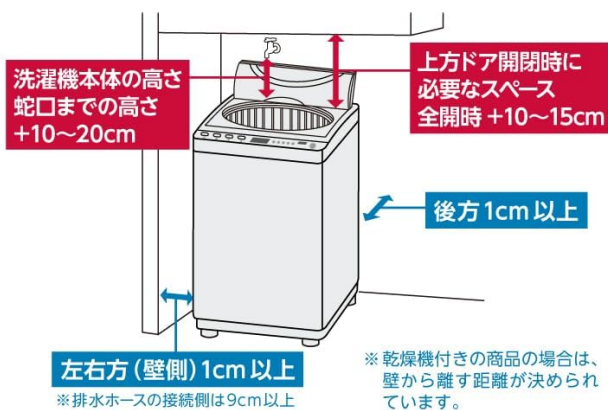

## 防水パンの有無と内側サイズをチェック

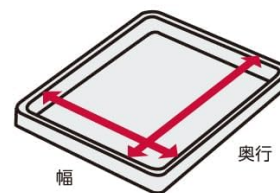 


※排水エルボ・足台の有無と排水口位置によって、追加費用がかかることがあります。

Figure 4.1: Diagram illustrating the necessary clearances for installation, including space around the unit and for opening the lid.

(単位：mm)

# 寸法図
 
## 横幅500×奥行540×高さ880

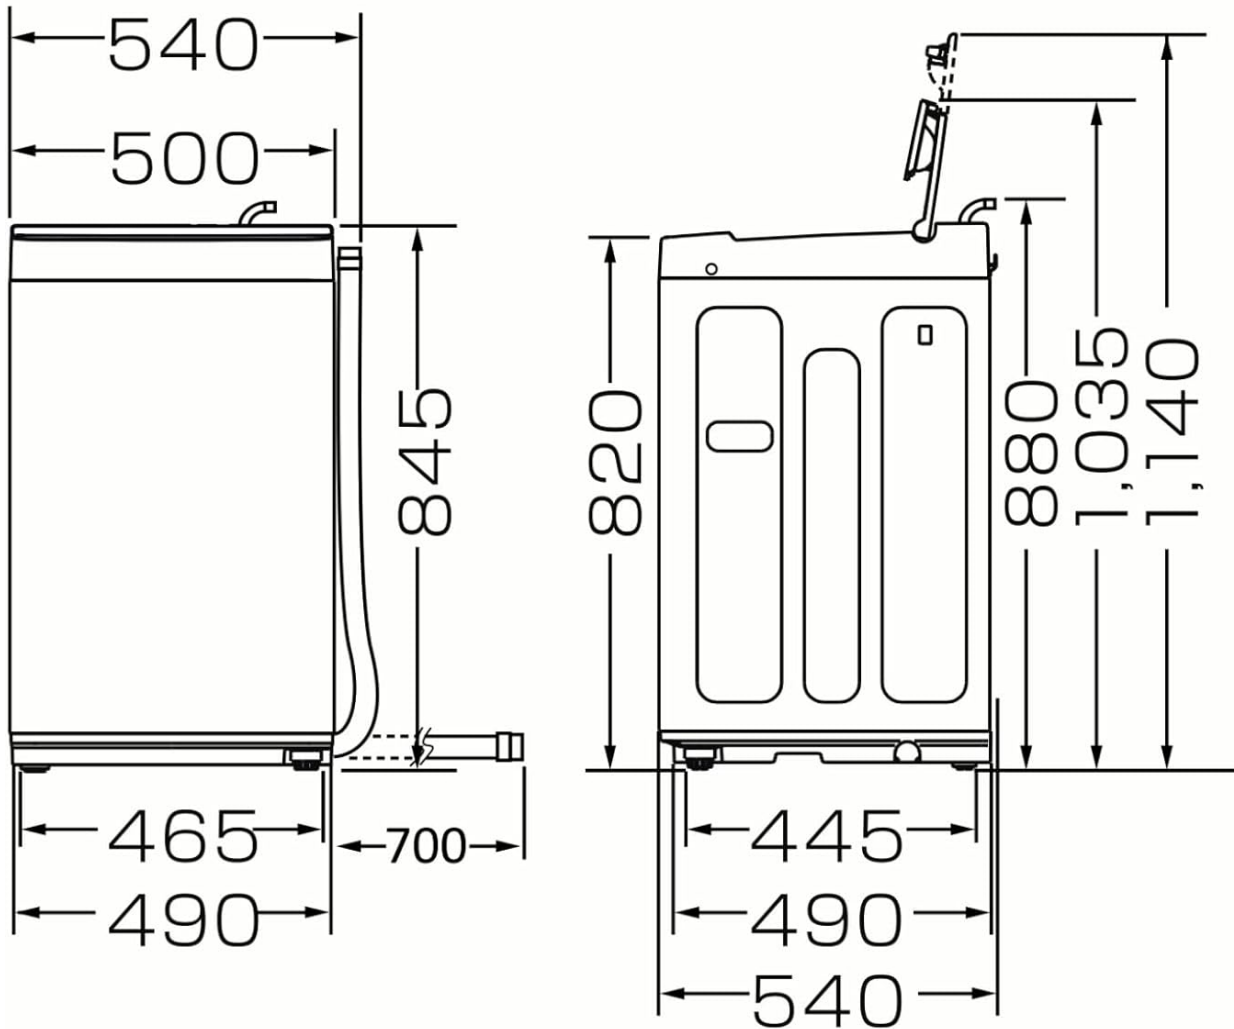

※画像はイメージです。

Figure 4.2: Detailed technical drawing showing the dimensions of the washing machine (Width 500mm, Depth 540mm, Height 880mm).

## 5. OPERATING INSTRUCTIONS

### 5.1 Basic Operation

1. Load laundry into the tub.
2. Add detergent to the detergent pocket.
3. Close the lid.
4. Press the Power button.
5. Select your desired wash course.
6. Press the Start/Pause button to begin.

### 5.2 Wash Courses

The HW-K45E offers a variety of courses to suit different laundry needs:

- **Standard:** For daily laundry.
- **Quick (10 minutes):** For lightly soiled items or when time is limited.
- **Soak:** For heavily soiled items requiring pre-soaking.
- **Delicate:** For fragile garments.
- **Blanket (3.0kg):** For washing blankets and large items.
- **Dry:** For dry-clean only marked clothes.
- **Tub Clean:** For cleaning the washing machine tub.
- **Rinse 1 Time:** An additional rinse cycle.
- **Wind Dry:** Uses air circulation to reduce drying time, especially useful for indoor drying.

## おすすめのポイント

暮らしの中に欠かせない機能を取り揃えている

### 洗浄力がアップ

 
#### 1 独自の回転羽根

絡みにくくて強力汚れを  
しっかり掻き出す。



#### 2 シャワー水流

強力循環水流が、頑固な  
汚れを浮かして落とす。

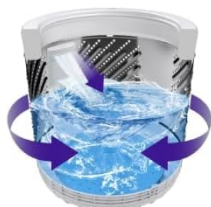

#### 3 ステンレス槽

洗濯板のような「凹凸設  
計」が汚れを残さず落と  
す



### 安心機能がいっぱい

#### 1 選べる好みボタン

「洗い」、「すすぎ」、  
「脱水」が個別に選べる。



#### 2 便利な予約機能

1~24時間までの予約時  
間設定が可能です。



#### 3 デジタル表示

お洗濯などの残り時間が  
バツとわかるデジタル表  
示。



Figure 5.1: Overview of the control panel, illustrating the selection options for different wash courses and functions like Wind Dry and Reservation.

### 5.3 Special Features

- **Reservation Function:** Set the washing machine to start at a later time, from 1 to 24 hours in advance.
- **Wind Dry Function:** Utilizes air to remove moisture from clothes, shortening drying time.
- **3D Shower Flow:** Vertical and horizontal water flows combine for powerful cleaning, effectively lifting and removing dirt.

# 風乾燥で乾燥時間を短くする

## 乾燥時間をもっと短くしたい時、非常に便利



Figure 5.2: The Wind Dry function helps to reduce moisture in clothes, making them dry faster, especially useful for indoor drying.

## 6. MAINTENANCE

### 6.1 Cleaning the Lint Filter

Regularly clean the lint filter to maintain washing performance. Remove the filter, clear any accumulated lint, and rinse it under running water before reinserting.

### 6.2 Cleaning the Tub

Use the 'Tub Clean' course periodically to prevent mold and detergent residue buildup in the stainless steel tub.

### 6.3 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners or solvents.

## 7. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, lid not closed, water supply off.	Check power connection, ensure lid is securely closed, check water supply.
Excessive vibration/noise	Uneven load, machine not level, shipping bolts not removed.	Redistribute laundry, adjust leveling feet, ensure all shipping bolts are removed.
Water leakage	Hoses loose, drain hose blocked.	Check hose connections, clear any blockages in the drain hose.
Clothes not clean	Too much laundry, insufficient detergent, incorrect program.	Reduce load size, use appropriate amount of detergent, select suitable wash course.

## 8. SPECIFICATIONS

Feature	Specification
Brand Name	Hisense
Model Number	HW-K45E
Capacity	4.5 Kilograms
Product Dimensions (D x W x H)	54 x 50 x 88 cm
Item Weight	28.5 Kilograms
Annual Energy Consumption	83037 Watts
Maximum Spin Speed	750 RPM
Operating Noise Level	47 dB
Voltage	100 Volts
Material	Stainless Steel
Included Accessories	Water supply hose
Special Features	Start reservation timer, Wind Dry

## 9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or contact Hisense customer service directly. Contact details can typically be found on the official Hisense website or in your purchase documentation.