

[Manuals.plus](#) /

› [Remax](#) /

› Remax RB-200HB Bluetooth Headphones User Manual

Remax RB-200HB

Remax RB-200HB Bluetooth Headphones User Manual

Model: RB-200HB

1. INTRODUCTION

Thank you for choosing the Remax RB-200HB Bluetooth Stereo Headphones. These headphones are designed to provide a premium audio experience with high-fidelity sound, comfortable wear, and versatile connectivity options. This manual will guide you through the setup, operation, and maintenance of your new headphones.



Figure 1: Remax RB-200HB Bluetooth Headphones

2. PACKAGE CONTENTS

Please check the package for the following items:

- Remax RB-200HB Bluetooth Headphones

- USB Charging Cable
- 3.5mm Audio Cable
- User Manual (this document)

3. PRODUCT FEATURES

- Premium stereo sound for high-fidelity audio.
- High-quality ear muffs and padded headband with soft protein leather for comfortable, long-time wearing.
- Strengthened aluminum trim and extendable metal slider for durability and adjustable fit.
- Foldable clamp design for easy portability and storage.
- Multi-functional in-line microphone with volume adjustment.
- Call management features: Answer/End call.
- Music control features: Play/Pause, Skip to previous or next song.
- Wired and Wireless (Bluetooth V4.1) connectivity options.
- Active Noise Cancellation for an immersive listening experience.



Figure 2: Lifestyle view and various color options of the headphones.

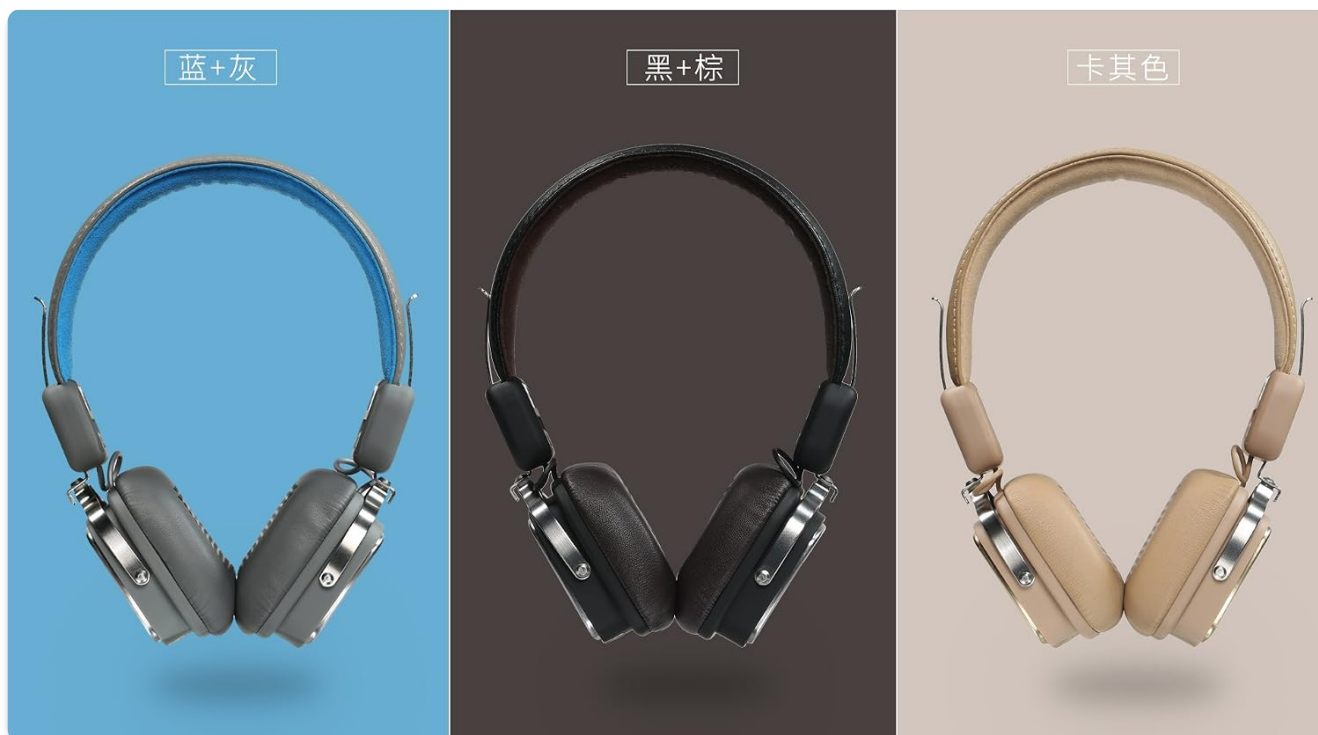



Figure 3: Available color options for the RB-200HB headphones.



Figure 4: Headphone ear cup rotation and folding mechanism for portability.

4. CONTROLS AND FUNCTIONS

Familiarize yourself with the control buttons located on the ear cups:

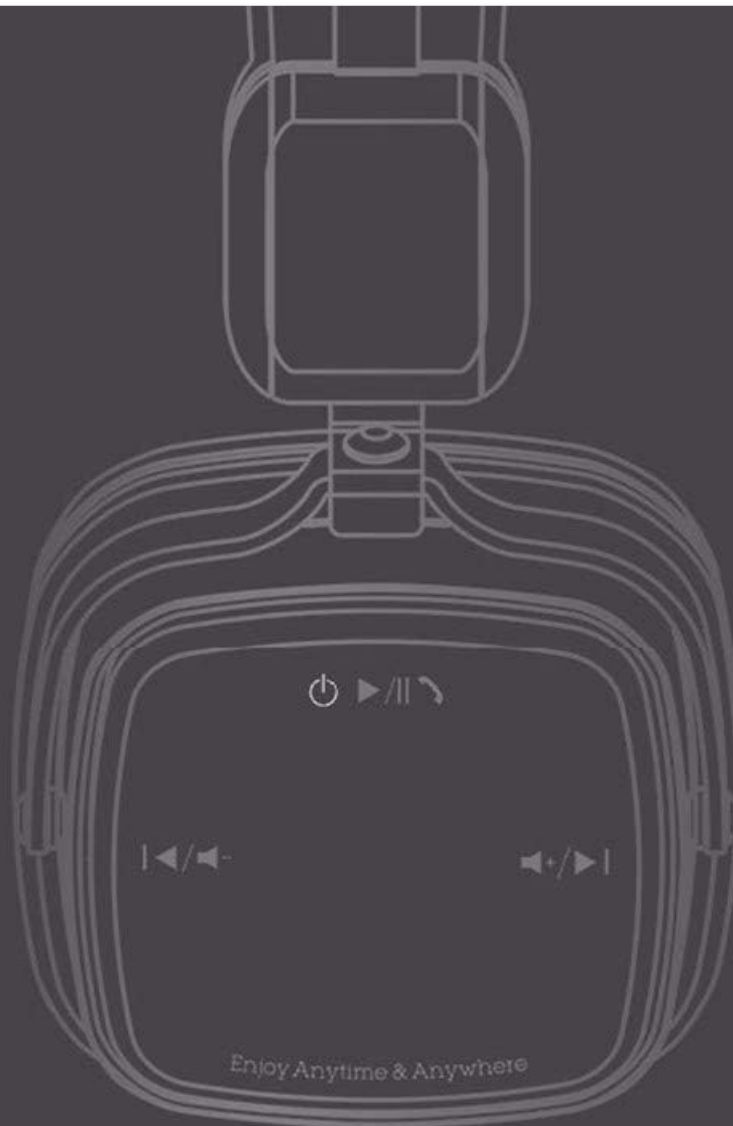

Bluetooth Version:	4.1
Distance Between Phone&Headset:	10m
Battery:	300mAh Lithium Battery
Charging Time:	2.5 Hours(Max)
Working Time:	10 tHours(Max)
Standby Time:	30 Days(Max)
Indicator Light:	Blue - Power On Red - Charging Blue&Red Flash - Pairing
Frequency Response Range:	20-20000Hz
Sensitivity:	110 +/- 5 db
Resistance:	32 +/- 15% Ω
Rated Power:	10 mW
Net Weight:	160g

Figure 5: Control layout and indicator lights.

- **Power Button / Multi-function Button:** Press and hold to power on/off. Short press to Play/Pause music, Answer/End calls.
- **Volume Up / Next Track:** Short press for Volume Up. Long press for Next Track.
- **Volume Down / Previous Track:** Short press for Volume Down. Long press for Previous Track.
- **LED Indicator:** Shows power status, pairing mode, and charging status.
- **Microphone:** For hands-free calls.
- **3.5mm Audio Jack:** For wired connection.
- **Micro USB Charging Port:** For charging the headphones.

5. SETUP

5.1 Charging the Headphones

1. Connect the micro USB end of the charging cable to the charging port on the headphones.
2. Connect the USB-A end of the charging cable to a USB power adapter (e.g., phone charger, computer USB port).
3. The LED indicator will glow **Red** during charging.
4. Once fully charged (approximately 2.5 hours), the LED indicator will turn off or change color (refer to specific model behavior if different).

Note: It is recommended to fully charge the headphones before first use.

5.2 Bluetooth Pairing

1. Ensure the headphones are turned off.
2. Press and hold the Power/Multi-function button for approximately 5-7 seconds until the LED indicator flashes **Blue** and **Red** alternately. This indicates the headphones are in pairing mode.
3. On your Bluetooth-enabled device (smartphone, tablet, computer), go to the Bluetooth settings.
4. Search for available devices. You should see "RB-200HB" or "Remax RB-200HB" in the list.
5. Select "RB-200HB" to connect.
6. Once successfully paired, the LED indicator will flash **Blue** slowly, and you may hear a confirmation tone.

Note: The headphones will automatically attempt to reconnect to the last paired device when powered on.

5.3 Wired Connection

You can use the headphones with a wired connection even if the battery is depleted:

1. Plug one end of the 3.5mm audio cable into the 3.5mm audio jack on the headphones.
2. Plug the other end of the 3.5mm audio cable into the audio output jack of your device.
3. The headphones will now function as wired headphones. Bluetooth functionality will be disabled when the audio cable is connected.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- **Power On:** Press and hold the Power/Multi-function button for approximately 3 seconds until the LED indicator flashes **Blue** and you hear a power-on tone.
- **Power Off:** Press and hold the Power/Multi-function button for approximately 3 seconds until the LED indicator flashes **Red** and you hear a power-off tone.

6.2 Music Playback

- **Play/Pause:** Short press the Power/Multi-function button.
- **Next Track:** Long press the Volume Up button.
- **Previous Track:** Long press the Volume Down button.
- **Volume Up:** Short press the Volume Up button.
- **Volume Down:** Short press the Volume Down button.

6.3 Call Management

- **Answer Call:** Short press the Power/Multi-function button when an incoming call rings.
- **End Call:** Short press the Power/Multi-function button during a call.
- **Reject Call:** Long press the Power/Multi-function button when an incoming call rings.

6.4 Active Noise Cancellation (ANC)

The Remax RB-200HB headphones feature Active Noise Cancellation. To activate or deactivate ANC, locate the dedicated ANC switch (if present, otherwise it's always active or controlled by a multi-function button press not specified). *(Note: Specific ANC control method not detailed in provided data, assuming it's an integrated feature.)*

7. MAINTENANCE AND CARE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the headphones in a cool, dry place, away from direct sunlight and extreme temperatures. Utilize the foldable design for compact storage.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the headphones regularly, even if not in use for extended periods.
- **Water Exposure:** These headphones are not waterproof. Avoid exposure to water, moisture, or rain.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Battery is low or depleted.	Charge the headphones fully.
Cannot pair with device.	Headphones not in pairing mode. Bluetooth is off on device. Device too far.	Ensure headphones are in pairing mode (flashing Blue/Red). Turn on Bluetooth on your device. Move device closer to headphones (within 10m).

Problem	Possible Cause	Solution
No sound or low volume.	Volume too low on headphones or device. Headphones not connected.	Increase volume on both headphones and connected device. Ensure headphones are properly paired/connected. Try wired connection.
Sound distortion.	Interference. Device too far.	Move closer to the connected device. Avoid strong electromagnetic interference.

9. SPECIFICATIONS

Feature	Specification
Bluetooth Version	V4.1
Transmission Range	10m
Battery Capacity	300mAh Lithium Battery
Charging Time	2.5 Hrs (Max)
Working Time	About 10 Hrs
Standby Time	About 30 Days
Frequency Response Range	20Hz-20KHz
Sensitivity	110 +/- 5 dB
Resistance	32 +/- 15% Ω
Rated Power	10 mW
Net Weight	160g
Headphones Form Factor	On Ear
Noise Control	Active Noise Cancellation
Headphones Jack	3.5 mm Jack
Connectivity Technology	Wireless, Wired
Material	Plastic
Color	Multi Color
Model Number	200HB

10. WARRANTY AND SUPPORT

Remax products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Remax website.

If you encounter any issues or have questions not covered in this manual, please contact Remax customer support through their official channels for assistance.

© 2024 Remax. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08B14WC89>

More documents and user manuals: <https://manuals.plus/>