

Oster 2124087

Oster DiamondForce Electric Wok (Model 2124087) User Manual

4.7-Quart Capacity, Diamond-Infused Nonstick Coating

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using this product.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the temperature control probe, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF," then remove plug from wall outlet.
- Do not use appliance for other than intended use.

2. PRODUCT OVERVIEW

The Oster DiamondForce Electric Wok is designed for versatile cooking with its durable, diamond-infused nonstick coating. This 4.7-quart capacity wok features a tempered glass lid and cool-touch handles for safe and convenient use.

Key Components:

- **Wok Body:** 4.7-quart capacity with DiamondForce nonstick coating.
- **Tempered Glass Lid:** Features a cool-touch knob for safe handling.
- **Cool-Touch Handles:** Located on the sides of the wok for easy transport.
- **Removable Temperature Probe:** Allows for precise temperature adjustment.



The Oster DiamondForce Electric Wok with its tempered glass lid. The lid features a cool-touch knob for safe handling.



The 4.7-quart capacity wok is suitable for preparing various meals, such as stir-fries.



Removable temperature probe

The removable temperature probe allows for easy adjustment of cooking temperature.

Product Videos:

An official video demonstrating the features and benefits of the Oster DiamondForce Wok, highlighting its nonstick performance and ease of use.

A detailed overview video showcasing the Oster DiamondForce Electric Wok in action, emphasizing its cooking capabilities and design.

3. SETUP

Before first use, ensure all packaging materials are removed and the wok is properly cleaned.

Initial Cleaning:

1. Wash the wok body, tempered glass lid, and temperature probe with warm, soapy water.
2. Rinse thoroughly and dry all parts completely.

Assembly:

1. Place the wok body securely on a stable, heat-resistant surface.
2. Insert the removable temperature probe into the receptacle on the side of the wok. Ensure it is fully seated.
3. Do not plug the power cord into an electrical outlet until you are ready to begin cooking.

4. OPERATING INSTRUCTIONS

The Oster DiamondForce Electric Wok offers precise temperature control for a variety of cooking tasks.

Using the Temperature Probe:

1. After inserting the temperature probe, plug the power cord into a standard electrical outlet.

2. Turn the temperature control dial to your desired heat setting. The indicator light will illuminate, signaling that the wok is heating.
3. The indicator light will turn off once the set temperature is reached and will cycle on and off during cooking to maintain the temperature.
4. For best results, allow the wok to preheat for 5-10 minutes before adding food.

Cooking Recommendations:

- **Stir-Frying:** Use high heat settings (e.g., 350°F - 400°F) for quick and even cooking of vegetables and meats.
- **Sautéing:** Medium-high heat (e.g., 300°F - 350°F) is ideal for sautéing vegetables or searing smaller cuts of meat.
- **Pan-Frying:** Adjust temperature as needed for pan-frying dishes, typically in the medium range (e.g., 250°F - 300°F).
- The DiamondForce nonstick coating ensures easy food release, requiring minimal oil or butter.

5. CARE AND CLEANING

Proper care and cleaning will extend the life of your electric wok and maintain its nonstick performance.

Cleaning Instructions:

1. Always unplug the temperature probe from the electrical outlet and the wok body before cleaning.
2. Allow the wok to cool completely before cleaning.
3. **Wok Body:** The wok body should be hand washed only. Use warm, soapy water and a soft sponge or cloth. Avoid abrasive cleaners or scouring pads that can damage the nonstick surface. Rinse thoroughly and dry completely.
4. **Tempered Glass Lid:** The tempered glass lid is top-rack dishwasher safe. Alternatively, wash by hand with warm, soapy water.
5. **Temperature Probe:** Wipe the temperature probe with a damp cloth. Do not immerse the probe, cord, or plug in water or any other liquid.
6. Ensure all parts are dry before storing or reassembling.

6. TROUBLESHOOTING

If you encounter issues with your Oster DiamondForce Electric Wok, refer to the following common solutions:

Problem	Possible Cause	Solution
Wok does not heat up.	Temperature probe not fully inserted or power cord not plugged in.	Ensure the temperature probe is securely inserted and the power cord is firmly plugged into a working electrical outlet.
Food cooks unevenly or too slowly.	Incorrect temperature setting or insufficient preheating time.	Increase the temperature setting. Allow the wok to preheat for 5-10 minutes before adding food. Ensure the indicator light cycles on and off to maintain temperature.

Problem	Possible Cause	Solution
Temperature control dial is difficult to read or adjust.	Placement of the temperature control dial under the handle.	Use a flashlight if necessary to clearly see the temperature markings. Exercise caution when adjusting to avoid touching hot surfaces.
Nonstick coating appears to be wearing off.	Use of abrasive cleaning tools or metal utensils.	Always use non-abrasive sponges and plastic or wooden utensils to protect the DiamondForce coating. Follow hand washing instructions carefully.

7. SPECIFICATIONS

Feature	Detail
Brand	Oster
Model Name	DiamondForce
Model Number	2124087
Color	Black
Capacity	4.7 Quarts (4.7 Liters)
Material	Diamond-infused nonstick, Glass
Handle Material	Silicone
Nonstick Coating	Yes (DiamondForce)
Dishwasher Safe	Lid only (top-rack)
Oven Safe	No
Product Dimensions	15 x 14.88 x 6.73 inches
Item Weight	6 pounds
Special Feature	Manual Temperature Control

8. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or visit the official Oster website. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact Oster customer service through their official channels.

