

[Manuals.plus](#) /

› [Ceenwes](#) /

› Ceenwes Professional Hair Clippers User Manual

Ceenwes Ceenwes

Ceenwes Professional Hair Clippers User Manual

Model: Ceenwes

PRODUCT OVERVIEW

The Ceenwes Professional Hair Clippers are designed for efficient and precise hair cutting, offering both cordless and corded operation. This versatile grooming kit features a sharp titanium blade combined with a ceramic movable blade for smooth performance, an LED power display for battery monitoring, and IPX7 waterproofing for easy cleaning. Its low vibration and quiet design make it suitable for all ages, including children.



Image: Overview of the Ceenwes Professional Hair Clippers and its complete set of accessories, including guide combs, charging cable, oil, cleaning brush, hairdressing cape, and travel bag.

WHAT'S INCLUDED

Your Ceenwes Professional Hair Clippers kit comes with the following components:

- 1 x Hair Clipper
- 6 x Limit Guide Comb (3mm, 6mm, 9mm, 12mm, Left Oblique, Right Oblique)
- 1 x Hair Comb
- 1 x USB Charging Cable
- 1 x Adapter
- 1 x Oil Bottle
- 1 x Clean Brush
- 1 x Hairdressing Cape

- 1 x Travel Bag
- 1 x User Manual (this document)

FRIENDLY HAIRCUT HELPER

Hair Cutting Kit Come with 6 Limit Combs and Protect Cap



Left Oblique



Right Oblique



3MM



6MM



9MM



12MM



Image: Close-up view of the six included guide combs (3mm, 6mm, 9mm, 12mm, left oblique, right oblique) and the hairdressing cape, highlighting their role as haircut helpers.

SETUP

1. **Initial Charge:** Before first use, fully charge the hair clipper. Connect the USB charging cable to the clipper and an adapter, then plug it into a power outlet. The LED display will indicate the battery percentage. A full charge takes approximately 4-5 hours and provides up to 3 hours of run-time.
2. **Blade Adjustment:** The fine-tuning knob on the clipper allows for five levels of length adjustment from 0.8mm to 2.0mm. Rotate the knob to select your desired base cutting length.
3. **Attach Guide Comb:** Select the appropriate guide comb (3mm, 6mm, 9mm, 12mm, left oblique, or right oblique) for your desired hair length. Align the comb with the clipper blade and push firmly until it clicks into place.

1500mAh Lithium Battery

- Charging Time: 4-5Hrs
- Working Time: 3Hrs

CONVENIENT AND SAFE USB CHARGING



Image: The hair clipper being charged via USB, with an emphasis on the LED battery power display and the adjustable blade setting for precise length control.

OPERATING INSTRUCTIONS

- Power On/Off:** Press the power button to turn the clipper on or off. The LED display will illuminate, showing the current battery level.
- Adjusting Speed:** The clipper features a two-speed power adjustment. Tap the power button to switch between levels. The first level is suitable for adults and hard, coarse hair, while the second level is ideal for babies and soft hair, ensuring low vibration and quiet operation (approximately 50 dB).
- Hair Cutting:**
 - Ensure the hair is clean and dry before cutting.
 - Start with a longer guide comb if unsure of the desired length, and gradually switch to shorter combs if needed.
 - Hold the clipper flat against the head and move it slowly against the direction of hair growth.
 - Use the left and right oblique combs for precise trimming around the ears.



Image: Illustration demonstrating the two-speed power adjustment feature, indicating one level for adults with coarse hair and a second, quieter level for babies and soft hair.

LOW VIBRATION & LOW NOISE

Noise Level < 60Db



Image: Depiction of the clipper's low vibration and low noise operation, with sleeping babies to emphasize its quiet performance (Noise Level < 60Db).

MAINTENANCE

- **Cleaning the Blades:** The hair trimmer is IPX7 waterproof, allowing for fast and easy cleaning. Simply rinse the blades under running water for hygienic cleaning. The cutter head is also removable for thorough cleaning.
- **Oiling the Blades:** After cleaning and drying, apply a few drops of the included oil to the blades to maintain their sharpness and ensure smooth operation.
- **Storage:** Store the clipper and its accessories in the provided travel bag to protect them from dust and damage.

TROUBLESHOOTING

If you encounter any issues with your Ceenwes Professional Hair Clippers, please refer to the following common solutions:

- **Clipper Not Turning On:**

- Ensure the battery is sufficiently charged. Connect the clipper to the charger and check the LED display.
- Verify that the power button is pressed firmly.

• **Reduced Cutting Performance:**

- Clean the blades thoroughly to remove any trapped hair or debris.
- Apply lubricating oil to the blades as part of regular maintenance.
- Check if the blade is properly aligned and secured.

• **Unusual Noise or Vibration:**

- Ensure the blade and guide comb are correctly attached.
- Clean and oil the blades.
- If the issue persists, contact customer support.

SPECIFICATIONS

Brand	Ceenwes
Model Number	Ceenwes
Power Source	Battery Powered (Cordless/Cord)
Battery Type	1500mAh Lithium Ion Battery
Charging Time	4-5 hours
Run Time	Up to 3 hours
Blade Material	Titanium fixed blade with Ceramic movable blade
Adjustable Blade Length	0.8mm - 2.0mm (5 levels)
Guide Combs Included	6 (3mm, 6mm, 9mm, 12mm, Left Oblique, Right Oblique)
Waterproof Rating	IPX7
Noise Level	Approximately 50 dB (Low Noise)
Voltage	100-240V (Worldwide Voltage)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official Ceenwes website. Keep your purchase receipt as proof of purchase for any warranty claims.

Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This product is for personal grooming use only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question