

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Philips](#) /

› [Philips S1223/45 Electric Shaver User Manual](#)

Philips S1223/45

Philips S1223/45 Electric Shaver User Manual

Model: S1223/45

INTRODUCTION

Thank you for choosing the Philips S1223/45 Electric Shaver. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new shaver. Please read these instructions carefully before first use and keep them for future reference.

What's in the Box

- Philips S1223/45 Electric Shaver
- Charging Cable
- User Manual

KEY FEATURES

The Philips S1223/45 Electric Shaver is designed for a comfortable and efficient shaving experience, whether wet or dry. Key features include:

- **Comfort Cut Blades:** Equipped with 27 self-sharpening blades for a consistent and close shave.
- **3-Directional Flex Heads:** Shaver heads flex and float in 3 directions to follow the contours of your face, ensuring efficient hair catching even in difficult areas.
- **AquaTec Technology:** Allows for comfortable dry shaving or a refreshing wet shave with gel or foam.
- **One-Touch Open:** For easy and quick cleaning of the shaver head.
- **Pop-Up Trimmer:** Integrated trimmer for precise grooming of sideburns and mustache.
- **Skin Protection System:** Designed to glide smoothly over the skin, minimizing irritation.





Wet & Dry



Image: Front view of the Philips S1223/45 Electric Shaver, showcasing its ergonomic design and rotary heads.



Image: Detailed view of the shaver head, highlighting the Comfort Cut blades and the flexibility of the 3-Directional Flex Heads.

New Shaver Series 1000 AquaTouch

Fresh shave, Smooth finish



ComfortCUT Blades

The rounded-edge of the shaving head guides the hairs into the cutter for optimal performance. The 27 **Self-Sharpening blades** are precision engineered to guarantee consistent results with every shave for a **long-lasting performance**.



3 Direction Floating heads

The heads of the shaver flex and float in 3 different directions on an ergonomically designed convex shaving system.. This ensures highly efficient hair catching, even on the most difficult to reach areas



Pop-up Trimmer

Integrated Pop-up trimmer perfect for trimming down the side burns for an overall clean look



Image: The Philips S1223/45 Electric Shaver with its integrated pop-up trimmer extended, ready for use.



Image: An infographic detailing the key features of the Philips Shaver Series 1000 AquaTouch, including ComfortCUT Blades, 3 Direction Floating heads, and Pop-up Trimmer.

Your browser does not support the video tag.

Video: An official Philips product video showcasing the Philips S1223/45 Electric Shaver, highlighting its key features such as the pop-up trimmer, Comfort Cut blades, and 3-Directional Flex Heads.

SETUP

Charging the Shaver

1. Ensure the shaver is switched off before charging.
2. Insert the small plug of the charging cable into the shaver's charging socket.
3. Plug the adapter into a wall outlet.
4. The charging indicator light on the shaver will illuminate to show it is charging.
5. A full charge typically takes approximately 8 hours and provides up to 40 minutes of cordless shaving time.
6. Unplug the shaver once fully charged. Do not leave the shaver connected to the power outlet for extended periods after it is fully charged.

Note: The shaver is designed for cordless operation only and cannot be used while plugged into a power outlet.

OPERATING INSTRUCTIONS

Dry Shaving

1. Ensure your face is clean and dry.
2. Press the on/off button to switch on the shaver.
3. Move the shaver in small, circular motions over your skin.

4. Apply gentle pressure.

Wet Shaving (AquaTec)

1. Wet your face and apply shaving foam or gel.
2. Press the on/off button to switch on the shaver.
3. Move the shaver in small, circular motions over your skin.
4. Rinse the shaver head under running water during shaving to prevent clogging.
5. After shaving, rinse your face and the shaver head thoroughly.

Using the Pop-Up Trimmer

1. Switch on the shaver.
2. Slide the pop-up trimmer release button upwards to activate the trimmer.
3. Use the trimmer to shape sideburns, mustache, or trim longer hairs before shaving.
4. After use, slide the trimmer release button downwards to retract the trimmer.

MAINTENANCE

Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene.

1. Switch off the shaver and unplug it from the power outlet.
2. Press the "one-touch open" button to open the shaver head unit.
3. Rinse the shaver head thoroughly under warm running water.
4. You can also remove the shaving heads for a more thorough cleaning. Refer to the detailed illustrations in the full manual for head removal.
5. Shake off excess water and allow the shaver head to air dry completely before closing or storing.
6. Wipe the shaver body with a dry cloth.

Replacing Shaving Heads

For best shaving results, it is recommended to replace the shaving heads every two years. Replacement heads are available from Philips retailers or online.

TROUBLESHOOTING

- **Shaver not turning on:** Ensure the shaver is charged. If the battery is low, connect it to the charger.
- **Poor shaving performance:**
 - Clean the shaving heads thoroughly.
 - Ensure the shaving heads are not damaged or worn out. Replace if necessary.
 - Allow your skin to adapt to the shaver for a few weeks if you are new to electric shaving.
- **Shaver not charging:** Check if the charging cable and adapter are correctly connected to both the shaver and the wall outlet. Ensure the outlet is functional.

If you encounter issues not covered here, please refer to the full user manual or contact Philips customer support.

SPECIFICATIONS

Model Name	S1223/45
------------	----------

Brand	Philips
Power Source	Battery Powered
Battery Type	Rechargeable (2 AAA batteries included)
Special Feature	Cordless, Wet & Dry Use
Head Type	Rotary, 3-Directional Flex Heads
Blade Material	Stainless Steel (Comfort Cut blades, 27 self-sharpening)
Color	Black
Item Weight	370 Grams
Recommended Uses	Beard
Included Components	Shaver, Charging Cable, User Manual

SAFETY INFORMATION

- Keep the appliance and charging cable dry.
- Do not use the appliance if it is damaged.
- Do not immerse the charging adapter in water.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use the original charging cable and adapter provided with the shaver.
- Do not use the shaver while it is connected to the power outlet.
- Always check the shaving heads before use. If they are damaged, do not use the shaver as this may cause injury.

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Philips website for your region. For technical support, product registration, or to download the full user manual, please visit www.philips.com/support.