

Igzyz B08B68TFLJ

Igzyz 1080P Pen Camera Instruction Manual

Model: B08B68TFLJ

1. PRODUCT OVERVIEW

The Igzyz 1080P Pen Camera is a discreet and portable device designed for capturing video, audio, and still images. It integrates a high-definition camera into a functional writing pen, making it suitable for various recording needs. This device supports 1080p video resolution at 30 frames per second and 2560x1440 photo resolution. It also features motion detection recording and comes with a 32GB Micro SD card for storage.



Image: The Igzyz 1080P Pen Camera, a discreet recording device.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Igzyz 1080P Pen Camera
- USB Charging Cable
- 5 Pen Refills
- 32GB Micro SD Card
- SD Card Reader (USB-A adapter)
- User Manual

Penna Telecamera Multiuso



Image: All items included in the Igzyz Pen Camera package.

3. DEVICE COMPONENTS

Familiarize yourself with the key components of your Igzyz Pen Camera:



Image: Labeled diagram of the pen camera's parts.

- **Power Button:** Controls power on/off and recording functions.
- **Indicator Light:** Displays device status (standby, recording, charging).
- **Lens:** The camera's recording aperture.
- **USB Port:** For charging and data transfer.
- **Reset:** Small pinhole for resetting the device.
- **Pen Core:** The writing tip of the pen.
- **SD Card Slot:** For inserting the Micro SD card.

4. SETUP

Before first use, please follow these steps:

1. **Insert Micro SD Card:** Unscrew the pen body to access the Micro SD card slot. Carefully insert the provided 32GB Micro SD card into the slot until it clicks into place.
2. **Secure Pen Body:** Screw the pen body back on clockwise to ensure it is securely closed.
3. **Charge Battery:** Connect the pen camera to a computer or USB charger using the provided USB cable. The indicator light will show charging status. A full charge takes approximately 1 hour.



Image: Proper insertion of the Micro SD card.

Setup Video Guide

Your browser does not support the video tag.

Video: A quick guide demonstrating the setup and basic operation of the Igzyz Pen Camera.

5. OPERATING INSTRUCTIONS

The Igzyz Pen Camera operates with a single multi-function button.

Super simple operation

Only one button controls video recording, photo taking, and audio recording.



Image: Single button operation for various functions.

5.1. Power On/Off

- **Power On:** Press and hold the power button for approximately 2 seconds. The red indicator light will turn on and remain solid, indicating the camera is in standby mode.
- **Power Off:** In any active state (standby or recording), press and hold the power button until the red light turns off. The camera will power down.

5.2. Taking Photos

- While in standby mode (red light solid), briefly press the power button once. The red light will flash once, and a photo will be taken and saved.

5.3. Recording Video

- While in standby mode (red light solid), press and hold the power button for approximately 2 seconds. The red light will flash 3 times and then turn off, indicating that video recording has started.

5.4. Motion Detection Recording

- While in standby mode (red light solid), quickly press the power button twice. The red light will flash rapidly 5 times and then turn off. The camera is now in motion detection standby. When motion is detected, the red light will flash slowly, and recording will begin.

5.5. Audio Recording

- While in standby mode (red light solid), quickly press the power button three times. The red light will flash 3 times and then turn off, indicating that audio recording has started.

5.6. Saving Files

- During any recording process (video, motion detection, or audio), briefly press the power button once. The red light will turn solid, indicating the file has been saved, and the camera has returned to standby mode.

6. DATA TRANSFER

To access your recorded files:

1. **Direct Connection:** Connect the pen camera to your computer using the provided USB cable. The device should appear as a removable disk.
2. **Using SD Card Reader:** Alternatively, remove the Micro SD card from the pen camera and insert it into the provided SD card reader. Connect the card reader to your computer's USB port.

Files can be transferred to your Windows or Mac computer. No special software is required.



Image: Connecting the pen camera to a laptop for data access.

7. MAINTENANCE

7.1. Pen Refill Replacement

To replace the ink refill:

1. Unscrew the pen tip from the main body.
2. Carefully pull out the used ink refill.
3. Insert a new refill (5 are included in the package).
4. Screw the pen tip back onto the body.

Replace the refill of this camera pen

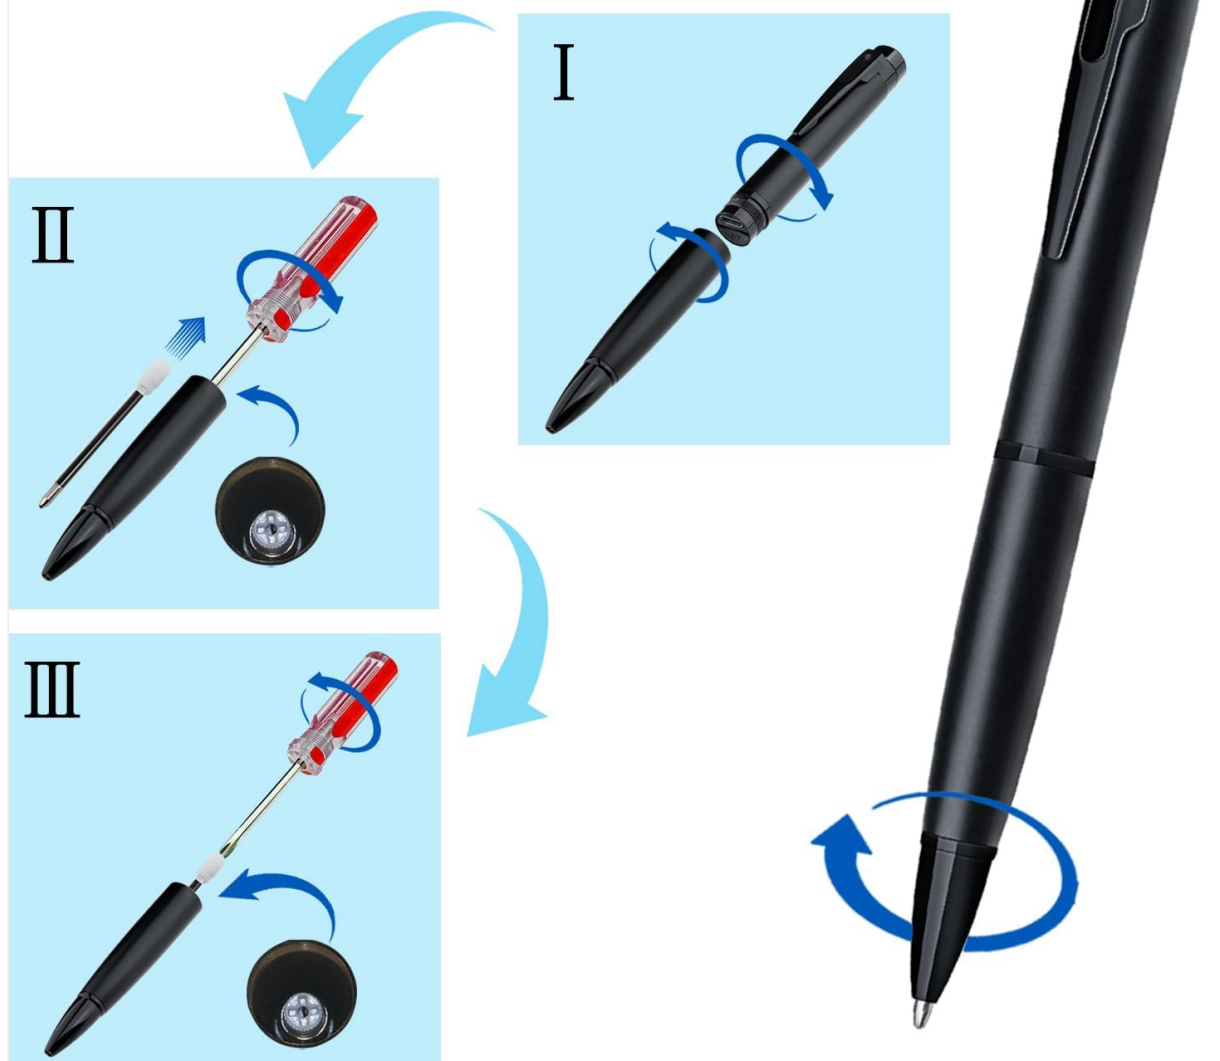


Image: Step-by-step guide for replacing the pen refill.

7.2. Cleaning

Wipe the pen camera with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.

8. TROUBLESHOOTING

If you encounter issues with your Igzyz Pen Camera, refer to the following common problems and solutions:

- **Device Not Turning On:**

Ensure the battery is fully charged. Connect the pen camera to a power source and allow it to charge for at least 1 hour. If the issue persists, try pressing the reset button with a small pin.

- **Button Not Responding:**

Ensure the power button is pressed firmly and released cleanly. Some users have reported issues with the button getting stuck. If the button feels jammed, gently try to free it. If unresponsive, try resetting the device.

- **Recording Not Starting/Saving:**

Verify that the Micro SD card is correctly inserted and has sufficient free space. The camera requires a Micro SD card to save recordings. Check the indicator light behavior to confirm the correct recording mode is activated. If the card is full, transfer files to your computer and format the card.

- **Poor Video/Photo Quality:**

Ensure there is adequate lighting in the recording environment. The camera performs best in well-lit conditions. Avoid recording small text or in very low light, as this can reduce clarity.

- **Cannot Transfer Files to Computer:**

Ensure the pen camera is properly connected to your computer via the USB cable, or that the Micro SD card is correctly inserted into the card reader and connected to the computer. Try a different USB port or cable.

Ensure your computer's operating system recognizes external storage devices.

9. SPECIFICATIONS

Brand	Igzyz
Model	B08B68TFLJ
Connectivity Technology	Wired (USB)
Special Feature	Portable
Indoor/Outdoor Use	Outdoor, Indoor
Compatible Devices	Laptop
Control Type	Button, Voice
Video Capture Resolution	1080p
Effective Video Resolution	1080 Pixels
Frame Rate	30 frames per second
Focus Type	Motion detection
Power Source	Battery Powered
Voltage	5 Volt
Wattage	1.66 Watt-hours
Batteries Required	Yes
Video Capture Format	AVI
Item Dimensions	14.5 x 1.5 x 1.5 cm
UPC	709586170618

10. WARRANTY AND SUPPORT

Igzyz provides the following support for your pen camera:

- **Warranty:** All Igzyz mini spy cameras come with a one-year warranty.
- **Technical Support:** Lifetime technical support is available for this product.
- **Contact:** If you encounter any issues or have questions regarding your device, please do not hesitate to contact us via Amazon or by sending an email. We aim to respond within 12 hours to provide a satisfactory resolution.

