

## Bulova C5000

# Bulova Precision Connect Wall Clock C5000 User Manual

Model: C5000

## INTRODUCTION

Thank you for choosing the Bulova Precision Connect Wall Clock C5000. This clock combines modern design with advanced WiFi connectivity to ensure precise and accurate timekeeping. This manual provides essential information for setting up, operating, and maintaining your new clock.

### Key Features:

- **Unmatched Precision:** Synchronizes with international time servers via WiFi for accuracy within 1 second every 24 hours.
- **Secure and Simple Setup:** Password-protected WiFi connection without requiring an additional app.
- **Automatic Adjustments:** Daily recalibration between 3 AM and 5 AM, and automatic updates for Daylight Saving Time.
- **Future-Proof:** Receives automatic software updates.
- **Clear Readability:** Large, easy-to-read Arabic numerals on a white dial.
- **Battery Operated:** Requires 2 AA batteries for operation.

## PACKAGE CONTENTS

- Bulova Precision Connect Wall Clock C5000
- 2 AA Batteries (included)
- User Manual (this document)

## SETUP

### 1. Battery Installation

The clock requires two (2) AA batteries for operation. These are included with your purchase.

1. Locate the battery compartment on the back of the clock.

2. Open the battery compartment cover.
3. Insert two AA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

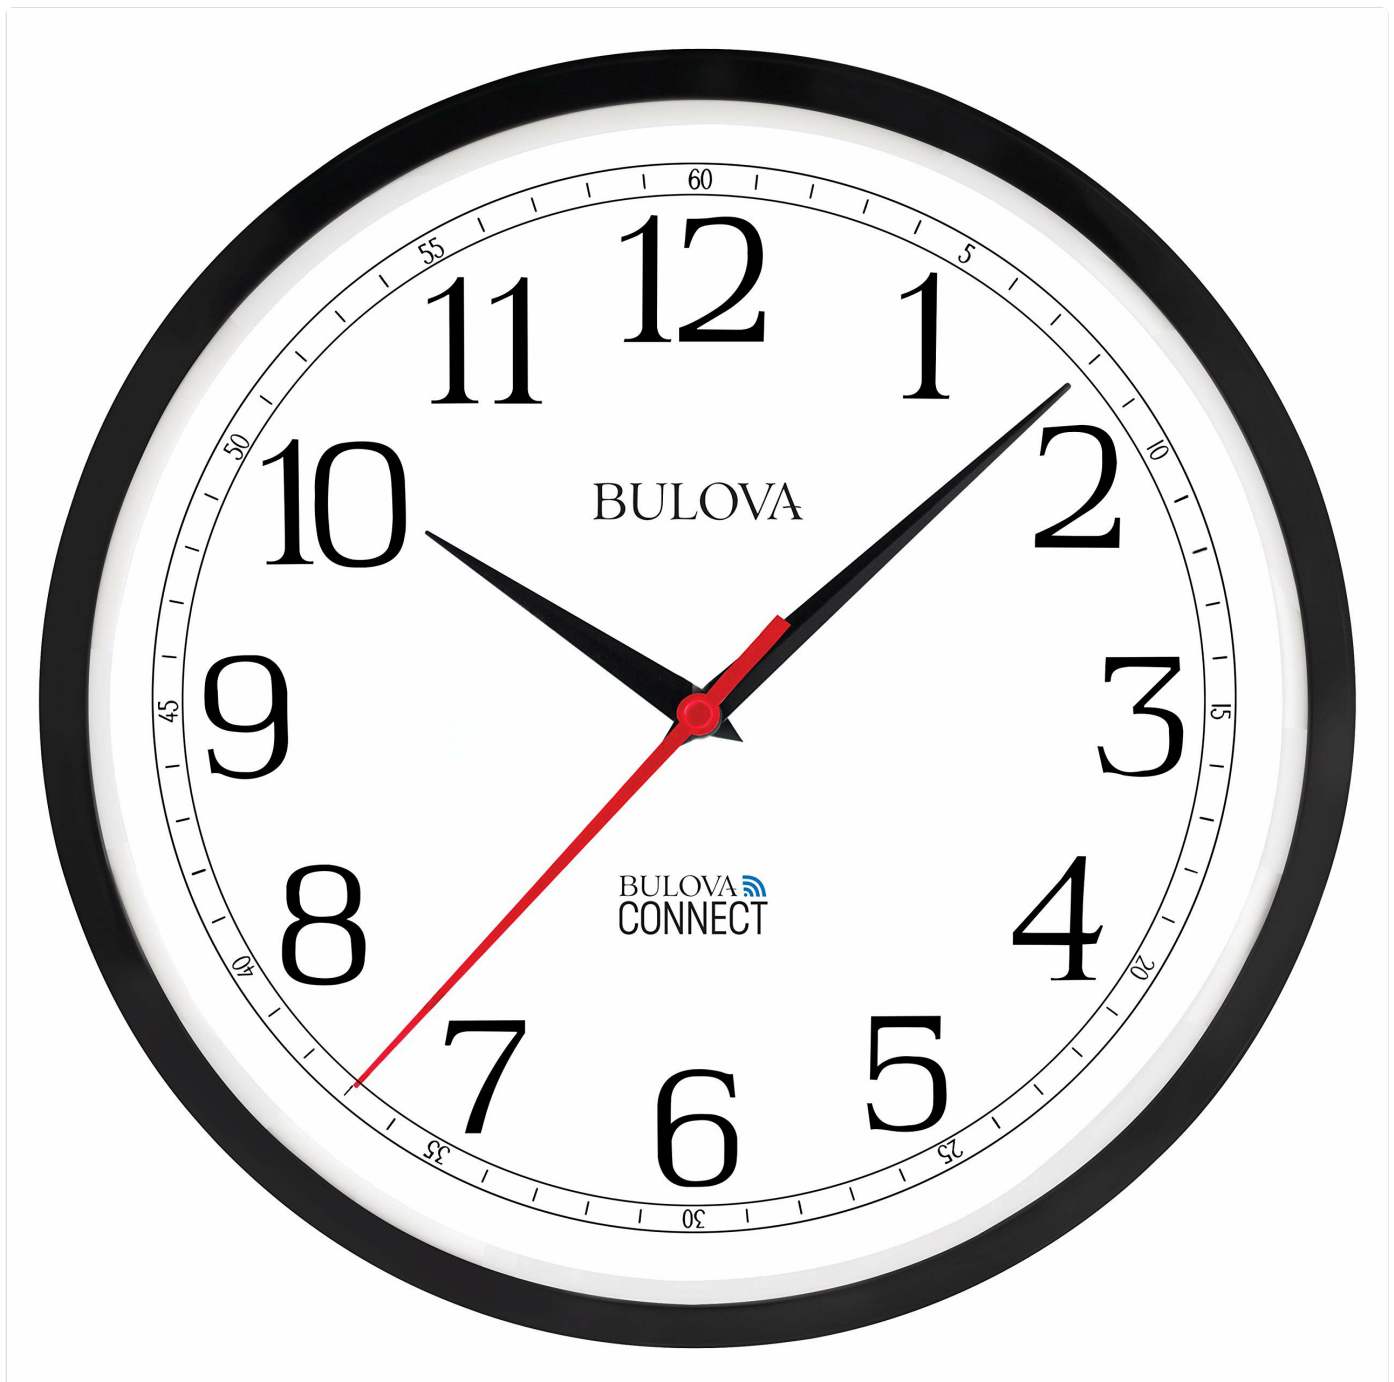


*Image: Rear view of the clock, highlighting the battery compartment and control buttons.*

## 2. Mounting the Clock

The Bulova C5000 is designed for wall mounting.

1. Choose a suitable location on a wall, ensuring it is within range of your WiFi network for optimal performance.
2. Use an appropriate wall anchor and screw (not included) for secure mounting. The clock features a keyhole slot on the back for easy hanging.
3. Hang the clock securely on the installed screw.



*Image: Front view of the Bulova Precision Connect Wall Clock C5000.*

### 3. WiFi Connection and Initial Time Synchronization

Upon battery installation, the clock will attempt to connect to a WiFi network and synchronize its time. No additional app is required for setup.

1. After inserting batteries, the clock's internal display (on the back) will show "CONNECTING" or similar messages.
2. Press and hold the **WiFi** button on the back of the clock to initiate the WiFi setup mode.
3. Using a smartphone or computer, connect to the WiFi network broadcast by the clock (e.g., "Bulova\_Clock\_XXXX").
4. Open a web browser and navigate to the clock's setup page (usually 192.168.4.1 or similar, check the clock's display if available).
5. Select your home WiFi network from the list and enter your network password.
6. Confirm the settings. The clock will then attempt to connect to your WiFi network and synchronize with international time servers.
7. Once connected, the clock hands will automatically adjust to the correct time. The internal display will confirm successful synchronization.

**Note:** If the clock fails to connect, ensure it is within range of your WiFi router and that the password is entered correctly. Some users have reported difficulty with connectivity; ensure your router settings are compatible (e.g., 2.4GHz network).

## OPERATION

---

### Automatic Time Synchronization

The Bulova Precision Connect Wall Clock C5000 is designed to maintain precise time automatically:

- **Daily Recalibration:** The clock automatically adjusts its time between 3 AM and 5 AM daily to ensure consistent accuracy.
- **Daylight Saving Time (DST):** The clock will automatically update for Daylight Saving Time changes, eliminating the need for manual adjustments.
- **Software Updates:** The clock receives automatic software updates to keep its functionality current.

### Manual Time Adjustment (Advanced)

While the clock is designed for automatic synchronization, manual adjustment may be necessary in specific circumstances (e.g., if WiFi is unavailable for an extended period). Manual setting can be complex due to the clock's design for automatic operation.

Refer to the buttons on the back of the clock: **SET**, **+**, **-**, and **RESET**.

1. Press the **SET** button to enter manual adjustment mode.
2. Use the **+** and **-** buttons to adjust the hour and minute hands.
3. Press **SET** again to confirm each adjustment and move to the next setting (e.g., minutes).
4. After setting the desired time, exit manual mode by pressing **SET** until the clock resumes normal operation or by waiting for a timeout.

**Caution:** Manual adjustment is generally not recommended as it can interfere with automatic synchronization. Always attempt WiFi connection first.

## MAINTENANCE

---

### Battery Replacement

When the clock's hands stop moving or the time becomes inaccurate despite a strong WiFi signal, it may be time to replace the batteries.

1. Open the battery compartment on the back of the clock.
2. Remove the old AA batteries.
3. Insert two new AA batteries, observing correct polarity.
4. Close the compartment. The clock will attempt to re-establish WiFi connection and synchronize time.

**Note:** Use high-quality alkaline batteries for best performance and longevity. Low battery voltage can affect WiFi connectivity.

### Cleaning

To clean your clock, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or spray directly onto the clock, as this may damage the finish or internal components.

## TROUBLESHOOTING

---

| Problem                                             | Possible Cause                                                                                                                                                                                                                      | Solution                                                                                                                                                                                                                                                                                        |
|-----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Clock does not display correct time or stops.       | Low batteries.                                                                                                                                                                                                                      | Replace with fresh AA batteries.                                                                                                                                                                                                                                                                |
| Clock fails to connect to WiFi or loses connection. | <ul style="list-style-type: none"><li>◦ Out of WiFi range.</li><li>◦ Incorrect WiFi password.</li><li>◦ Router compatibility issues (e.g., 5GHz network only).</li><li>◦ Outdated internal software/security certificate.</li></ul> | <ul style="list-style-type: none"><li>◦ Move clock closer to the WiFi router.</li><li>◦ Re-enter WiFi password carefully during setup.</li><li>◦ Ensure your router supports 2.4GHz WiFi.</li><li>◦ Perform a factory reset (see below). If issues persist, contact customer support.</li></ul> |
| Clock does not adjust for Daylight Saving Time.     | <ul style="list-style-type: none"><li>◦ No WiFi connection.</li><li>◦ Time zone setting incorrect during initial setup.</li></ul>                                                                                                   | <ul style="list-style-type: none"><li>◦ Verify WiFi connection.</li><li>◦ Perform a factory reset and re-setup, ensuring correct time zone selection.</li></ul>                                                                                                                                 |
| Clock hands are misaligned.                         | Internal mechanism issue or power interruption.                                                                                                                                                                                     | Remove and reinsert batteries. The clock should re-synchronize and align hands. If not, perform a factory reset.                                                                                                                                                                                |

### Factory Reset

If you encounter persistent issues, a factory reset can often resolve them. This will clear all network settings and return the clock to its default state.

1. Locate the **RESET** button on the back of the clock.
2. Using a small pointed object (like a paperclip), press and hold the**RESET** button for approximately 5-10 seconds until the internal display indicates a reset.
3. The clock will restart and enter the initial setup mode, requiring you to re-establish the WiFi connection.

### SPECIFICATIONS

|                 |                                                             |
|-----------------|-------------------------------------------------------------|
| Brand           | Bulova                                                      |
| Model Number    | C5000                                                       |
| Dimensions      | 12.5" W x 12.5" H                                           |
| Item Weight     | 2.59 pounds (1.18 Kilograms)                                |
| Power Source    | Battery Powered (2 AA batteries included)                   |
| Display Type    | Analog (with internal digital display for setup)            |
| Special Feature | WiFi Enabled, Automatic Time Synchronization, Large Display |
| Material        | Matte Black frame, Protective glass lens                    |
| Color           | Black and White                                             |

|                |              |
|----------------|--------------|
| Mounting Type  | Wall Mount   |
| Operation Mode | Automatic    |
| UPC            | 042429584877 |

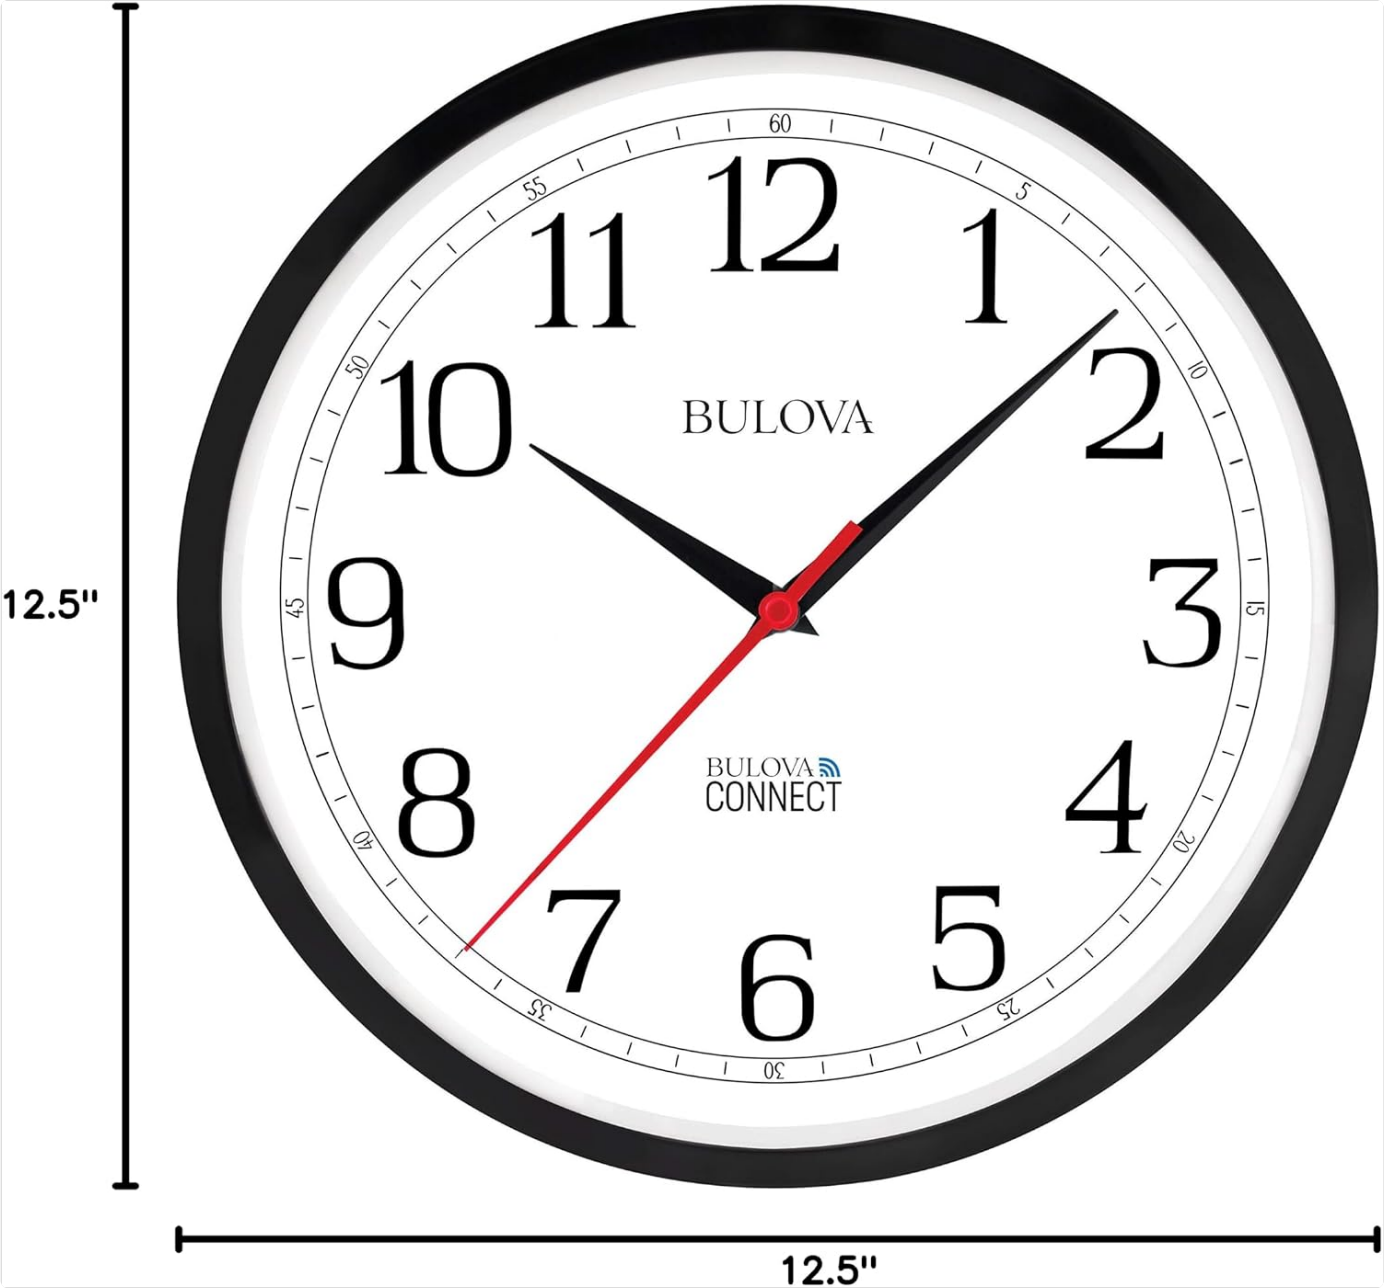


Image: Dimensions of the Bulova Precision Connect Wall Clock C5000.

WARRANTY INFORMATION

This Bulova Precision Connect Wall Clock C5000 comes with a **1-year limited manufacturer’s warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. The warranty does not cover:

- Damage caused by accident, abuse, misuse, or improper installation.
- Damage caused by unauthorized service or modification.
- Damage from battery leakage.
- Normal wear and tear.

Please retain your proof of purchase for warranty claims.

## CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please visit the official Bulova website or contact their customer service department.

You can find more information and contact details on the [Bulova Store on Amazon](#).

© 2026 Bulova. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question