

Gemmy Skeleton Reaper

Gemmy 10.5' Airblown Skeleton Reaper with Red LED Eyes Giant Inflatable Instruction Manual

Model: Skeleton Reaper

INTRODUCTION

Thank you for purchasing the Gemmy 10.5' Airblown Skeleton Reaper with Red LED Eyes Giant Inflatable. This product is designed to provide a festive and spooky decoration for your indoor or outdoor space. Please read this manual carefully before setup and operation to ensure safe and proper use. Keep these instructions for future reference.

IMPORTANT SAFETY INFORMATION

- This product is intended for seasonal use. Do not use it as a permanent installation.
- Always unplug the product when leaving unattended, before installing or removing parts, or when not in use.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- Do not block air openings or place on a soft surface where openings may become blocked. Keep air openings free of lint, hair, and the like.
- To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- Do not use this product near water, such as a bathtub, washbowl, kitchen sink, laundry tub, swimming pool, or in a wet basement.
- This product is not a toy. Adult supervision is required.
- Ensure all electrical connections are protected from moisture.

PACKAGE CONTENTS

Please verify that all components are present before beginning setup:

- 1 x Gemmy 10.5' Airblown Skeleton Reaper Inflatable
- 1 x Internal Blower
- Stakes for outdoor setup
- Tethers for outdoor setup
- Power Adapter

SETUP INSTRUCTIONS

Follow these steps for quick and easy setup:

1. **Unpack the Inflatable:** Carefully remove the inflatable and all accessories from the packaging. Lay the inflatable flat on a clean, dry surface, ensuring there are no obstructions around the blower intake.
2. **Position the Inflatable:** Choose a suitable location for your inflatable. For outdoor use, select a level area away from sharp objects, heat sources, and strong winds. Ensure the power cord can reach an outdoor-rated electrical outlet.
3. **Secure the Inflatable (Outdoor Use):**
 - Locate the tether points on the inflatable.
 - Attach the tethers to these points.
 - Once the inflatable is partially inflated, use the provided stakes to secure the base of the inflatable to the ground.
 - Extend the tethers outwards at an angle and secure them to the ground with additional stakes. Adjust the tension of the tethers to keep the inflatable stable and upright.
4. **Connect Power:** Plug the power adapter into the inflatable's power input, then plug the adapter into a standard electrical outlet. The inflatable will begin to self-inflate immediately.
5. **Adjust and Display:** Once fully inflated, adjust the position of the inflatable and ensure all features, such as the LED eyes, are functioning correctly.



Image: The Gemmy 10.5-foot Airblown Skeleton Reaper inflatable, featuring a white skull face with glowing red LED eyes, a purple

hooded cloak, and skeletal hands, standing upright.



Image: The Gemmy 10.5-foot Airblown Skeleton Reaper inflatable positioned in a residential front yard at dusk, illuminated and standing tall against the backdrop of a house and other Halloween decorations.

OPERATING INSTRUCTIONS

Operating your Airblown Inflatable is straightforward:

- **Inflation:** Once plugged into an electrical outlet, the internal blower will automatically inflate the Skeleton Reaper. This process typically takes only a few seconds.
- **Deflation:** To deflate the inflatable, simply unplug it from the electrical outlet. The air will slowly release, and the inflatable will collapse.
- **Lighting:** The red LED eyes are integrated into the design and will illuminate automatically when the inflatable is powered on.

MAINTENANCE

Proper care will extend the life of your inflatable:

- **Cleaning:** To clean the inflatable, wipe it with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the inflatable is completely dry before storing.
- **Storage:** When not in use, deflate the inflatable completely. Fold it neatly and store it in its original box or a suitable storage container in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the inflatable, power cord, and blower for any signs of damage, wear, or tears. If damage is found, discontinue use and repair or replace as necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Inflatable does not inflate	No power; Blower intake blocked; Zipper open	Check power connection; Clear any obstructions from blower; Ensure all zippers are closed.
Inflatable does not stand upright	Insufficient air; Improper tethering; Strong winds	Ensure blower is running continuously; Adjust tethers and stakes for stability; Relocate to a more sheltered area if winds are excessive.
LED eyes not lighting up	No power; Damaged wiring/LEDs	Check power connection; Contact customer support if power is confirmed but lights remain off.

SPECIFICATIONS

- **Brand:** Gemmy
- **Model:** Skeleton Reaper
- **Dimensions (L x W x H):** 125.98 x 49.21 x 83.86 inches (approximately 10.5 feet tall)
- **Material:** Vinyl
- **Special Feature:** Easy Setup, Lighted (Red LED Eyes)
- **UPC:** 191245219798
- **ASIN:** B08B6F8XZ2
- **Intended Use:** Indoor or Outdoor Seasonal Decoration

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Gemmy website. Keep your purchase receipt as proof of purchase.

Gemmy Industries

Website: [Visit the Gemmy Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question