

iTouchless SG04SSR-2

iTouchless 4 Gallon Slim Sensor Trash Can (Right Side Open) Instruction Manual

Model: SG04SSR-2

INTRODUCTION

Thank you for choosing the iTouchless 4 Gallon Slim Sensor Trash Can. This automatic wastebasket is designed for convenience and hygiene, featuring touchless operation and an AbsorbX Odor Control System. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance of your new trash can.



Image: The iTouchless 4 Gallon Slim Sensor Trash Can, showcasing its brushed stainless steel finish and sleek design.

PACKAGE CONTENTS

Please verify that all items are present in the package:

- 1 Sensor Trash Can Lid
- 1 Trash Can Body
- 1 AbsorbX Odor Filter

SETUP

1. Battery Installation

Your sensor trash can requires 4 'C' size batteries (not included). Ensure correct polarity when inserting the batteries.

1. Locate the battery compartment on the underside of the lid.
2. Open the battery compartment cover.
3. Insert 4 'C' size batteries, matching the positive (+) and negative (-) terminals as indicated.

4. Close the battery compartment cover securely.



Image: An icon representing a 'C' size battery, indicating the type of batteries required.

2. AbsorbX Odor Filter Installation

The AbsorbX Odor Filter helps neutralize trash odors for a fresh environment.

1. Locate the filter compartment on the underside of the lid.
2. Insert the AbsorbX odor filter into the designated slot.
3. Ensure the filter is seated properly.



Image: A diagram illustrating the AbsorbX Odor Control System, showing how the activated carbon filter absorbs odors and VOCs.

3. Placement

This model features a right-side lid opening, designed for optimal placement next to a toilet or sink where the bin is on the right side when facing the fixture.

- Place the trash can in your desired location, ensuring the sensor is unobstructed.
- Allow sufficient space for the lid to open fully to the right.



Image: The slim sensor trash can positioned neatly between a toilet and a bathroom vanity, demonstrating its space-saving design.

Right Side Lid Opening



See Other Model For Left Side Open

Image: A diagram illustrating the right-side lid opening mechanism, showing the lid pivoting open to the right.

OPERATING INSTRUCTIONS

1. Automatic Lid Operation

The trash can features a motion sensor for touchless operation.

- **Opening the Lid:** Wave your hand or an object within 6 inches (15 cm) above the sensor eye. The lid will open automatically.
- **Closing the Lid:** The lid will close automatically after 5 seconds of inactivity.
- **VisioSense Technology:** If your hand remains within the sensor's range, the lid will stay open for longer clean-ups.
- **Reflux Technology:** This feature prevents the lid from closing on your hand, ensuring safety during use.

100% Automatic Lid



Image: A hand hovering over the sensor of the trash can, with the lid automatically opening, indicated by blue wave icons.

2. Manual Open/Close

For extended open times or manual control, use the buttons on the sensor panel.

- Press the 'OPEN' button to keep the lid open indefinitely.
- Press the 'CLOSE' button to close the lid manually.

3. Power Management

The trash can is equipped with an on/off switch, typically located near the battery compartment or on the back of the lid unit.

- Turn the power switch to 'ON' for automatic sensor operation.
- Turn the power switch to 'OFF' to disable the sensor and conserve battery life when not in use for extended periods.

MAINTENANCE

1. Cleaning

The stainless steel surface is fingerprint-proof and easy to clean.

- Wipe the exterior with a soft, damp cloth and mild detergent.
- Avoid abrasive cleaners or scouring pads, as these can damage the finish.
- Do not submerge the lid in water.

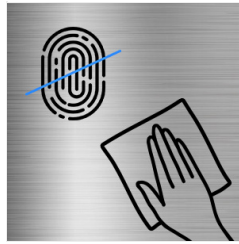


Image: An icon depicting a fingerprint with a line through it and a hand wiping a surface, symbolizing the fingerprint-proof and easy-to-clean nature of the trash can.

2. AbsorbX Filter Replacement

For continuous odor control, replace the AbsorbX filter every 3 months.

1. Open the filter compartment on the underside of the lid.
2. Remove the old filter.
3. Insert a new AbsorbX filter.
4. Close the compartment securely.

3. Battery Replacement

When the sensor light dims or the lid operation becomes sluggish, it's time to replace the batteries. A set of 4 'C' size batteries can last up to two years with intelligent energy use.

1. Turn off the power switch.
2. Open the battery compartment.
3. Remove the old batteries and dispose of them responsibly.
4. Insert new 4 'C' size batteries, observing correct polarity.
5. Close the compartment and turn the power switch back on.

TROUBLESHOOTING

If you encounter issues with your iTouchless sensor trash can, please refer to the following common solutions:

Problem	Possible Cause	Solution
Lid does not open automatically.	Low batteries, sensor obstructed, power switch off.	Replace batteries, clean sensor, ensure power switch is ON.
Lid opens slowly or makes noise.	Low batteries.	Replace batteries.
Lid does not close.	Sensor continuously triggered, manual open button pressed.	Ensure no objects are near the sensor, press 'CLOSE' button, or turn power off/on.
Unpleasant odors persist.	AbsorbX filter needs replacement.	Replace the AbsorbX odor filter.

SPECIFICATIONS

Feature	Detail
Model Number	SG04SSR-2
Capacity	4 Gallons (15 Liters)
Dimensions (L x W x H)	14 x 6 x 14 inches
Weight	4 Pounds
Material	Stainless Steel
Opening Mechanism	Motion-Sensor (Right Side Open)
Power Source	4 x 'C' Size Batteries (not included)
Special Features	AbsorbX Odor Control System, VisioSense, Reflux Technology, Fingerprint-Proof Finish




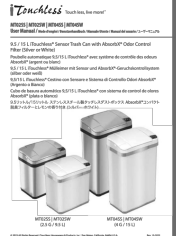 
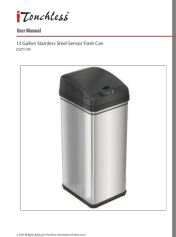 

Image: A diagram showing the dimensions of the iTouchless Slim Sensor Trash Can, including height, width, and depth measurements in inches and centimeters.

WARRANTY AND SUPPORT

Your iTouchless 4 Gallon Slim Sensor Trash Can is backed by a Full-Service Manufacturer's Warranty. For detailed warranty information, please refer to the official iTouchless website or contact customer support.

For any questions, technical assistance, or warranty claims, please contact iTouchless Customer Support. Contact information can typically be found on the product packaging or the official iTouchless website.

Related Documents

 <p>The cover of the user manual for the iTouchless 13 Gallon AutoStep Stainless Steel Trash Can. It features three models: ITA13SB, ITA13SR, and ITA13SW. The iTouchless logo is at the top left, and a 'Before Use to Help' section is highlighted at the bottom left.</p>	<p>iTouchless 13 Gallon AutoStep Stainless Steel Trash Can User Manual</p> <p>Comprehensive user manual for the iTouchless 13 Gallon AutoStep Stainless Steel Trash Can (models ITA13SB, ITA13SR, ITA13SW). Learn about its features including the automatic sensor lid, odor control system, battery and AC power options, proper operation, care and maintenance, troubleshooting, and warranty information.</p>
 <p>The cover of the user manual for iTouchless sensor trash cans. It shows two models: MT02SS/MT02SW and MT04SS/MT04SW. The iTouchless logo is at the top left, and a 'Before Use to Help' section is highlighted at the bottom left.</p>	<p>iTouchless Sensor Trash Can User Manual MT02SS MT02SW MT04SS MT04SW</p> <p>User manual for iTouchless MT02SS, MT02SW, MT04SS, MT04SW sensor trash cans. Covers features, setup, operation, maintenance, troubleshooting, and warranty information.</p>
 <p>The cover of the user manual for the iTouchless 13 Gallon Stainless Steel Sensor Trash Can. It features a single model: DZT13P. The iTouchless logo is at the top left, and a 'Before Use to Help' section is highlighted at the bottom left.</p>	<p>iTouchless 13 Gallon Stainless Steel Sensor Trash Can User Manual</p> <p>User manual for the iTouchless 13 Gallon Stainless Steel Sensor Trash Can (Model DZT13P). Learn about its features, operation, troubleshooting, and warranty.</p>
 <p>The cover of the user manual for the iTouchless WS13RSL and WS18RSL Wings Open Lid Sensor Trash Can. It features two models: WS13RSL and WS18RSL. The iTouchless logo is at the top left, and a 'Before Use to Help' section is highlighted at the bottom left.</p>	<p>iTouchless WS13RSL / WS18RSL Wings Open Lid Sensor Trash Can User Manual</p> <p>User manual for the iTouchless WS13RSL and WS18RSL 13/18 Gallon Wings Open Lid Sensor Trash Can, detailing features, operation, troubleshooting, and warranty.</p>