



Manuals.plus /

› TURBO CHALLENGE /

› Vespa 946 Electric Ride-On Scooter User Manual

TURBO CHALLENGE 119136

Vespa 946 Electric Ride-On Scooter User Manual

Model: 119136 | Brand: TURBO CHALLENGE

IMPORTANT SAFETY INFORMATION

Attention: Remove all fasteners and packaging elements before giving the child play. Charging should be done under adult supervision. Switch the vehicle to OFF and connect the vehicle to the supplied charger and plug it into the mains. Do not move away from the product when charging. Respect the charging time for optimal operation. Once the product is charged, disconnect the charger from the mains outlet and remove it from the product. For your safety, never play on the street. Do not play in sand or water to preserve the circuits and avoid short circuits, cause overheating or failure of the device. Do not bend the antenna. In case of malfunction, do not disassemble or modify the vehicle.

PRODUCT OVERVIEW

The TURBO CHALLENGE Vespa 946 Electric Ride-On Scooter is designed for children aged 3 to 6 years, offering an exciting and safe riding experience. This replica scooter combines fun with developmental benefits, helping children improve dexterity and coordination.

Key Features:

- **Full Gas:** Provides up to 40 minutes of continuous play at full speed.
- **Interactive Controls:** Features an acceleration pedal, LED headlights, and an auto-radio with music, MP3 USB/SD jack, and jack input.
- **Durable Construction:** Made with high-quality plastic for maximum durability, suitable for both indoor and outdoor use.
- **Rechargeable Battery:** Equipped with a 6V battery and USB charger for convenient recharging.
- **Speed and Stability:** Drives at a safe speed of up to 3 km/h, ensuring stability and control for young riders.



Image: Front-side view of the pink Vespa 946 Electric Ride-On Scooter, showcasing its design and features.

WHAT'S IN THE BOX

- 1 x Vespa 946 Electric Ride-On Vehicle
- 1 x 6V Rechargeable Battery (pre-installed or separate)
- 1 x USB Charger

SETUP

Initial Charging:

1. Ensure the vehicle's power switch is in the **OFF** position.
2. Connect the USB charger to the charging port on the scooter.
3. Plug the USB charger into a standard wall outlet.
4. Allow **8 to 10 hours** for a full charge. The indicator light on the charger (if present) may change color when fully charged.
5. Once fully charged, disconnect the charger from the wall outlet and then from the scooter.

Note: Always supervise charging and do not leave the product unattended during the charging process.



Image: Front view of the Vespa 946 scooter in an outdoor setting, ready for use after charging.

OPERATING INSTRUCTIONS

Starting the Scooter:

1. Ensure the battery is fully charged.
2. Locate the power switch (usually near the dashboard or under the seat) and switch it to the **ON** position.
3. The LED headlights may illuminate, and the auto-radio might power on.

Driving the Scooter:

- **Acceleration:** Press the foot pedal (acceleration pedal) to move forward. Release the pedal to slow down and stop.
- **Steering:** Use the handlebars to steer the scooter left or right.
- **Music/Audio:** Use the controls on the auto-radio to play music, connect an MP3 player via USB/SD card, or use the jack input.
- **Lights:** The LED headlights will turn on automatically when the scooter is powered on.

Important: Always ensure the child is supervised while operating the scooter. Do not operate on public roads or near traffic.



Image: Rear view of the Vespa 946 scooter, highlighting its design and stability wheels.

MAINTENANCE

Cleaning:

- Wipe the scooter with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.
- Avoid spraying water directly onto electrical components.

Battery Care:

- Recharge the battery after each use, even if only for a short period.
- If storing the scooter for an extended period, charge the battery fully every 30 days to maintain its lifespan.

- Do not overcharge the battery (do not exceed 10 hours of charging).
- Store the scooter and battery in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scooter does not move.	Battery is low or not charged. Power switch is OFF. Loose connection.	Charge the battery for 8-10 hours. Turn the power switch to ON. Check all connections are secure.
Scooter moves slowly.	Low battery charge. Overloaded (exceeds 30 kg max weight). Operating on uneven or soft surfaces.	Recharge the battery. Ensure rider weight is within limits. Operate on flat, hard surfaces.
Lights or sound not working.	Battery low. Loose wiring. Component malfunction.	Charge the battery. Check connections. Contact customer support if issue persists.

SPECIFICATIONS

Feature	Detail
Model Number	119136
Product Dimensions	40.16 x 19.69 x 29.53 inches
Item Weight	17.6 pounds
Battery	1 x 6V Rechargeable Battery
Max Speed	Up to 3 km/h
Charging Time	8-10 hours
Run Time	Approx. 40 minutes (full speed)
Max User Weight	30 kg (approx. 66 lbs)
Recommended Age	36 months - 6 years
Manufacturer	MGM

WARRANTY AND SUPPORT

For warranty information or technical support, please contact TURBO CHALLENGE customer service. Refer to your purchase receipt for specific warranty terms and contact details. You can typically find support contact information on the product packaging or the manufacturer's official website.

Please have your model number (119136) and purchase date ready when contacting support.

