

[Manuals.plus](#) /

› [WHOLESUN](#) /

› WHOLESUN 4500PSI Electric Pressure Washer User Manual

WHOLESUN WHOLESUN WS 3000

WHOLESUN 4500PSI Electric Pressure Washer User Manual

Model: WHOLESUN WS 3000

1. PRODUCT OVERVIEW

The WHOLESUN 4500PSI Electric Pressure Washer is a powerful and efficient cleaning machine designed for various home and outdoor cleaning tasks. It features a robust 1600W motor, delivering up to 4500 Max PSI and 2.8 GPM water flow for effective dirt and grime removal. This unit is equipped with a Total Stop System (TSS) for energy saving and extended lifespan, and comes with a range of accessories to suit different cleaning needs.



Figure 1: WHOLESUN 4500PSI Electric Pressure Washer

2. SAFETY INFORMATION

Always read and understand all safety warnings and instructions before operating the pressure washer. Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

- **Ground Fault Circuit Interrupter (GFCI):** This pressure washer is equipped with a GFCI to prevent the risk of electric shock. Do not bypass or disable this safety feature.
- **Waterproof Rating:** The unit has an IPX5 waterproof rating. However, electric pressure washers should only be used outdoors to prevent damage to indoor surfaces and slipping hazards.
- **Safety Lock:** The spray gun features a safety lock to prevent accidental activation. Always engage the safety lock when the unit is not in use.
- **Nozzle Safety:** Ensure the spray tip is properly snapped on before operation. High-pressure water can cause injury.

3. SETUP AND ASSEMBLY

Follow these steps to set up your pressure washer for first use.

3.1 Unboxing and Component Identification

Carefully remove all components from the packaging. Verify that all parts listed in the product manual are present.

Video 1: WHOLESUN Pressure Washer Unboxing. This video demonstrates the unboxing process and identifies the various components included with the pressure washer.

3.2 Assembly Instructions

Assemble the pressure washer components as shown in the assembly video. Ensure all connections are secure.

Video 2: WHOLESUN Pressure Washer Assembly. This video provides a step-by-step guide for assembling the pressure washer.

3.3 Connecting Water and Power

Connect the pressure washer to a standard garden hose and a grounded electrical outlet. Ensure the water supply is turned on before starting the unit.



**33-FOOT HOSE
FOR GREATER
REACH**

Figure 2: The 33-foot extended pressure hose features metal connections for durability and to prevent leaks. An auxiliary hose connects the reel to the water outlet.



**NO GAS,
NO OIL,
NO EMISSIONS**



**NO BATTERIES,
EASY PLUG
AND GO**



**MORE THAN
10K 5-STAR
REVIEWS**



**FAST,
FREE SHIPPING
IN THE USA**

Figure 3: The 20-foot power cord is equipped with a Ground Fault Circuit Interrupter (GFCI) for enhanced safety during operation.

4. OPERATING INSTRUCTIONS

This section details how to operate your pressure washer effectively for various cleaning tasks.

4.1 Nozzle Selection and Usage

The pressure washer comes with 5 Quick Connect (QC) nozzles (0°, 15°, 25°, 40°, and soap) for different applications. Select the appropriate nozzle based on the cleaning task and surface.

- **0° (Red):** Pin-point jet for tough, concentrated cleaning. Use with extreme caution on hard, non-delicate surfaces only.
- **15° (Yellow):** Narrow fan spray for intense cleaning of small areas.
- **25° (Green):** Medium fan spray for general cleaning of most surfaces.
- **40° (White):** Wide fan spray for gentle cleaning of delicate surfaces or large areas.
- **Soap (Black):** Low-pressure wide spray for applying detergent.



33FT Extended Hose


Kink Resistant
Our  Other 

Figure 4: Different nozzles provide varying spray patterns and intensities for diverse cleaning applications.



4 QUICK CONNECT NOZZLES & SOAP

Figure 5: The pressure washer features convenient onboard storage for all quick-connect nozzles.

4.2 Using the Foam Cannon

Attach the 500ml detergent tank (foam cannon) to the spray gun for applying soap or cleaning solutions. This is ideal for pre-soaking stubborn dirt on vehicles or other surfaces.



GROUND FAULT CIRCUIT INTERRUPTER

Figure 6: The 500ml soap applicator allows for easy application of detergent for deep cleaning.

Video 3: Pressure Washer for Cars. This video demonstrates the effective use of the pressure washer and foam cannon for cleaning vehicles.

4.3 Cleaning Various Surfaces

The WHOLESUN pressure washer is versatile for cleaning a variety of surfaces:

- **Driveways and Patios:** Use a 15° or 25° nozzle for general cleaning. For stubborn stains, use the 0° nozzle with caution, keeping a safe distance.
- **Outdoor Furniture:** Use a 25° or 40° nozzle for gentle cleaning. Avoid prolonged spraying on one spot to prevent damage.
- **Vehicles:** Use the soap nozzle to apply detergent, then rinse with a 25° or 40° nozzle. Maintain a safe distance to avoid paint damage.



500ML SOAP APPLICATION FOR STUBBORN DIRT

Figure 7: The pressure washer effectively removes dirt and grime from concrete driveways.

Video 4: Pressure Washer for Patios. This video illustrates the pressure washer's capability in cleaning patio surfaces.

Video 5: Pressure Washer for Floor. This video shows the pressure washer being used to clean a floor surface.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your pressure washer.

- **Cleaning and Storage:** After each use, disconnect the unit from power and water. Drain any remaining water from the hose and pump. Store the unit in a dry, protected area away from freezing temperatures.
- **Filter Maintenance:** Regularly inspect and clean or replace the water inlet filter to prevent debris from entering the pump.
- **Hose and Connections:** Periodically check hoses and connections for any signs of wear or damage. Replace worn parts immediately to prevent leaks and maintain pressure.

6. TROUBLESHOOTING

If you encounter issues with your pressure washer, refer to the troubleshooting guide for common solutions. For persistent problems, contact customer support.

- **No Pressure:** Check water supply, ensure hose is not kinked, and verify all connections are tight.
- **Unit Not Starting:** Ensure power cord is properly plugged into a GFCI outlet and the outlet is functional.
- **Leaking:** Inspect all connections for tightness. Check O-rings for damage and replace if necessary.

For a detailed troubleshooting guide, please refer to the official PDF document: [Troubleshooting Guide \(PDF\)](#)

7. SPECIFICATIONS

Feature	Specification
Brand	WHOLESUN
Model Number	WHOLESUN WS 3000
Maximum Pressure	4500 PSI
Maximum Flow Rate	2.8 GPM
Power Source	Corded Electric
Wattage	1600W
Hose Length	33 Feet
Power Cord Length	20 Feet
Item Weight	18 Pounds
Product Dimensions	11.8"L x 10.4"W x 11.8"H

PRODUCT DETAILS



Spray Gun



Gun Lance



33ft Pressure Hose



500ml Soap Applicator



4 Nozzles

Voltage	110V-120V/60Hz	Wattage	1600W	Rated pressure	4000 PSI
Max.Pressure	4000PSI	Rated flow rate	2.8GPM	Max.flow rate	2.8 GPM
Degree of protection	IPX5	Rated temperature	0~40°C	Machine weight	7.3kg
		Max.inlet water pressure	1Mpa		

Figure 8: Detailed product specifications for the WHOLESUN pressure washer.

POWERFUL MOTOR



Figure 9: The powerful motor ensures efficient and effective cleaning performance.

8. WARRANTY AND CUSTOMER SUPPORT

WHOLESUN offers a 2-year limited warranty on this electric pressure washer, covering parts replacement. Additionally, a 30-day risk-free return and replacement policy is in place.

For any technical support, warranty claims, or other concerns, please contact WHOLESUN customer service at: Wnanai@outlook.com. Our team is available to assist you.

For additional information, you may also refer to the User Manual (PDF)[User Manual \(PDF\)](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08B8NZ27C>

More documents and user manuals: <https://manuals.plus/>