

[manuals.plus](#) /

› [SANSUI](#) /

› [SANSUI ES24Z1 24-inch HD LED TV User Manual](#)

SANSUI ES24Z1

SANSUI ES24Z1 24-inch HD LED TV User Manual

Model: ES24Z1

1. INTRODUCTION

Thank you for purchasing the SANSUI ES24Z1 24-inch HD LED Television. This manual provides essential information for the proper setup, operation, and maintenance of your new television. Please read this manual thoroughly before using the product and retain it for future reference.

The SANSUI ES24Z1 features a 24-inch HD display with a 1366x768 resolution, offering clear image quality. It includes multiple connectivity options such as HDMI, USB, and VGA, making it suitable for various entertainment and computing needs. The display provides a 178° visual angle for consistent viewing.



A front view of the SANSUI ES24Z1 24-inch HD LED Television, showcasing its black frame, screen, and two-pronged stand. The

2. SAFETY INFORMATION

Observe the following safety precautions to ensure safe operation and prevent damage to your television:

- Do not expose the TV to rain or moisture to prevent fire or electric shock.
- Do not block ventilation openings. Ensure adequate space around the TV for proper airflow.
- Place the TV on a stable, level surface to prevent it from falling.
- Protect the power cord from being walked on or pinched.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Verify that all items listed below are included in the package:

- SANSUI ES24Z1 24-inch HD LED TV
- Remote Control (1)
- Remote Control Batteries (2)
- User Manual (This document)
- TV Feet / Stand
- Warranty Card

4. PRODUCT OVERVIEW

4.1. Rear Panel Connections

The rear panel of your SANSUI ES24Z1 TV provides various ports for connecting external devices:

- **HDMI (1x):** For connecting high-definition devices such as Blu-ray players, game consoles, or set-top boxes.
- **USB (1x):** For connecting USB storage devices to play multimedia files.
- **VGA (1x):** For connecting a computer.
- **AV IN (1x):** For connecting standard definition devices using composite video and stereo audio cables.
- **PC Audio IN (1x):** For audio input when using the VGA connection.
- **Optical (1x):** Digital audio output for connecting to a soundbar or home theater system.
- **Headphone (1x):** For connecting headphones.
- **YPBPR (1x):** Component video input for connecting devices with component video output.

5. SETUP

5.1. Attaching the TV Stand

1. Carefully place the TV screen-down on a soft, clean surface to prevent scratches.
2. Align the TV feet with the corresponding slots on the bottom of the TV.
3. Secure the feet with the provided screws. Ensure they are firmly attached.

5.2. Connecting Power

Connect the power cord to the AC IN port on the TV, then plug the other end into a standard electrical outlet (AC 220V,

60Hz).

5.3. Connecting External Devices

- **HDMI:** Use an HDMI cable to connect your device to one of the HDMI ports on the TV.
- **USB:** Insert a USB drive into the USB port to access media files.
- **VGA:** Connect a computer to the VGA port using a VGA cable. Connect an audio cable from the computer's audio output to the PC Audio IN port on the TV.

6. OPERATING

6.1. Power On/Off

Press the Power button on the remote control or on the TV to turn the TV on or off.

6.2. Input Source Selection

Press the 'Input' or 'Source' button on the remote control to cycle through available input sources (HDMI, USB, VGA, AV, YPBPR).

6.3. Volume and Channel Control

Use the 'VOL +/-' buttons to adjust the volume and 'CH +/-' buttons to change channels.

6.4. Remote Control Functions

The remote control allows access to various functions including menu navigation, picture settings, sound settings, and more. Refer to the remote control diagram in the full user manual for detailed button descriptions.

7. MAINTENANCE

To maintain the performance and appearance of your TV:

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, dampen the cloth with a small amount of screen cleaner. Do not spray cleaner directly onto the screen.
- **Cleaning the Cabinet:** Use a soft, dry cloth to wipe the TV cabinet. Avoid using abrasive cleaners or solvents.
- **Ventilation:** Ensure the ventilation openings are clear of dust and debris.

8. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No power	Check if the power cord is securely plugged into the TV and the electrical outlet. Ensure the outlet is active.
No picture, but sound is present	Verify the correct input source is selected. Check cable connections to external devices.
No sound, but picture is present	Check the volume level and mute status. Ensure audio cables are correctly connected for external devices.
Remote control not working	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the TV's IR sensor.

Problem	Possible Solution
Picture is distorted or unclear	Check cable connections for looseness or damage. Adjust picture settings in the TV menu.

9. SPECIFICATIONS

Key technical specifications for the SANSUI ES24Z1 TV:

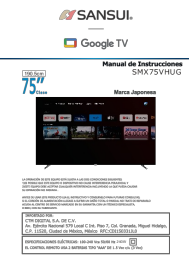
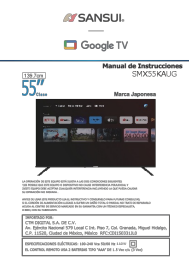
Feature	Specification
Model	ES24Z1
Screen Size	24 Inches
Display Technology	LED
Resolution	1366 x 768 pixels (720p)
Refresh Rate	60 Hz
Aspect Ratio	16:9
Contrast Ratio	3000:1
Viewing Angle	178°
Hardware Interface	1x HDMI, 1x USB, 1x VGA, 1x AV IN, 1x PC Audio IN, 1x Optical, 1x Headphone, 1x YPBPR
Tuner Technology	ATSC
Power Consumption	36 Watts
Voltage	220 Volts (AC)
Dimensions (with stand)	21.7 x 2.8 x 13 inches (approx. 55.1 x 7.1 x 33 cm)
Weight	5.3 pounds (approx. 2.4 kg)
Mounting Type	Table Stand
Color	Black

10. WARRANTY AND SUPPORT

Your SANSUI ES24Z1 Television comes with a 1-year warranty. This warranty is linked to the warranty card included in your package. Please retain your proof of purchase and the warranty card for any warranty claims.

For technical support or service inquiries, please refer to the contact information provided on your warranty card or visit the official SANSUI support website.

Related Documents - ES24Z1

	Manual de Instrucciones SANSUI SMX75VHUG Google TV Guía completa de usuario para el televisor SANSUI modelo SMX75VHUG con Google TV. Incluye instrucciones de instalación, configuración, uso del control remoto, ajustes y especificaciones técnicas.
	Manual de Instrucciones SANSUI SMX55KAUG Google TV Guía completa de instrucciones para el televisor SANSUI SMX55KAUG con Google TV. Incluye información sobre instalación, configuración, uso del control remoto, especificaciones técnicas, solución de problemas y precauciones de seguridad.
	Manual de Instrucciones SANSUI SMX55KAUW 55" Smart TV Guía completa de instrucciones para el televisor SANSUI SMX55KAUW de 55 pulgadas, incluyendo instalación, configuración, uso del control remoto, especificaciones y solución de problemas.
	Manual de Instrucciones SANSUI SMX43KAFW Smart TV 43 pulgadas Manual completo para el Smart TV SANSUI SMX43KAFW de 43 pulgadas, cubriendo instalación, configuración, operación, características, solución de problemas y especificaciones.
	Manual de Instrucciones SANSUI SMX55KAUG con Google TV Guía completa de instalación, configuración y uso del televisor SANSUI SMX55KAUG con Google TV. Incluye especificaciones, control remoto y solución de problemas.
	SANSUI SMX43KAFW Manual de Instrucciones y Guía de Usuario Manual de instrucciones SANSUI SMX43KAFW: Guía completa para instalación, configuración, operación, solución de problemas y especificaciones técnicas del televisor SANSUI.

