

Soundcore A3117

Soundcore Anker 3 Portable Bluetooth Speaker User Manual

Model: A3117

Brand: Soundcore

1. INTRODUCTION

The Soundcore Anker 3 Portable Bluetooth Speaker delivers high-quality audio with advanced features designed for both indoor and outdoor use. This manual provides essential information on setting up, operating, maintaining, and troubleshooting your speaker to ensure optimal performance.

Key features include:

- **High-Quality Sound:** Enjoy clear and crisp audio with dual drivers featuring pure titanium diaphragms.
- **Enhanced Bass:** Experience deep, rich bass with dual passive radiators and BassUp technology.
- **IPX7 Waterproof:** Designed to withstand splashes and submersion, making it ideal for various environments.
- **Extended Playtime:** Up to 24 hours of continuous music on a single charge.
- **Customizable Audio:** Personalize your listening experience using the Soundcore App with custom EQ settings and PartyCast feature.

2. WHAT'S IN THE BOX

Please check the contents of your package:

- Soundcore Anker 3 Portable Bluetooth Speaker
- USB-C Cable
- Quick Start Guide



Image: The Soundcore Anker 3 Portable Bluetooth Speaker, showcasing its sleek black design and front grille.

3. SETUP

3.1 Charging Your Speaker

Before first use, fully charge your Soundcore Anker 3 speaker. A full charge takes approximately 4 hours.

1. Connect the provided USB-C cable to the charging port on the speaker.
2. Connect the other end of the USB-C cable to a compatible USB wall charger (not included).
3. The charging indicator light will illuminate during charging and turn off when fully charged.

3.2 Power On/Off

- To power on, press and hold the **Power button** for 2 seconds.
- To power off, press and hold the **Power button** for 2 seconds again.

4. OPERATING YOUR SPEAKER

4.1 Bluetooth Pairing

The Soundcore Anker 3 speaker can connect wirelessly to your device via Bluetooth.

1. Power on the speaker. The Bluetooth indicator will flash blue, indicating it's in pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for "Soundcore 3".
3. Select "Soundcore 3" from the list of available devices to connect. Once connected, the Bluetooth indicator will turn solid blue.

4.2 Basic Controls

Button	Function
Power Button	Press and hold for 2 seconds to power on/off.
Volume -	Press to decrease volume. Hold to continuously decrease volume.
Volume +	Press to increase volume. Hold to continuously increase volume.
Play/Pause Button	Press once to play/pause. Double press for next track. Triple press for previous track.
Bluetooth Button	Press to enter Bluetooth pairing mode. Hold for 2 seconds to disconnect and enter new pairing mode.

4.3 Soundcore App & Custom EQ

Download the Soundcore App from your device's app store to unlock additional features and customize your audio experience.

- **Custom EQ:** Adjust the equalizer settings to tailor the sound profile to your preferences.
- **PartyCast:** Connect multiple Soundcore PartyCast-compatible speakers for synchronized audio across all devices.

SOUND THAT SUITS YOU



Image: The Soundcore Anker 3 speaker next to a smartphone displaying the Soundcore App's equalizer settings, allowing for personalized sound.

4.4 Using PartyCast

The PartyCast feature allows you to link multiple Soundcore speakers for a more expansive audio experience. Follow these steps to activate PartyCast:

1. Ensure all speakers are powered on and within range.
2. Connect your primary speaker to your device via Bluetooth.
3. On the primary speaker, press and hold the PartyCast button (often indicated by a chain link icon) for 2 seconds until the indicator flashes white.
4. On the secondary speakers, press the PartyCast button for 2 seconds until their indicators also flash white.
5. Once connected, the PartyCast indicators on all speakers will turn solid white, and audio will play simultaneously.

Your browser does not support the video tag.

Video: A demonstration of how to use the PartyCast feature to connect multiple Soundcore speakers for synchronized audio playback.

5. MAINTENANCE

5.1 IPX7 Waterproof Rating

The Soundcore Anker 3 is IPX7 waterproof, meaning it can be immersed in up to 1 meter of water for up to 30 minutes. This makes it suitable for use by the pool, at the beach, or in the shower. Ensure the charging port cover is securely closed before exposing the speaker to water.



Image: The Soundcore Anker 3 speaker partially submerged in water, highlighting its IPX7 waterproof capability.

5.2 Cleaning

To clean your speaker, use a soft, damp cloth. Do not use any abrasive cleaners or solvents, as these may damage the surface or internal components.

6. TROUBLESHOOTING

6.1 Speaker Not Powering On

- Ensure the battery is charged. Connect the speaker to a power source using the USB-C cable.
- Press and hold the Power button for at least 2 seconds.

6.2 Cannot Pair with Bluetooth Device

- Make sure the speaker is in Bluetooth pairing mode (flashing blue indicator).
- Ensure your device's Bluetooth is enabled and within 10 meters (33 feet) of the speaker.
- Try forgetting "Soundcore 3" from your device's Bluetooth list and re-pairing.
- Restart both the speaker and your Bluetooth device.

6.3 No Sound or Distorted Sound

- Adjust the volume on both the speaker and your connected device.
- Ensure the speaker is not muted.
- Check the Bluetooth connection. If unstable, try re-pairing.
- Move the speaker closer to your device and away from potential interference sources (e.g., microwaves, Wi-Fi routers).

7. SPECIFICATIONS

Feature	Detail
Model Name	A3117
Connectivity Technology	Bluetooth (Wireless)
Bluetooth Range	10 Meters (33 feet)
Speaker Output Power	16 Watts
Battery Life	Up to 24 Hours
Charging Time	Approx. 4 Hours
Water Resistance	IPX7 Waterproof
Dimensions (L x W x H)	6.85" x 2.36" x 2.24"
Item Weight	13.1 ounces
Input Voltage	7.4 Volts
Control Method	App, Buttons



Image: Diagram showing the dimensions of the Soundcore Anker 3 Portable Bluetooth Speaker: 6.85 inches wide, 2.36 inches deep, and 2.24 inches high.



Image: A collage showing the Soundcore Anker 3 speaker with a large '24H Playtime' graphic, surrounded by images of people enjoying music in various settings, illustrating its long battery life.

8. WARRANTY AND SUPPORT

Your Soundcore Anker 3 Portable Bluetooth Speaker comes with a limited warranty. For detailed warranty information, please refer to the Quick Start Guide included in your package or visit the official Soundcore website.

For further assistance, troubleshooting, or product inquiries, please contact Soundcore customer support or visit their support page. You can also refer to the official User Manual PDF for more in-depth information: [Download User Manual \(PDF\)](#)