

Trevi 0CM58301

Trevi CMP 583 DAB Portable Stereo User Manual

Model: 0CM58301 | Brand: Trevi

1. INTRODUCTION

Thank you for purchasing the Trevi CMP 583 DAB Portable Stereo. This device offers a versatile audio experience, combining DAB/DAB+ and FM radio reception with a CD/MP3 player, USB input, and AUX-in connectivity. Please read this manual carefully to ensure proper use, optimal performance, and longevity of your device. Keep this manual for future reference.

2. SAFETY INFORMATION

- **Power Source:** Use only the specified power adapter or batteries. Ensure the voltage matches your local power supply.
- **Water and Moisture:** Do not expose the unit to rain, moisture, or dripping/splashing liquids. Do not place objects filled with liquids, such as vases, on the apparatus.
- **Ventilation:** Ensure adequate ventilation. Do not block ventilation openings.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug the unit from the power outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Batteries:** When using batteries, ensure correct polarity. Do not mix old and new batteries, or different types of batteries. Remove batteries if the unit is not used for extended periods.

3. PACKAGE CONTENTS

Please check that the following items are included in your package:

- Trevi CMP 583 DAB Portable Stereo Unit
- Remote Control
- AC Power Cable

- User Manual

4. PRODUCT OVERVIEW

Main Unit



Figure 4.1: Trevi CMP 583 DAB Portable Stereo (Overall View)

The Trevi CMP 583 DAB Portable Stereo features a compact design with a convenient carrying handle. The front panel includes a Dot Matrix LED display for clear information, control buttons, and two speakers, which may feature decorative lighting.



Figure 4.2: Front Panel Detail with Display and Controls

Key controls on the front panel include: FUN (Function), Play/Pause, Stop, Skip/Tune buttons, Volume controls, MENU/INFO, EQ/RPT, and ENTER. USB and AUX-in ports are also located on the front for easy access.

Remote Control



Figure 4.3: Remote Control

The included remote control provides convenient access to most functions, including power, mode selection, playback controls, volume adjustment, and radio tuning.

5. SETUP

5.1 Power Connection

Your Trevi CMP 583 DAB Portable Stereo can be powered by AC mains or batteries.

- **AC Power:** Connect the supplied AC power cable to the AC input socket on the back of the unit and then to a standard 230V ~ 50Hz wall outlet.
- **Battery Power:** For portable use, open the battery compartment on the bottom of the unit. Insert 4 x 'C' (UM2) size batteries, ensuring correct polarity (+/-). Close the battery compartment securely.

5.2 Antenna Adjustment

For optimal radio reception, fully extend the telescopic antenna located on the top of the unit. Adjust its orientation for the best signal quality.

5.3 Initial Power-On

Press the **STANDBY** button on the unit or remote control to turn on the device. The display will illuminate.

6. OPERATING INSTRUCTIONS

6.1 General Controls

- **Power On/Off:** Press the **STANDBY** button.
- **Function Selection:** Press the **FUN** button repeatedly to cycle through modes: DAB, FM, CD, USB, AUX-in.
- **Volume Adjustment:** Use the **VOL+** and **VOL-** buttons on the unit or remote to increase or decrease the volume.
- **Mute:** Press the **MUTE** button on the remote control to temporarily silence the audio. Press again to unmute.

6.2 DAB/DAB+ Radio Operation

1. Select DAB mode using the **FUN** button.
2. The unit will automatically scan for available DAB/DAB+ stations upon first use. To perform a manual scan, press and hold the **SCAN** button on the remote or navigate through the menu.
3. Use the **PREV/TUN-** and **NEXT/TUN+** buttons to browse through the available stations.
4. Press **ENTER** to select a station.
5. Press **INFO** to view station information (e.g., program type, signal strength).

6.3 FM Radio Operation

1. Select FM mode using the **FUN** button.
2. **Auto Scan:** Press and hold the **SCAN** button to automatically scan and store available FM stations. The unit can memorize up to 30 stations.
3. **Manual Tuning:** Use the **PREV/TUN-** and **NEXT/TUN+** buttons to manually tune to a frequency.
4. **RDS Function:** If an FM station broadcasts RDS (Radio Data System) information, it will be displayed on the screen.

6.4 CD/MP3 Playback

1. Select CD mode using the **FUN** button.

2. Open the CD compartment cover.
3. Place a CD (audio CD, CD-R/RW with MP3 files) onto the spindle with the label side facing up.
4. Close the CD compartment cover. The unit will read the disc.
5. Press **PLAY/PAUSE** to start or pause playback.
6. Use **PREV/TUN-** and **NEXT/TUN+** to skip tracks. Press and hold to fast forward/rewind.
7. Press **STOP** to end playback.
8. Press **RPT** (Repeat) to cycle through repeat modes (e.g., repeat one, repeat all).

6.5 USB Playback

1. Select USB mode using the **FUN** button.
2. Insert a USB flash drive containing MP3 files into the USB port on the front panel.
3. The unit will automatically detect and begin playing MP3 files.
4. Use **PLAY/PAUSE**, **STOP**, **PREV/TUN-**, **NEXT/TUN+**, and **RPT** buttons as you would for CD playback.

6.6 AUX-in Connection

1. Select AUX-in mode using the **FUN** button.
2. Connect an external audio device (e.g., smartphone, MP3 player) to the AUX-in port on the front panel using a 3.5mm audio cable (not supplied).
3. Audio from the external device will now play through the stereo's speakers. Control playback from the connected device.

6.7 Headphone Jack

Connect standard 3.5mm headphones to the headphone jack for private listening. When headphones are connected, the main speakers will be muted.

7. MAINTENANCE

7.1 Cleaning the Unit

Wipe the exterior of the unit with a soft, dry, lint-free cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

7.2 CD Lens Cleaning

If CD playback becomes erratic, the CD lens may need cleaning. Use a commercially available CD lens cleaner disc. Do not attempt to clean the lens manually.

7.3 Battery Replacement

If the unit is powered by batteries and the sound becomes distorted or the unit stops functioning, replace all four 'C' (UM2) batteries with new ones. Ensure correct polarity.

7.4 Storage

If storing the unit for an extended period, remove the batteries to prevent leakage. Store in a cool, dry place away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Batteries depleted or incorrectly inserted.	Check AC power connection; Replace batteries, ensuring correct polarity.
No sound	Volume too low; Mute function active; Headphones connected.	Increase volume; Deactivate mute; Disconnect headphones.
Poor radio reception	Antenna not extended or poorly positioned; Weak signal area.	Fully extend and adjust the telescopic antenna; Try moving the unit to a different location.
CD/USB not playing	Disc dirty/scratched; Incorrect file format on USB; USB drive not properly inserted.	Clean or replace CD; Ensure USB files are MP3 format; Reinsert USB drive.
Remote control not working	Batteries depleted; Obstruction between remote and unit.	Replace remote control batteries; Remove any obstructions.

9. SPECIFICATIONS

- Model Number:** 0CM58301
- Power Supply:** AC 230V ~ 50Hz; 4 x 'C' (UM2) Batteries
- Power Consumption:** 13 Watts
- Radio Frequencies:** DAB/DAB+, FM with RDS
- CD Player:** Supports CD, CD-R/RW, MP3 format
- USB Input:** Direct playback of MP3 files
- AUX-in:** 3.5mm jack
- Headphone Jack:** 3.5mm jack
- Speakers:** 2 (Stereo)
- Display:** Dot Matrix LED, blue backlit
- Dimensions (approx.):** 28.6 x 25.2 x 16.6 cm (Package dimensions)
- Weight (approx.):** 1.56 kg
- Connectivity Technology:** USB
- Compatible Devices:** Smartphone (via AUX-in)

10. WARRANTY INFORMATION

Warranty terms and conditions for the Trevi CMP 583 DAB Portable Stereo are typically provided with the product packaging or can be found on the official Trevi website. Please retain your proof of purchase for any warranty claims.

11. SUPPORT

For further assistance, technical support, or information regarding your Trevi CMP 583 DAB Portable Stereo, please visit the official Trevi website or contact their customer service department. Contact details can usually be found on the manufacturer's website or in the product documentation.

