

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Toyomi](#) /

› [Toyomi TO-1212 Double Rack Toaster Oven, 12.0L User Manual](#)

Toyomi TO-1212

Toyomi TO-1212 Double Rack Toaster Oven

INSTRUCTION MANUAL

Introduction

Thank you for purchasing the Toyomi TO-1212 Double Rack Toaster Oven. This manual provides important information regarding the safe operation, installation, maintenance, and troubleshooting of your appliance. Please read this manual thoroughly before using the toaster oven and retain it for future reference.

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and similar products.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

Product Components

Familiarize yourself with the parts of your Toyomi TO-1212 Toaster Oven:

- **Oven Housing:** The main body of the toaster oven.
- **Tempered Glass Window:** Large view window for monitoring cooking progress.
- **Control Knobs:** For setting temperature and timer.
- **Heating Elements:** Located at the top and bottom for even cooking.
- **Bake Trays (2):** For baking and roasting.
- **Wire Racks (2):** For toasting and grilling.
- **Crumb Tray:** Removable tray at the bottom for easy cleaning of crumbs.
- **Power Cord and Plug:** For connecting to an electrical outlet.



Image: The Toyomi TO-1212 Double Rack Toaster Oven, showing its compact design, large tempered glass door, and control knobs on the right side. The interior features two rack positions.

Setup and First Use

1. **Unpacking:** Carefully remove the toaster oven and all accessories from the packaging. Remove any packing materials, stickers, or protective films.
2. **Placement:** Place the oven on a stable, heat-resistant, and level surface. Ensure there is adequate clearance (at least 10-15 cm) on all sides and above the oven for proper ventilation. Do not place it near flammable materials.
3. **Cleaning Before First Use:** Wipe the interior and exterior of the oven with a damp cloth. Wash the bake trays, wire racks, and crumb tray in warm, soapy water, then rinse and dry thoroughly.
4. **Initial Burn-Off:** Before cooking food, operate the oven empty for approximately 10-15 minutes at the highest temperature setting (e.g., 230°C / 450°F) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated during this process.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage

matches the appliance's requirements (240 Volts).

Operating Instructions

The Toyomi TO-1212 Toaster Oven features simple knob controls for easy operation.

1. **Prepare Food:** Place your food on the appropriate bake tray or wire rack.
2. **Insert Rack/Tray:** Slide the tray or rack into the desired position within the oven. The oven supports two rack positions.
3. **Close Door:** Ensure the oven door is securely closed.
4. **Set Temperature:** Turn the temperature control knob to your desired cooking temperature. The oven has a built-in thermostat for temperature regulation.
5. **Set Timer:** Turn the timer control knob to the desired cooking time (up to 30 minutes). The oven will begin heating immediately. A bell will sound when the set time has elapsed, and the oven will automatically turn off.
6. **Monitoring:** Use the large tempered glass window to monitor your food's progress without opening the door, which helps maintain internal temperature.
7. **Removing Food:** Once cooking is complete and the timer has sounded, carefully open the oven door. Use oven mitts to remove the hot tray or rack with food.
8. **Cool Down:** Allow the oven to cool down completely before cleaning or storing.

Note on Rack Positions: For toasting bread, use the upper rack position. For baking or roasting larger items, the lower rack position may be more suitable. Experiment to find the best position for your specific cooking needs.

Cleaning and Maintenance

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your toaster oven.

1. **Unplug and Cool:** Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
2. **Crumb Tray:** Pull out the crumb tray from the bottom of the oven. Discard crumbs and wash the tray in warm, soapy water. Rinse and dry thoroughly before replacing.
3. **Bake Trays and Wire Racks:** Wash these accessories in warm, soapy water using a non-abrasive sponge. For stubborn food residues, soak them in warm water before cleaning. Rinse and dry completely.
4. **Interior:** Wipe the interior walls of the oven with a damp cloth and mild detergent. Avoid using abrasive cleaners or metal scouring pads, as they can damage the non-stick coating (if present) or surfaces. For baked-on food, a paste of baking soda and water can be applied, left for a few minutes, then wiped clean.
5. **Exterior:** Wipe the exterior surface with a damp cloth. Do not use harsh or abrasive cleaners.
6. **Glass Door:** Clean the tempered glass door with a glass cleaner or a damp cloth.
7. **Storage:** Ensure the oven is clean and dry before storing. Store in a cool, dry place.

Caution: Never immerse the main body of the toaster oven, its cord, or plug in water or any other liquid.

Troubleshooting

If you encounter issues with your Toyomi TO-1212 Toaster Oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; timer not set.	Ensure the power cord is securely plugged into a working outlet. Check your household's circuit breaker. Turn the timer knob to the desired cooking time.
Food is not cooking evenly.	Incorrect rack position; overcrowding; uneven food placement.	Adjust rack position. Avoid overcrowding the oven. Arrange food evenly on the tray/rack. Preheat the oven if necessary for certain recipes.
Excessive smoke or burning smell.	Food spills; residues on heating elements; initial burn-off.	Unplug and allow to cool. Clean the interior, especially the crumb tray and heating elements, of any food debris. If it's the first use, this is normal during initial burn-off. Ensure proper ventilation.
Timer not working.	Timer knob not turned sufficiently.	Ensure the timer knob is turned past the "off" position to the desired time. If the issue persists, contact customer support.

If the problem persists after trying these solutions, please contact Toyomi customer support.

Specifications

Model Number	TO-1212
Brand	Toyomi
Capacity	12 Liters
Wattage	1000 watts
Voltage	240 Volts
Material	Tempered Glass (door)
Control Type	Knob
Special Features	Temperature Control, 30-Min Automatic Time Setting, Double Safe-Guard Thermostat
Product Dimensions	56 x 55 x 36 cm; 4.06 kg
Included Components	1 x Toaster Oven, 2 x Bake Trays, 2 x Wire Racks

Warranty and Support

Specific warranty details and customer support contact information are typically provided with your purchase documentation or on the manufacturer's official website. Please refer to the packaging or the Toyomi website for the most up-to-date warranty terms and conditions, as well as contact details for technical assistance or service inquiries.

For general inquiries, you may visit the [Toyomi Store on Amazon.sg](#).

Video Resources

No official product videos from the seller were found for embedding in this manual. Please refer to the written instructions and diagrams for guidance.