

## Toyomi VC 8281

# Toyomi VC 8281 Vacuum Cleaner

## INSTRUCTION MANUAL

### Important Safety Instructions

---

Please read all instructions carefully before using this appliance. Retain this manual for future reference.

- Always ensure the power supply matches the voltage specified on the rating label.
- Do not use the vacuum cleaner on wet surfaces or to pick up liquids.
- Do not pick up burning or smoking objects, such as cigarettes, matches, or hot ashes.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Unplug from the electrical outlet when not in use and before cleaning or servicing.
- Do not operate the vacuum cleaner with a damaged cord or plug.
- This appliance is for household use only.

### Product Overview

---

The Toyomi VC 8281 is a powerful bagless vacuum cleaner designed for efficient home cleaning. It features a super multi-cyclone system and an exhaust HEPA filter for effective dust filtration.



Image: The main Toyomi VC 8281 vacuum cleaner unit, showing the dust container, hose, and floor nozzle.

### Components:

- Main Unit (Motor, Dust Container)

- Flexible Hose
- Steel Telescope Extension Tube
- Floor Nozzle
- Crevice Tool
- Small Brush Attachment



Image: Various attachments for the vacuum cleaner, including the main floor nozzle, a crevice tool, and a small brush attachment.

## Setup

1. **Attach the Flexible Hose:** Insert the hose connector into the air inlet opening on the main unit until it clicks securely into place.
2. **Assemble the Extension Tube and Nozzle:**
  - Connect the steel telescope extension tube to the handle end of the flexible hose.
  - Attach the desired cleaning nozzle (e.g., floor nozzle) to the other end of the extension tube. Ensure all connections are firm.
3. **Power Connection:** Unwind the power cord from the rear of the unit. Insert the plug into a suitable electrical outlet.



Image: A close-up of the rear of the vacuum cleaner, highlighting the power cord and plug for connection to an electrical outlet.

## Operating Instructions

1. **Power On/Off:** Press the power button located on the main unit to turn the vacuum cleaner on or off.
2. **Adjusting Suction:** The vacuum cleaner features touch controls. Refer to the control panel on the main unit for any available suction power adjustments.
3. **Using Attachments:**
  - **Floor Nozzle:** Use for general floor cleaning. Some floor nozzles have a switch to adjust for hard floors or carpets.
  - **Crevice Tool:** Ideal for cleaning in tight corners, along edges, and in narrow gaps.
  - **Small Brush Attachment:** Suitable for cleaning upholstery, curtains, and delicate surfaces.
4. **Telescope Extension Tube:** Adjust the length of the steel telescope extension tube by pressing the release button and sliding it to the desired length. This allows for comfortable cleaning of various areas.



Image: A detailed view of the vacuum cleaner's handle and control buttons, indicating the touch control interface.

## Maintenance

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

### Emptying the Dust Container:

1. Ensure the vacuum cleaner is unplugged from the power outlet.
2. Locate the dust container release button or latch on the main unit.
3. Carefully remove the dust container.
4. Empty the collected dust and debris into a waste bin.
5. Reattach the dust container securely to the main unit.

### Cleaning the HEPA Filter:

The HEPA filter is crucial for fine dust filtration. It should be cleaned regularly and replaced periodically.

1. Unplug the vacuum cleaner.
2. Access the HEPA filter compartment, usually located near the dust container or exhaust vent.

3. Remove the HEPA filter.
4. Gently tap the filter to dislodge dust. If washable, rinse under cold running water until the water runs clear. Do not use detergents.
5. Allow the filter to air dry completely (for at least 24 hours) before reinserting. Do not use a hairdryer or other heating devices.
6. Replace the filter in its compartment and close securely.

### General Cleaning:

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners.
- Check the hose and nozzles for blockages and remove any debris.

### Troubleshooting

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	No power supply.	Check if the plug is securely inserted into the outlet. Check the circuit breaker.
Loss of suction power.	Dust container is full. Filter is clogged. Hose or nozzle is blocked.	Empty the dust container. Clean or replace the HEPA filter. Check and clear any blockages in the hose or nozzles.
Unusual noise during operation.	Blockage in the hose or nozzle. Foreign object in the motor area.	Turn off and unplug the unit. Check and clear any blockages. If the noise persists, contact customer support.

### Specifications

Feature	Detail
Model Number	VC 8281
Brand	Toyomi
Wattage	2000 watts
Voltage	240 Volts
Filter Type	HEPA (Cartridge)
Dust Collection	Bagless, Super Multi-Cyclone System
Power Source	Corded Electric
Item Weight	5.8 Kilograms
Dimensions (L x W x H)	45.5L x 28.5W x 34.5H centimetres
Control Method	Touch



Image: A diagram illustrating the approximate dimensions of the vacuum cleaner, showing its height and length in both inches and centimeters.

## Warranty and Support

For warranty information, please refer to the warranty card included with your product or contact Toyomi customer service. Keep your purchase receipt as proof of purchase.

For further assistance or to view other products, visit the official [Toyomi Store](#).