

SONGMICS ULCB083N01

SONGMICS 140L Synthetic Rattan Laundry Hamper with Lid and Wheels

Model: ULCB083N01

Brand: SONGMICS

INTRODUCTION

This instruction manual provides essential information for the assembly, operation, and maintenance of your SONGMICS 140L Synthetic Rattan Laundry Hamper. Please read this manual thoroughly before use to ensure proper functionality and longevity of the product.

SAFETY INSTRUCTIONS

- Ensure all components are securely fastened during assembly.
- Do not exceed the maximum static load capacity of 59 lb (27 kg).
- Keep away from open flames or excessive heat sources.
- Avoid placing heavy or sharp objects on the lid to prevent damage.
- Supervise children when they are near the hamper, especially if using the wheels.
- Regularly check for loose parts and tighten as necessary.

PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- 1 x Laundry Basket (Synthetic Rattan Frame with Lid)
- 3 x Removable Liner Bags with Handles
- 4 x Wheels (2 with brakes)

- 1 x Assembly Hardware Kit (screws, tools if included)
- 1 x Instruction Manual

ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your laundry hamper:

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the package contents list.
2. **Attach Wheels:** Securely attach the four wheels to the bottom of the hamper frame using the provided screws. Ensure the two wheels with brakes are positioned on the same side for easy access.
3. **Insert Liner Bags:** Place the three removable liner bags into the hamper. The bags are designed to fit into the three sections of the hamper. Secure them by tying the fabric loops to the internal frame hooks.
4. **Attach Lid:** Position the lid onto the hamper frame. The lid is designed to rest securely on top, concealing the contents.
5. **Attach Pull Strap (Optional):** If desired, attach the synthetic leather pull strap to the designated loops on the side of the hamper for convenient transport.



Figure 1: Fully assembled SONGMICS 140L Synthetic Rattan Laundry Hamper.



2 wheels with brakes can keep it in place

Figure 2: Detail of a wheel with a locking mechanism for stability.

OPERATING INSTRUCTIONS

1. Sorting Laundry

The hamper features three internal compartments, each with a removable liner bag. This design allows for pre-sorting of laundry by color, fabric type, or other preferences. Simply place your items into the appropriate bag.



Figure 3: Internal view showing three compartments with removable liner bags.

2. Transporting Laundry

The hamper is equipped with wheels for easy mobility. To move the hamper, unlock the brakes on the two braked wheels (if engaged). Use the synthetic leather strap or the side handles to pull or push the hamper to your desired location. To secure the hamper in place, engage the wheel brakes.

A stylish strap for easy pulling



Figure 4: Demonstrating the use of the pull strap for easy transport.

Your browser does not support the video tag.

Video 1: Official product video demonstrating the features and ease of use of the SONGMICS laundry hamper, including its mobility and sorting capabilities.

3. Using the Lid

The hamper includes a lid to keep dirty laundry out of sight and maintain a tidy appearance in your living space. Simply lift the lid to access the contents and close it when not in use.

MAINTENANCE

- **Liner Bags:** The removable cotton liner bags can be machine washed. Remove the handles before washing. Follow standard laundry care instructions for cotton fabrics.
- **Hamper Frame:** Wipe the synthetic rattan frame with a damp cloth to clean. Avoid using harsh chemicals or abrasive cleaners, as these may damage the material.
- **Wheels:** Periodically check the wheels for any debris or lint that may hinder smooth rolling. Clean as needed.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Hamper does not roll smoothly.	Wheels are locked or obstructed.	Ensure wheel brakes are disengaged. Check for and remove any debris (lint, hair) from the wheel axles.
Liner bags fall out of place.	Bags not properly secured or overloaded.	Ensure the fabric loops of the liner bags are securely tied to the internal frame hooks. Avoid overloading individual bags beyond their capacity.
Lid does not close properly.	Contents are overfilling the hamper.	Reduce the amount of laundry in the hamper to allow the lid to close flush.

SPECIFICATIONS

Feature	Detail
Product Dimensions	26"L x 13.8"W x 23.8"H (66 x 35 x 60.5 cm)
Color	Natural
Material	PP (Polypropylene) Plastic, Metal Frame, Cotton Bag
Capacity	140 Liters (59 Pounds Max. Static Load)
Number of Compartments	3
Special Feature	Removable Liner Bags, Wheels with Brakes
Item Weight	11.9 lb (5.4 kg)
Model Number	ULCB083N01

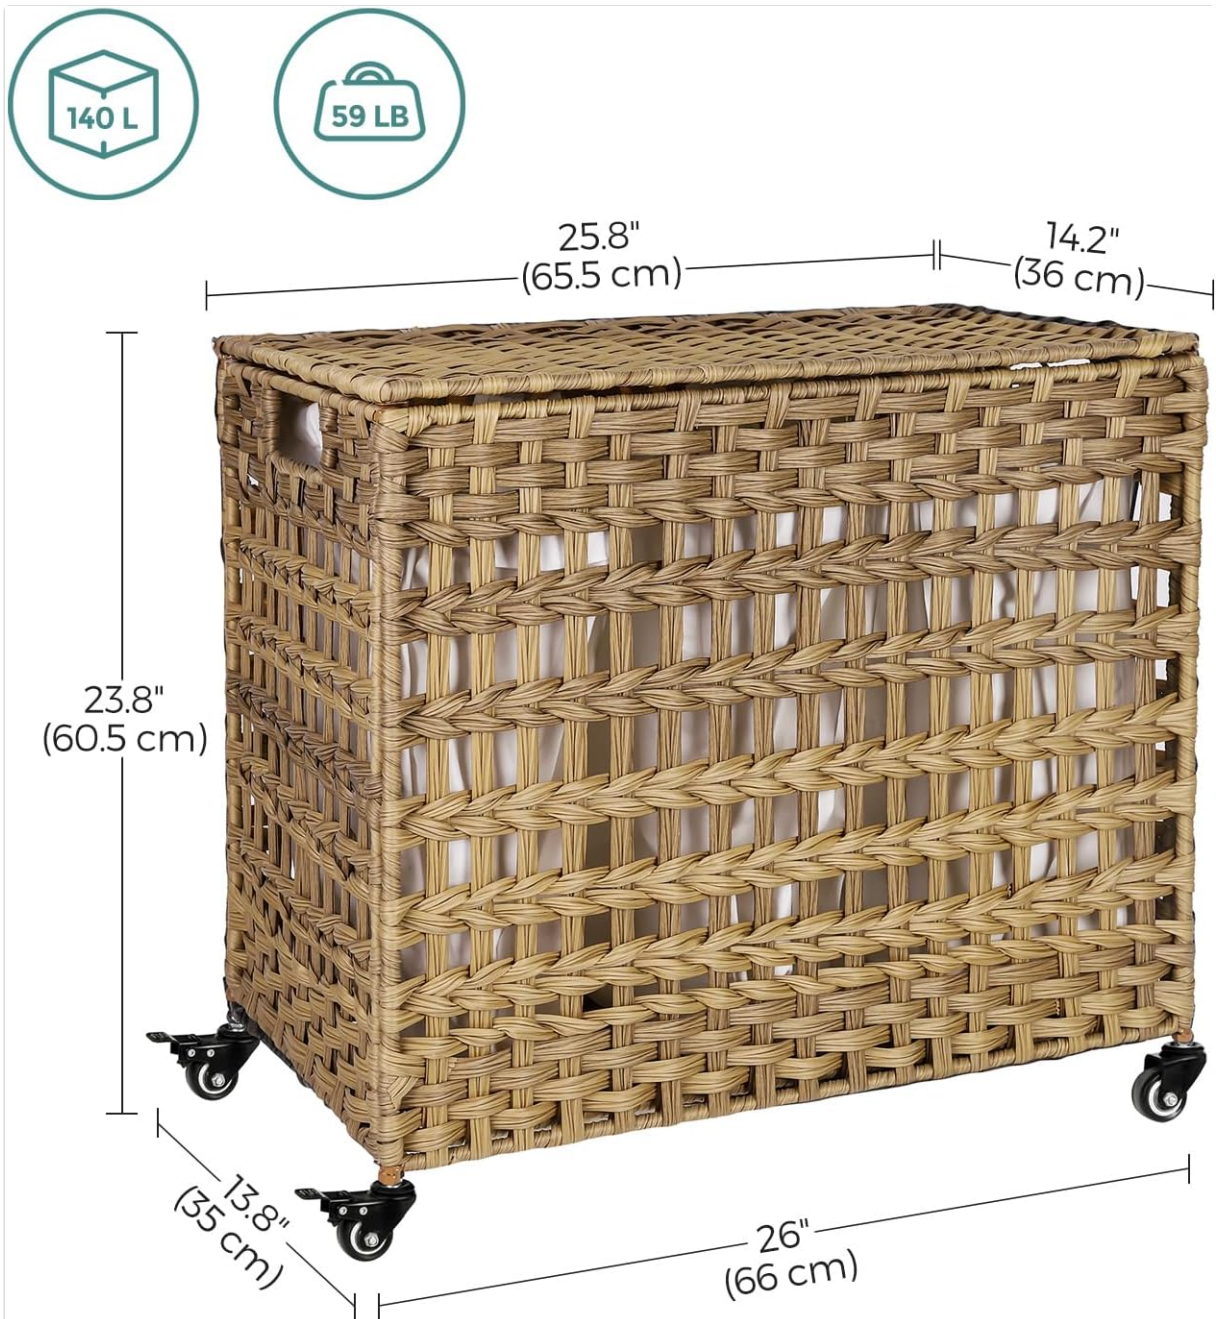


Figure 5: Detailed dimensions of the laundry hamper.

WARRANTY AND SUPPORT

For any questions regarding product assembly, operation, or missing parts, please contact SONGMICS customer service. While specific warranty details are not provided in this manual, please refer to your purchase documentation or the official SONGMICS website for the most current warranty information and support options.

Contact Information: Refer to your product packaging or the official SONGMICS website for customer service contact details.

