

- Manuals.plus /
- > Armitron /
- > Armitron Sport Watch User Manual

Armitron 40/8284YGY

Armitron Sport Watch User Manual

Model: 40/8284YGY

PRODUCT OVERVIEW



This image displays the Armitron Sport Watch, featuring a metallic gray resin case with vibrant yellow accents. The digital LCD screen clearly shows the time, seconds, day, and date. The watch is equipped with multiple buttons for various functions, including mode, reset, start/stop, and backlight activation. The durable gray resin strap is visible, designed for a secure and comfortable fit.

The Armitron Sport Watch, model 40/8284YGY, is designed for active lifestyles, offering a blend of durability and functionality. It features a robust metallic gray resin case with distinctive yellow details, an easy-to-read LCD display, and a comfortable gray resin strap with a secure buckle closure.

Key functions include a chronograph for timing events, lap time measurement, an alarm for reminders, dual time zone display for travelers, military time format, and a backlight for visibility in low-light conditions. The watch is water-resistant up to 330 feet (100 meters), making it suitable for various water activities.

SETUP AND INITIAL USE

Battery Information

The watch comes with one product-specific battery included and pre-installed. No initial battery installation is required for immediate use.

Setting Time and Date

1. **Access Time Setting Mode:** Press the **MODE** button repeatedly until the time setting mode is displayed. Digits to be set will typically flash.
2. **Adjust Values:** Use the **RESET** button to cycle through the digits (hours, minutes, seconds, year, month, day). Use the **ST/STP** button to increase the flashing value.
3. **Confirm Settings:** Once all desired values are set, press the **MODE** button again to exit the setting mode and save changes.

OPERATING INSTRUCTIONS

Chronograph Function

The chronograph allows you to measure elapsed time.

1. **Enter Chronograph Mode:** Press the **MODE** button until "CHRONO" or "STOPWATCH" appears on the display.
2. **Start/Stop:** Press the **ST/STP** button to start the timer. Press it again to stop.
3. **Reset:** While the chronograph is stopped, press the **RESET** button to clear the time to zero.
4. **Lap Time:** During timing, press the **RESET** button to record a lap time. The display will show the lap time while the main timer continues to run in the background. Press **RESET** again to return to the running total.

Alarm Function

Set an alarm to be notified at a specific time.

1. **Enter Alarm Mode:** Press the **MODE** button until "ALARM" is displayed.
2. **Set Alarm Time:** Use the **RESET** button to select hours or minutes, and the **ST/STP** button to adjust the values.
3. **Activate/Deactivate Alarm:** Press the **ST/STP** button while in alarm setting mode to toggle the alarm on or off. An alarm icon will typically appear when active.
4. **Snooze/Stop Alarm:** When the alarm sounds, press any button to stop it. Some models may have a snooze function activated by a specific button.

Backlight

To illuminate the display in dark conditions, press the **EL** (Electro-Luminescent) button, usually located on the side of the watch. The backlight will remain on for a few seconds.

MAINTENANCE AND CARE

Water Resistance



This chart illustrates the different levels of water resistance for watches. For this Armitron Sport Watch, which is water resistant to 100 meters (330 feet), it is suitable for swimming and snorkeling. It is not designed for scuba diving or high-pressure water activities. Always ensure the crown and pushers are fully pushed in before exposing the watch to water.

Your Armitron Sport Watch is water resistant to 330 feet (100 meters). This means it is suitable for swimming and snorkeling. It is not recommended for scuba diving or high-impact water sports. To maintain water resistance, ensure all buttons are fully depressed before exposing the watch to water. Avoid operating buttons while the watch is submerged.

Cleaning

Clean the watch case and strap regularly with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used, followed by rinsing with clean water and drying thoroughly. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish.

Battery Replacement

When the display becomes dim or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and maintain water resistance. Refer to the specifications for battery type.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Buttons are unresponsive.	Watch may be in a locked mode or internal issue.	Try pressing all buttons firmly. If issue persists, a reset may be needed (consult a technician) or battery replacement.
Time is incorrect.	Time not set correctly or battery is low.	Re-set the time and date as per instructions. If problem recurs, replace battery.
Water inside the watch.	Water resistance compromised (e.g., buttons pressed underwater, seal failure).	Immediately take the watch to a qualified technician for inspection and repair to prevent further damage.

SPECIFICATIONS

- **Model Number:** 40/8284YGY
- **Case Material:** Metallic Gray Resin
- **Strap Material:** Gray Resin
- **Display Type:** LCD Digital
- **Water Resistance:** 100 meters (330 feet)

- **Functions:** Chronograph, Lap Time, Alarm, Dual Time Zone, Military Time, Backlight
- **Battery:** 1 product specific battery (included)
- **Package Dimensions:** 10.1 x 8.9 x 7 cm
- **Weight:** 120 grams
- **Country of Origin:** China

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your purchase or visit the official Armitron website. Keep your proof of purchase for any warranty claims.

For further assistance or inquiries, you may contact Armitron customer service through their official channels.

© 2024 Armitron. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08BCTKQ3Z>

More documents and user manuals: <https://manuals.plus/>

