

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Toyomi](#) /

› [Toyomi SC 707 Micro-Com Stew Cooker 0.7L Instruction Manual](#)

## Toyomi SC 707

# Toyomi SC 707 Micro-Com Stew Cooker 0.7L

## Instruction Manual

### INTRODUCTION

Thank you for purchasing the Toyomi SC 707 Micro-Com Stew Cooker. This appliance is designed for convenient and healthy cooking, functioning as both a stew cooker and a steamer. It features a high-quality ceramic inner pot for even heat distribution and nutrient retention. Please read this manual thoroughly before use to ensure proper operation and maintenance.

### IMPORTANT SAFETY PRECAUTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to

modify the plug in any way.

- Ensure the ceramic pot is properly seated before operation.
- Do not overfill the water reservoir to prevent boiling over.

## PRODUCT OVERVIEW AND COMPONENTS

The Toyomi SC 707 Micro-Com Stew Cooker consists of several key components designed for versatile cooking.



*Image 1: The Toyomi SC 707 Micro-Com Stew Cooker, showing the main unit with an egg steaming rack and a separate ceramic inner pot. The control panel is visible on the front.*

- **Main Unit:** The primary housing containing the heating element and control panel.
- **Ceramic Inner Pot:** A high-quality ceramic pot used for stewing and slow cooking.
- **Steamer Tray/Egg Rack:** A removable tray for steaming items like eggs or other small foods.
- **Lid:** A transparent lid for the main unit, and a ceramic lid for the inner pot.
- **Control Panel:** Features a digital display and buttons for setting functions and time.

## SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the ceramic inner pot, steamer tray, and lids with warm soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the stew cooker on a stable, flat, heat-resistant surface, away from walls or other appliances to allow for proper ventilation.
4. **Power Connection:** Ensure the voltage of your power supply matches the appliance's requirements

(240 Volts). Plug the power cord into a grounded electrical outlet.



*Image 2: Demonstrates the process of placing the egg steaming rack and the ceramic inner pot into the main unit of the stew cooker.*

## OPERATING INSTRUCTIONS

The Toyomi SC 707 offers both stewing and steaming functions. Always ensure sufficient water is in the main unit's reservoir for operation.

### For Stewing/Slow Cooking:

1. Fill the main unit's water reservoir with the appropriate amount of water. Do not exceed the maximum fill line.
2. Place your ingredients into the ceramic inner pot.
3. Cover the ceramic inner pot with its ceramic lid.
4. Carefully place the ceramic inner pot into the main unit's water reservoir.
5. Cover the main unit with its transparent lid.
6. Plug in the appliance. Use the control panel to select the desired cooking function and time. Refer to the specific function buttons on your unit for details (e.g., Stew, Porridge).
7. The appliance will begin cooking. The digital display will show the remaining cooking time.
8. Once cooking is complete, the appliance may switch to a 'Keep Warm' mode or turn off automatically.
9. Carefully remove the lids and the ceramic pot using oven mitts, as they will be hot.



Image 3: The ceramic inner pot of the Toyomi SC 707 stew cooker in use, containing a cooked stew.

### For Steaming:

1. Fill the main unit's water reservoir with the appropriate amount of water for steaming.
2. Place the steamer tray/egg rack into the main unit.
3. Place items to be steamed (e.g., eggs, vegetables) onto the steamer tray.
4. Cover the main unit with its transparent lid.
5. Plug in the appliance. Use the control panel to select the steaming function and desired time.
6. Once steaming is complete, carefully remove the lid and steamed items.

### MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your appliance.

1. **Always unplug the appliance** and allow it to cool completely before cleaning.
2. **Ceramic Inner Pot and Lids:** These parts are dishwasher-safe. Alternatively, wash them with warm soapy water, rinse thoroughly, and dry completely. Avoid abrasive cleaners or scouring pads that could damage the ceramic surface.
3. **Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not immerse the main unit in water or any other liquid. Ensure no water enters the control panel area.
4. **Water Reservoir:** After each use, empty any remaining water from the reservoir. If mineral deposits accumulate, fill the reservoir with a mixture of water and white vinegar (1:1 ratio) and let it soak for 30 minutes, then scrub gently and rinse.
5. **Storage:** Store the appliance in a dry place when not in use.

### TROUBLESHOOTING

If you encounter issues with your Toyomi SC 707, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; damaged cord/plug.	Ensure plug is securely in outlet. Test outlet with another appliance. Check cord/plug for damage; if damaged, do not use and contact service.
Food not cooking properly.	Insufficient water in reservoir; incorrect cooking time/setting; lid not properly sealed.	Check water level in main unit. Adjust cooking time/setting. Ensure lids are securely placed.
Water boiling over.	Water reservoir overfilled.	Do not fill water past the maximum fill line. Reduce water quantity.
Unusual odor during operation.	First use (normal); food residue; internal malfunction.	A slight odor on first use is normal. Clean the appliance thoroughly. If odor persists or is strong, discontinue use and contact customer support.

## SPECIFICATIONS

- **Model:** SC 707
- **Brand:** Toyomi
- **Capacity:** 0.7 Liters
- **Material:** Ceramic (inner pot)
- **Voltage:** 240 Volts
- **Wattage:** 120 watts
- **Control Method:** Touch
- **Special Features:** Non-stick (ceramic pot), Double Boil, Steamer 2-in-1
- **Product Dimensions:** 19.5 x 19.5 x 21.8 cm
- **Item Weight:** 1.74 kg
- **Dishwasher-Safe Parts:** Ceramic pot, lids

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Toyomi website. Keep your purchase receipt as proof of purchase for any warranty claims.

If you require further assistance or have questions not covered in this manual, please contact Toyomi customer service.