

[manuals.plus](#) /

› [Toyomi](#) /

› [Toyomi MC 606 Multi Cooker with Steamer Instruction Manual](#)

Toyomi MC 606

Toyomi MC 606 Multi Cooker with Steamer Instruction Manual

Model: MC 606

1. PRODUCT OVERVIEW

The Toyomi MC 606 Multi Cooker with Steamer is a versatile kitchen appliance designed for various cooking tasks, including boiling, steaming, and simmering. Its compact design makes it suitable for small spaces such as offices and hostels. Key features include a durable stainless steel inner pot, a transparent steamer tray, and adjustable heat control.



Image 1: Exploded view of the Toyomi MC 606 Multi Cooker, showing the transparent cover, high PP transparent steam tray, 304 stainless steel inner pot, double insulated cool touch body, adjustable temperature selection knob, and safety thermal protection feature.

Key Features:

- **Multi-functional:** Ideal for cooking noodles, porridge, and steaming eggs.
- **Durable Construction:** Features a 304 Stainless Steel inner container for health and longevity.
- **Adjustable Heat Control:** Allows for precise temperature selection to suit different cooking needs.
- **Safety Features:** Equipped with multiple security protection devices, including a safety thermal protection cut-off.
- **Transparent Steamer:** A high PP transparent steam tray and cover allow for monitoring the cooking process.

- **Cool Touch Body:** Double insulated body helps prevent scalding.

2. SAFETY PRECAUTIONS

To ensure safe operation and prevent damage to the appliance or injury to yourself, please read and adhere to the following safety guidelines:

- Always ensure the voltage rating of the appliance matches your local power supply before plugging in.
- Do not immerse the main body of the multi cooker, cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children and pets.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been dropped. Contact customer support for assistance.
- Always place the multi cooker on a stable, heat-resistant surface away from flammable materials.
- Exercise caution when handling hot surfaces, steam, and hot liquids. Use oven mitts or a cloth if necessary.
- Unplug the appliance from the power outlet when not in use, before cleaning, and before adding or removing parts.
- Do not use accessories or attachments not recommended by the manufacturer.
- Ensure the inner pot contains sufficient liquid before turning on the appliance to prevent dry boiling.
- The appliance is equipped with a safety thermal protection cut-off feature to prevent overheating. If this activates, unplug the unit and allow it to cool before attempting to use it again.

3. PRODUCT COMPONENTS

Familiarize yourself with the various parts of your Toyomi MC 606 Multi Cooker:



Image 2: All components of the Toyomi MC 606 Multi Cooker laid out, including the main cooker body with stainless steel inner pot, transparent steamer tray, transparent lid, and measuring cup.

- **Main Cooker Body:** Contains the heating element and houses the stainless steel inner pot. Features a cool-touch exterior and an integrated handle.
- **304 Stainless Steel Inner Pot:** The primary cooking vessel, integrated with the main body for efficient heating.
- **Transparent Steamer Tray:** A removable tray made of high-quality PP material, designed for steaming food.
- **Transparent Lid:** Allows for visual monitoring of the cooking process.
- **Control Knob:** Located on the front of the cooker, used to adjust the heat settings.
- **Power Cord:** Attached to the main body for electrical connection.
- **Measuring Cup:** Included for precise measurement of ingredients.

4. SETUP AND FIRST USE

Before using your multi cooker for the first time, follow these steps:

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Clean:** Wash the transparent lid, steamer tray, and the interior of the stainless steel inner pot with warm, soapy water. Rinse thoroughly and dry completely. The main cooker body should only be wiped with a damp cloth; do not immerse it in water.
3. **Placement:** Place the multi cooker on a flat, stable, and heat-resistant surface. Ensure there is adequate ventilation around the appliance.
4. **Assembly:** Place the clean stainless steel inner pot (which is integrated with the body) on the stable surface. If steaming, place the transparent steamer tray inside the inner pot, then cover with the

transparent lid.

5. **Power Connection:** Plug the power cord into a suitable electrical outlet.



Image 3: The Toyomi MC 606 Multi Cooker fully assembled with the steamer tray and lid in place, showing the attached power cord ready for use.

5. OPERATING INSTRUCTIONS

The Toyomi MC 606 offers simple operation for various cooking methods:

General Cooking (Boiling, Simmering):

1. Ensure the multi cooker is unplugged and clean.
2. Add desired ingredients and liquid (e.g., water for noodles, broth for soup) directly into the stainless steel inner pot. Do not overfill; ensure liquid level is below the MAX fill line.
3. Place the transparent lid on top of the cooker.
4. Plug the power cord into an electrical outlet.
5. Turn the control knob to your desired heat setting. The blue ringed light will illuminate, indicating the cooking process has started.
6. Monitor cooking through the transparent lid. Adjust heat as needed.
7. Once cooking is complete, turn the control knob to the "OFF" position and unplug the appliance.
8. Carefully remove the lid, being mindful of hot steam. Serve food immediately.

Steaming:

1. Ensure the multi cooker is unplugged and clean.
2. Pour an appropriate amount of water into the stainless steel inner pot (ensure it does not exceed the MAX fill line and is below the steamer tray).
3. Place the transparent steamer tray into the inner pot.
4. Arrange food items (e.g., eggs, vegetables) on the steamer tray.
5. Place the transparent lid on top of the cooker.
6. Plug the power cord into an electrical outlet.
7. Turn the control knob to a high heat setting to bring the water to a boil. The blue ringed light will illuminate.
8. Steam for the recommended time for your food.
9. Once steaming is complete, turn the control knob to the "OFF" position and unplug the appliance.
10. Carefully remove the lid and then the steamer tray, using heat-resistant gloves if necessary, to avoid hot steam.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your multi cooker:

1. **Always Unplug:** Before cleaning, ensure the appliance is unplugged from the power outlet and has completely cooled down.
2. **Inner Pot:** The 304 Stainless Steel inner pot is integrated. After use, empty any remaining food or liquid. Wash the interior with warm, soapy water and a non-abrasive sponge. Rinse thoroughly. For stubborn food residue, soak the pot in warm soapy water for a short period before cleaning.
3. **Steamer Tray and Lid:** These are removable and can be washed with warm, soapy water. Rinse well and dry.
4. **Exterior:** Wipe the exterior of the main cooker body with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the finish. Never immerse the main body in water.
5. **Storage:** Ensure all parts are completely dry before storing. Store the multi cooker in a clean, dry place.
6. **Descaling (Optional):** If mineral deposits build up in the inner pot over time, you can descale it by filling the pot with a solution of equal parts water and white vinegar. Heat the solution for 10-15 minutes, then unplug and let it cool. Scrub gently and rinse thoroughly.

7. TROUBLESHOOTING

If you encounter any issues with your Toyomi MC 606 Multi Cooker, refer to the following common problems and solutions:

- **Appliance does not turn on:**
 - Ensure the power cord is securely plugged into both the appliance and a working electrical outlet.
 - Check if the control knob is turned to an "ON" position.
 - Verify the electrical outlet is functional by testing it with another appliance.

- If the safety thermal protection has activated due to overheating, unplug the unit and allow it to cool completely before attempting to use it again.
- **Food is not cooking evenly or taking too long:**
 - Ensure the lid is properly seated to retain heat and steam.
 - Check that the control knob is set to an appropriate heat level for your cooking task.
 - Avoid overfilling the pot, as this can affect cooking efficiency.
- **Steam leakage from the lid:**
 - Ensure the lid is correctly positioned and seated firmly on the cooker.
 - Check if there is any food residue or debris preventing a proper seal.
- **Unusual odors during first use:**
 - A slight odor during the first few uses is normal as manufacturing oils burn off. Ensure good ventilation. If odors persist or are strong, discontinue use and contact support.

If the problem persists after attempting these solutions, please contact Toyomi customer support.

8. SPECIFICATIONS



Image 4: Front view of the Toyomi MC 606 Multi Cooker with key dimensions indicated in millimeters.

Brand	Toyomi
Model Number	MC 606
Capacity	1 Litre
Voltage	240 Volts

Wattage	715 Watts
Material	304 Stainless Steel (Inner Pot), High PP (Steamer Tray)
Product Dimensions	24L x 20W x 25H centimetres (approx. 24 x 20 x 25 cm)
Item Weight	1.12 kg
Power Source Type	Electric
Colour	White



Image 5: The Toyomi MC 606 Multi Cooker shown next to a person's torso, illustrating its compact size and portability.

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Toyomi website. If you require technical assistance, have questions about operation, or need to report a fault, please contact Toyomi customer support. Keep your purchase receipt as proof of purchase for warranty claims.

Toyomi Customer Support: Please refer to the contact details provided in your product packaging or on the official Toyomi website.

