

[Manuals.plus](#) /

› [i-Life](#) /

› i-Life ZED AIR Laptop User Manual

i-Life IL.1401.4128GB.GWAEB

i-Life ZED AIR Laptop User Manual

Model: IL.1401.4128GB.GWAEB

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your i-Life ZED AIR Laptop. Please read this manual carefully before using your device to ensure optimal performance and longevity.



Figure 1: Front view of the i-Life ZED AIR Laptop, showcasing its 14-inch Full HD display with the Windows 10 operating system interface.

SETUP

1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Verify that the following items are included:

- i-Life ZED AIR Laptop
- Power Adapter
- User Manual (this document)

Inspect the laptop for any physical damage. If any damage is found, contact customer support immediately.

2. Connecting to Power

1. Connect the power adapter to the DC-in port on the side of the laptop.
2. Plug the other end of the power adapter into a wall outlet.
3. The battery indicator light will illuminate, indicating that the laptop is charging.



Figure 2: Side profile of the i-Life ZED AIR Laptop, highlighting the various connectivity ports, including the power input.

3. First Boot and Windows Setup

Press the power button located on the keyboard to turn on the laptop. The laptop comes with Windows 10 Pro pre-installed. Follow the on-screen instructions to complete the initial Windows setup, which includes:

- Selecting your region and language.
- Connecting to a Wi-Fi network.
- Accepting the license agreement.
- Creating a user account.

OPERATING THE LAPTOP

1. Keyboard and Touchpad

The i-Life ZED AIR features a full-sized keyboard and a responsive touchpad for navigation. Familiarize yourself with the layout and common keyboard shortcuts.

- **Touchpad Gestures:**
 - *Single Tap*: Left-click.
 - *Two-finger Tap*: Right-click.
 - *Two-finger Scroll*: Scroll up or down.
 - *Pinch-to-Zoom*: Zoom in or out.



Figure 3: Close-up view of the i-Life ZED AIR Laptop's keyboard and integrated touchpad, designed for comfortable typing and precise navigation.

2. Connectivity

Your laptop offers various connectivity options:

- **Wi-Fi:** Connect to wireless networks for internet access. Go to *Settings > Network & Internet > Wi-Fi* to manage connections.
- **Bluetooth:** Pair with Bluetooth-enabled devices like headphones or speakers. Access via *Settings > Devices > Bluetooth & other devices*.
- **USB 3.0 Ports:** Three USB 3.0 ports are available for connecting peripherals such as external hard drives, mice, or keyboards.
- **Type-C Data Port:** A versatile Type-C port for data transfer.
- **HDMI Port:** Connect to external displays or projectors.
- **MicroSD Card Slot:** Expand storage or transfer files from memory cards.

3. Display and Audio

The laptop features a 14-inch Full HD (1920 x 1080 pixels) IPS screen, providing clear and vibrant visuals. Audio output is available through the integrated speakers or via the headphone jack.

MAINTENANCE

1. Cleaning the Laptop

- Use a soft, lint-free cloth slightly dampened with water or a screen cleaner to clean the display.
- For the keyboard and chassis, use a soft, dry cloth. Avoid abrasive materials or harsh chemicals.
- Periodically use compressed air to clear dust from vents and ports.

2. Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- Store the laptop in a cool, dry place when not in use for extended periods.
- The laptop uses 2 Lithium Ion batteries.

3. Software Updates

Regularly update your Windows 10 operating system and drivers to ensure security and optimal performance. Go to *Settings > Update & Security > Windows Update* to check for updates.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Laptop does not power on.	Battery is drained or power adapter is not connected properly.	Ensure the power adapter is securely connected to both the laptop and a working power outlet. Allow the battery to charge for at least 30 minutes before attempting to power on again.
No display on screen.	Screen brightness is too low or external display is connected.	Press the brightness up function key (usually F5 or F6). Disconnect any external monitors. If the issue persists, try restarting the laptop.
Wi-Fi connection issues.	Wi-Fi adapter is off or router issue.	Check if Wi-Fi is enabled in Windows settings. Restart your Wi-Fi router. Ensure you are within range of the Wi-Fi signal.
Slow performance.	Too many applications running or low storage space.	Close unnecessary applications. Check available storage space (128 GB SSD) and free up space if needed. Run Windows Update.

SPECIFICATIONS

Feature	Detail
Brand	i-Life
Model Name	ZED AIR
Item Model Number	IL.1401.4128GB.GWAEB
Product Dimensions	33 x 22.3 x 2.1 cm
Item Weight	1.36 Kilograms
Color	Black

Feature	Detail
Form Factor	Small Form Factor
Screen Size	14 Inches
Screen Resolution	1920 x 1080 pixels (Full HD)
Processor Brand	Intel
Processor Type	Celeron N3350
Processor Speed	2.4 GHz
Processor Count	2
RAM Size	4 GB (LPDDR III)
Hard Drive Size	128 GB SSD
Graphics Coprocessor	Intel HD Graphics 500
Graphics Card RAM Size	1 GB
Connectivity Type	Bluetooth, Wi-Fi (802.11bgn)
USB Ports	3 x USB 3.0, 1 x Type-C Data
HDMI Ports	1
Operating System	Windows 10 Pro
Average Battery Life	8 Hours
Batteries	2 Lithium Ion batteries (included)

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official i-Life website. For technical support, driver downloads, and frequently asked questions, please visit the i-Life support portal or contact their customer service directly.

Note: Specific warranty terms and support contact details may vary by region.

© 2024 i-Life. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question